SHARP SERVICE MANUAL

S40Y525N-M100

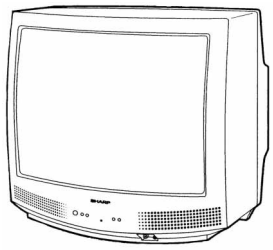

25N-M100/180
CN25M10

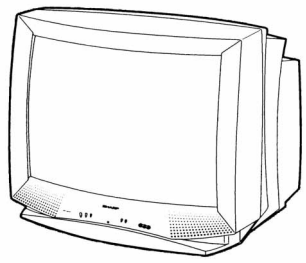

25N-S100/180
CN25S18/20

COLOR TELEVISION

Chassis No. SN-91

MODELS 25N-M100/180, 25N-S100/180 CN25M10, CN25S18, CN25S20

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

CONTENTS

Page

- ELECTRICAL SPECIFICATIONS 1
- IMPORTANT SERVICE SAFETY PRECAUTION 2
- LOCATION OF USER'S CONTROL 6
- INSTALLATION AND SERVICE INSTRUCTIONS 9
- CHASSIS LAYOUT 15
- BLOCK DIAGRAM 17
- SCHEMATIC DIAGRAMS 21
- PRINTED WIRING BOARD ASSEMBLIES 45
- REPLACEMENT PARTS LIST 49
- PACKING OF THE SET 59

ELECTRICAL SPECIFICATIONS

POWER INPUT ..... 120 V AC 60 Hz
POWER RATING
  25N-M100/180, CN25M10 ..... 105 W
  25N-S100/180, CN25S18/20 ..... 110 W
PICTURE SIZE ..... 2,032cm^2 (315sq inch)
CONVERGENCE ..... Magnetic
SWEEP DEFLECTION ..... Magnetic
FOCUS ..... Hi-Bi-Potential Electrostatic
INTERMEDIATE FREQUENCIES
  Picture IF Carrier Frequency ..... 45.75 MHz
  Sound IF Carrier Frequency ..... 41.25 MHz
  Color Sub-Carrier Frequency ..... 42.17 MHz (Nominal)
AUDIO POWER
  25N-M100/180, CN25M10 ..... 1.3W (at 10% distortion and Dual CH Operate)
  25N-S100/180, CN25S18/20 .. 1.3W+1.3W (at 10% distortion and Dual CH Operate)
SPEAKER
  SIZE ..... 8 cm (Round)
  VOICE COIL IMPEDANCE ..... 32 ohm at 400 Hz
ANTENNA INPUT IMPEDANCE
  VHF/UHF ..... 75 ohm Unbalanced
TUNING RANGES
  VHF-Channels ..... 2 thru 13
  UHF-Channels ..... 14 thru 69
  CATV Channels ..... 1 thru 125 (EIA, Channel Plan U.S.A.)

Specifications are subject to change without prior notice.

SHARP CORPORATION

This document has been published to be used for after sales service only.
The contents are subject to change without notice.

IMPORTANT SERVICE SAFETY PRECAUTION

■ **Service work should be performed only by qualified service technicians who are thoroughly familiar with all safety checks and the servicing guidelines which follow:**

WARNING

1. For continued safety, no modification of any circuit should be attempted.
2. Disconnect AC power before servicing.
3. Semiconductor heat sinks are potential shock hazards when the chassis is operating.
4. The chassis in this receiver has two ground systems which are separated by insulating material. The non-isolated (hot) ground system is for the B+ voltage regulator circuit and the horizontal output circuit. The isolated ground system is for the low B+ DC voltages and the secondary circuit of the high voltage transformer.
   To prevent electrical shock use an isolation transformer between the line cord and power receptacle, when servicing this chassis.

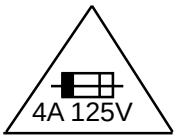

CAUTION: FOR CONTINUED PROTECTION AGAINST A RISK OF FIRE, REPLACE ONLY WITH SAME TYPE 4A-125V FUSE.

SERVICING OF HIGH VOLTAGE SYSTEM AND PICTURE TUBE

When servicing the high voltage system, remove the static charge by connecting a 10k ohm resistor in series with an insulated wire (such as a test probe) between the picture tube ground and the anode lead. (AC line cord should be disconnected from AC outlet.)

1. Picture tube in this receiver employs integral implosion protection.
2. Replace with tube of the same type number for continued safety.
3. Do not lift picture tube by the neck.
4. Handle the picture tube only when wearing shatterproof goggles and after discharging the high voltage anode completely.

X-RADIATION AND HIGH VOLTAGE LIMITS

1. Be sure all service personnel are aware of the procedures and instructions covering X-radiation. The only potential source of X-ray in current solid state TV receivers is the picture tube. However, the picture tube does not emit measurable X-Ray radiation, if the high voltage is as specified in the "High Voltage Check" instructions.
   It is only when high voltage is excessive that X-radiation is capable of penetrating the shell of the picture tube including the lead in the glass material. The important precaution is to keep the high voltage below the maximum level specified.
2. It is essential that servicemen have available at all times an accurate high voltage meter.
   The calibration of this meter should be checked periodically.
3. High voltage should always be kept at the rated value –no higher. Operation at higher voltages may cause a failure of the picture tube or high voltage circuitry and;also, under certain conditions, may produce radiation in exceeding of desirable levels.
4. When the high voltage regulator is operating properly there is no possibility of an X-radiation problem. Every time a color chassis is serviced, the brightness should be tested while monitoring the high voltage with a meter to be certain that the high voltage does not exceed the specified value and that it is regulating correctly.
5. Do not use a picture tube other than that specified or make unrecommended circuit modifications to the high voltage circuitry.
6. When trouble shooting and taking test measurements on a receiver with excessive high voltage, avoid being unnecessarily close to the receiver.
   Do not operate the receiver longer than is necessary to locate the cause of excessive voltage.

IMPORTANT SERVICE SAFETY PRECAUTION

(Continued)

BEFORE RETURNING THE RECEIVER

(Fire & Shock Hazard)

Before returning the receiver to the user, perform the following safety checks.

1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the receiver.
2. Inspect all protective devices such as non-metallic control knobs, insulating materials, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacity networks, mechanical insulators and etc.
3. To be sure that no shock hazard exists, check for leakage current in the following manner.

- Plug the AC cord directly into a 120 volt AC outlet, (Do not use an isolation transformer for this test).
- Using two clip leads, connect a 1.5k ohm, 10 watt resistor paralleled by a 0.15µF capacitor in series with all exposed metal cabinet parts and a known earth ground, such as electrical conduit or electrical ground connected to earth ground.
- Use an AC voltmeter having with 5000 ohm per volt, or higher, sensitivity to measure the AC voltage drop across the resistor.
- Connect the resistor connection to all exposed metal parts having a return to the chassis (antenna, metal cabinet, screw heads, knobs and control shafts, escutcheon and etc.) and measure the AC voltage drop across the resistor.
  AII checks must be repeated with the AC line cord plug connection reversed. (If necessary, a non-polarized adapter plug must be used only for the purpose of completing these check.)
  Any current measured must not exceed 0.5 milliamp. Any measurements not within the limits outlined above indicate of a potential shock hazard and corrective action must be taken before returning the instrument to the customer.

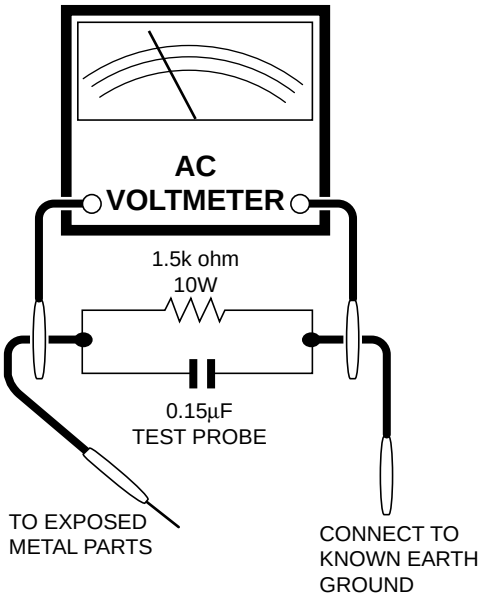

SAFETY NOTICE

Many electrical and mechanical parts in television receivers have special safety-related characteristics. These characteristics are often not evident from visual inspection, nor can protection afforded by them be necessarily increased by using replacement components rated for higher voltage, wattage, etc.
Replacement parts which have these special safety characteristics are identified in this manual; electrical components having such features are identified by "⚠" and shaded areas in the Replacement Parts Lists and Schematic Diagrams.

For continued protection, replacement parts must be identical to those used in the original circuit. The use of substitute replacement parts which do not have the same safety characteristics as the factory recommended replacement parts shown in this service manual, may create shock, fire, X-radiation or other hazards.

PRECAUTIONS A PRENDRE LORS DE LA REPARATION

■ **Ne peut effectuer la réparation qu' un technicien spécialisé qui s'est parfaitement accoutumé à toute vérification de sécurité et aux conseils suivants.**

AVERTISSEMENT

1. N'entreprendre aucune modification de tout circuit. C'est dangereux.
2. Débrancher le récepteur avant toute réparation.
3. Les déversoirs thermiques à semi-conducteurs peuvent présenter un danger de choc électrique lorsque le réceqteur est en marche.
4. Le châssis de ce récepteur possède deux systèmes de masse qui sont séparées par du matériel d'isolation. Le système de masse non-isolée (sous tension) est pour le circuit du régulateur de tension B+ et le circuit de sortie horizontale. Le système de masse isolée est pour les tensions DC B+ basses et le circuit secondaire du transformateur haute tension. Pour éviter tout risque d'électrocution lors de l'entretien de ce châssis, utiliser un transformateur d'isolation entre le cordon de ligne et la prise de courant.

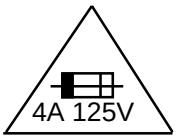

PRECAUTION: POUR LA PROTECTION CONTINUE CONTRE LES RISQUES D'INCENDIE, REMPLACER LE FUSIBLE PAR UN FUSIBLE DE MEME TYPE 4A-125V.

REPARATION DU SYSTEME A HAUTE TENSION ET DU TUBE-IMAGE

Lors de la réparation de ce systéme, supprimer la charge statique en branchant une résistance de 10 kΩ en série avec un fil isolé (comme une sonde d'essai) entre la mise à la terre du tube-image et le fil d'anodel. (Le corden d'alimentation doit être retiré de la prise murale.)

1. Le tube image dans ce récepteur emploie une protection intégrée contre l'implosion.
2. Par mesure de sécurité, changer le tube-image pour un tube du même numéro de type.
3. Ne pas lever le tube-image par son col.
4. Ne manipuler le tube-image qu'en porant des lunettes incassables et qu'après avoir déchargé totalement la haute tension.

LIMITES DES RADIATIONS X ET DE LA HAUTE TENSION

1. Tout le personnel réparateur doit être instruit des instructions et procédés relatifs aux radiations X.
   Le tube-image, seule source de rayons X dons les téleviseurs transistorisés, n'émet pourtant pas de rayons mesurables si la haute tension est maintenue à un niveau préconisé dans la section "Vérification de la haute tension".
   C'est seulement quand la haute tension est excessive que les rayons X peuvent entrer dans l'enveloppe du tube-image y compris le conducteur de verre. Il est important de maintenir la haute tension en-dessous du niveau spécifié.
2. Il est essentiel que le réparateur ait sous la main un voltmètre à haute tension qui doit être périodiquement étalonné.
3. La haute tension doit toujours être maintenue à la valeur de régime -et pas plus haute. L'opération à des tensions plus élevées peut entraîner une panne du tube-image ou du circuit à haute tension et, dans certaines conditions, peut entraîner une radiation dépassant les niveaux préscrits.
4. Quand le régulateur à haute tension fonctionne correctement, il n'y a aucun problème de radiation X. Chaque fois qu'un châssis couleurs est réparé, la luminosité doit être examinée bout en contrôlant la haute tension à l'aide d'un voltmètre pour s'assurer que la haute tension ne dépasse pas la valeur spécifiée et qu'elle soit correctement réglée.
5. Ne pas utiliser un tube-image autre que celui spécifié et ne pas effectuer de modifications déconseillées du circuit à haute tension.
6. Lors de la recherche des pannes et des mesures d'essai sur un récepteur qui présente une haute tension excessive, éviter de s'approcher inutilement du récepteur.
   Ne pas faire fonctionner le récepteur plus longtemps que nécessaire pour localiser la cause de la tension excessive.

PRECAUTIONS A PRENDRE LORS DE LA REPARATION
(Suite)

VERIFICATIONS CONTRE L'INCEN-DIE ET LE CHOC ELECTRIQUE

Avant de rendre le récepteur à l'utilisateur, effectuer les vérifications suivantes.

1. Inspecter tous les faisceaux de câbles pour s'assurer que les fils ne soient pas pincés ou qu'un outil ne soit pas placé entre le châssis et les autres pièces métalliques du récepteur.
2. Inspecter tous les dispositifs de protection comme les boutons de commande non-métalliques, les isolants, le dos du coffret, les couvercles ou blindages de réglage et de compartiment, les réseaux de résistance-capacité, les isolateurs mécaniques, etc.
3. S'assurer qu'il n'y ait pas de danger d'électrocution en vérifiant la fuite de courant, de la facon suivante:

- Brancher le cordon d'alimentation directem-ent à une prise de courant de 120V. (Ne pas utiliser de transformateur d'isolation pour cet essai).
- A l'aide de deux fils à pinces, brancher une résistance de 1.5 kΩ 10 watts en parallèle avec un condensateur de 0.15µF en série avec toutes les pièces métalliques exposées du coffret et une terre connue comme une conduite électrique ou une prise de terre branchée à la terre.
- Utiliser un voltmètre CA d'une sensibilité d'au moins 5000Ω/V pour mesurer la chute de tension en travers de la résistance.
- Toucher avec la sonde d'essai les pièces métalliques exposées qui présentent une voie de retour au châssis (antenne, coffret métallique, tête des vis, arbres de commande et des boutons, écusson, etc.) et mesurer la chute de tension CA en-travers de la résistance. Toutes les vérifications doivent être refaites après avoir inversé la fiche du cordon d'alimentation. (Si nécessaire, une prise d'adpatation non polarisée peut être utilisée dans le but de terminer ces vérifications.)
  Tous les courants mesurés ne doivent pas dépasser 0.5 mA.
  Dans le cas contraire, il y a une possibilité de choc électrique qui doit être supprimée avant de rendre le récepteur au client.

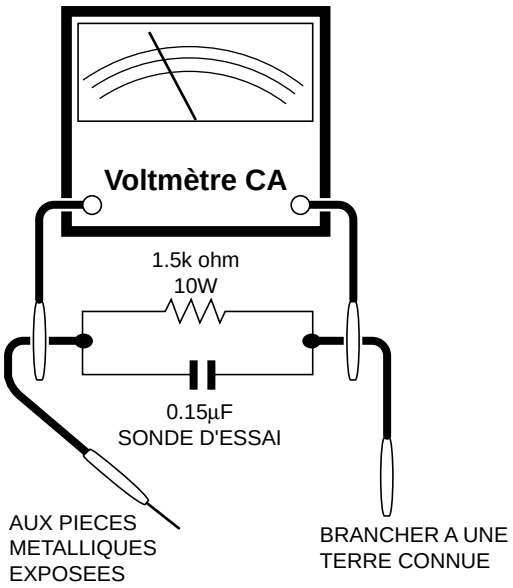

AVIS POUR LA SECURITE

De nombreuses pièces, électriques et mécaniques, dans les téléviseurs présentent des caractéristiques spéciales relatives à la sécurité, qui ne sont souvent pas évidentes à vue. Le degré de protection ne peut pas être nécessairement augmentée en utilisant des pièces de remplacement étalonnées pour haute tension, puissance, etc.
Les pièces de remplacement qui présentent ces caractéristiques sont identifiées dans ce manuel; les pièces électriques qui présentent ces particularités sont identifiées par la marque " ⚠ " et hachurées dans la liste des pièces de remplacement et les diagrammes schématiques.
Pour assurer la protection, ces pièces doivent être identiques à celles utilisées dans le circuit d'origine. L'utilisation de pièces qui n'ont pas les mêmes caractéristiques que les pièces recommandées par l'usine, indiquées dans ce manuel, peut provoquer des électrocutions, incendies, radiations X ou autres accidents.

LOCATION OF USER'S CONTROL
(25N-M100, CN25M10)

Front Panel

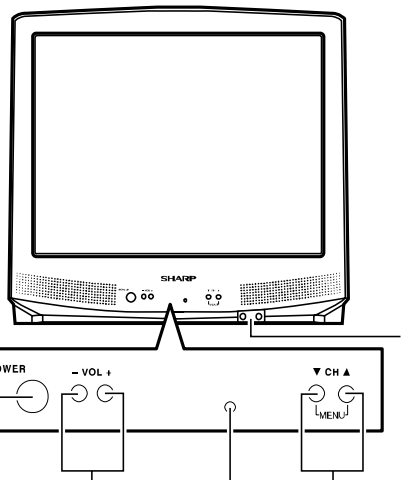

VIDEO/AUDIO IN TERMINALS

POWER
Press → On.
Press again → Off.

VOLUME UP/DOWN
(+) Increases sound.
(–) Decreases sound.

SENSOR AREA FOR REMOTE CONTROL

CHANNEL UP/DOWN
(▲) Selects next higher channel.
(▼) Selects next lower channel.
• Press both at same time to access MAIN MENU screen.

Basic Remote Control Functions

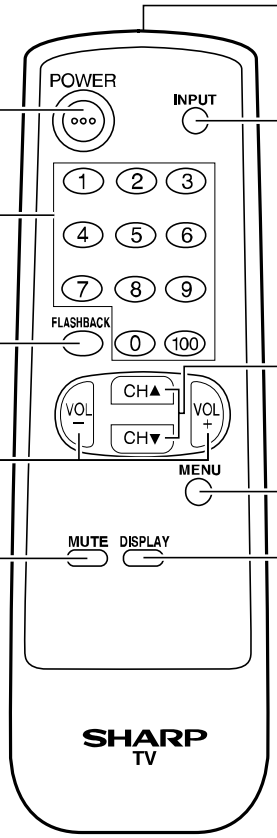

Infrared Transmitter Window

POWER
Press → On.
Press again → Off.

INPUT
Press → Switch to external video input mode.
Press again → Switch to TV mode.

REMOTE KEYPAD
Accesses any channel from keypad.

FLASHBACK
Returns to previous channel.

VOLUME UP/DOWN
(+) Increases sound.
(–) Decreases sound.
• In menu mode, changes or selects the TV adjustments.

CHANNEL UP/DOWN
(▲) Selects next higher channel.
(▼) Selects next lower channel.
• Moves the " ⬍ " mark of the MENU screen.

MUTE
Press → Mutes sound.
Press again → Restores sound.
• CLOSED CAPTION appears when sound is muted.

MENU
Press → Accesses MAIN MENU.
Press again → Exits MAIN MENU.

DISPLAY
Press → Displays receiving channel for four seconds.
Press again → Removes display.
• Temporarily displays receiving channel when in Closed Caption mode.

LOCATION OF USER'S CONTROL (Continued)
(25N-M180)

Front Panel

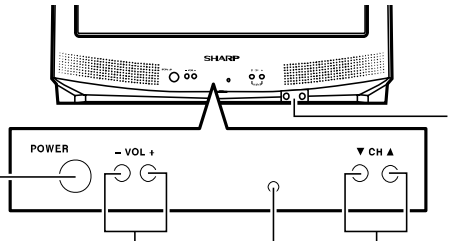

POWER
Press → On.
Press again → Off.

VIDEO/AUDIO IN TERMINALS

VOLUME UP/DOWN
(+) Increases sound.
(–) Decreases sound.

SENSOR AREA FOR REMOTE CONTROL

CHANNEL UP/DOWN
(▲) Selects next higher channel.
(▼) Selects next lower channel.

Basic Remote Control Functions

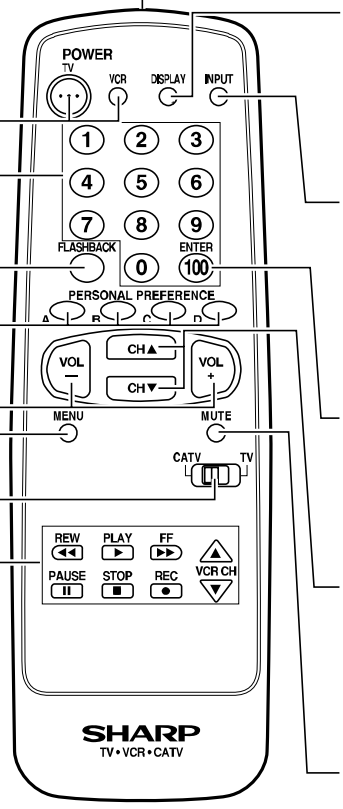

Infrared Transmitter Window

DISPLAY
Press → Displays receiving channel for 4 seconds.
Press again → Removes display.
• Temporarily displays receiving channel when in Closed Caption mode.

INPUT
Press → Switch to external video INPUT 1 mode.
Press again → Switch to external video INPUT 2 mode.
Press 3 times → Switch back to the original TV mode.

POWER
Press → On.
Press again → Off.

REMOTE KEYPAD
Accesses any channel from keypad.

FLASHBACK
Returns to previous channel.

PERSONAL PREFERENCE
With the Personal Preference buttons, you can program your favorite programs by using the four categories A, B, C and D. The channels can be accessed quickly by using these buttons.

VOLUME UP/DOWN
(+) Increases sound.
(–) Decreases sound.
• In menu mode, changes or selects the TV adjustments.

MENU
Press → Accesses MAIN MENU.
Press again → Exits MAIN MENU.

TV-CATV MODE SELECT SWITCH
In TV position, sends power and channel select commands (Channel up/down and Random Access buttons) to the TV.
In CATV position, sends power and channel select commands to a cable TV converter.

VCR CONTROL

ENTER
Used in some instances where a VCR or Cable Converter Box requires an "enter" command after selecting channels, when using the REMOTE KEYPAD button.

CHANNEL UP/DOWN
(▲) Selects next higher channel.
(▼) Selects next lower channel.
• Moves the " ⬍ " mark of the MENU screens.

MUTE
Press → Mutes sound.
Press again → Restores sound.
• CLOSED CAPTION appears when sound is muted.

NOTE:

- The above shaded buttons on the Remote Control glow in the dark. To use the glow-in-the-dark display on the remote control, place it under a fluorescent light or other lighting.
- The phosphorescent material contains no radioactive or toxic material, so it is safe to use.
- The degree of illumination will vary depending on the strength of lighting used.
- The degree of illumination will decrease with time and depending on the temperature.
- The time needed to charge the phosphorescent display will vary depending on the surrounding lighting.
- Sunlight and fluorescent lighting are the most effective when charging the display.

LOCATION OF USER'S CONTROL (Continued)
(25N-S100/180, CN25S18/20)

Front Panel

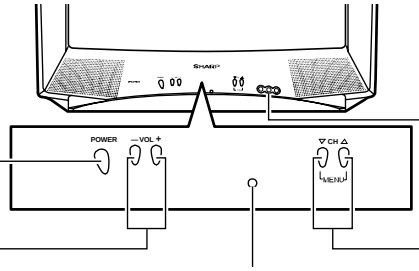

POWER
Press → On.
Press again → Off.

VOLUME UP/DOWN
(+) Increases sound.
(–) Decreases sound.

SENSOR AREA FOR REMOTE CONTROL

VIDEO/AUDIO IN 2 TERMINALS
(VIDEO/AUDIO terminals are also provided on the rear.)

CHANNEL UP/DOWN
(▲) Selects next higher channel.
(▼) Selects next lower channel.
• Press both at same time to access MAIN MENU Screen.

Basic Remote Control Functions

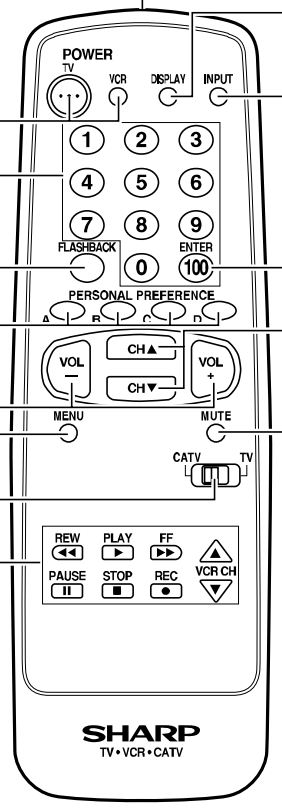

POWER
Press → On.
Press again → Off.

REMOTE KEYPAD
Accesses any channel from keypad.

FLASHBACK
Returns to previous channel.

PERSONAL PREFERENCE
With the Personal Preference buttons, you can program your favorite programs by using the four categories A, B, C and D. The channels can be accessed quickly by using these buttons.

VOLUME UP/DOWN
(+) Increases sound.
(–) Decreases sound.
• In menu mode, changes or selects the TV adjustments.

MENU
Press → Accesses MAIN MENU.
Press again → Exits MAIN MENU.

TV-CATV MODE SELECT SWITCH
In TV position, sends power and channel select commands (Channel up/down and Random Access buttons) to the TV.
In CATV position, sends power and channel select commands to a cable TV converter.

VCR CONTROL

Infrared Transmitter Window

DISPLAY
Press → Displays receiving channel for four seconds.
Press again → Removes display.
• Temporarily displays receiving channel when in Closed Caption mode.

INPUT
Press → Switch to external video INPUT 1 mode.
Press again → Switch to external video INPUT 2 mode.
Press three times → Switch back to the original TV mode.

ENTER
Used in some instances where a VCR or Cable Converter Box requires an "enter" command after selecting channels, when using the REMOTE KEYPAD button.

CHANNEL UP/DOWN
(▲) Selects next higher channel.
(▼) Selects next lower channel.
• Moves the " ⬍ " mark of the MENU screens.

MUTE
Press → Mutes sound.
Press again → Restores sound.
• CLOSED CAPTION appears when sound is muted.

NOTE:

- The above shaded buttons on the Remote Control glow in the dark. To use the glow-in-the-dark display on the remote control, place it under a fluorescent light or other lighting.
- The phosphorescent material contains no radioactive or toxic material, so it is safe to use.
- The degree of illumination will vary depending on the strength of lighting used.
- The degree of illumination will decrease with time and depending on the temperature.
- The time needed to charge the phosphorescent display will vary depending on the surrounding lighting.
- Sunlight and fluorescent lighting are the most effective when charging the display.

INSTALLATION AND SERVICE INSTRUCTIONS

Note: (1) When performing any adjustments to resistor controls and transformers use non-metallic screwdrivers or TV alignment tools.
(2) Before performing adjustments, the TV set must be on at least 15 minutes.

CIRCUIT PROTECTION

The receiver is protected by a 4.0A fuse (F701), mounted on PWB-A, wired into one side of the AC line input.

X-RADIATION PROTECTOR CIRCUIT TEST

After service has been performed on the horizontal deflection system, high voltage system, B+ system, test the X-Radiation protection circuit to ascertain proper operation as follows:

1. Apply 120V AC using a variac transformer for accurate input voltage.
2. Allow for warm up and adjust all customer controls for normal picture and sound.
3. Receive a good local channel.
4. Connect a digital voltmeter to TP653 and make sure that the voltmeter reads 11.2 ±0.6V.
5. Apply external 13.8V DC at TP653 by using an external DC supply, TV must shut off.
6. To reset the protector, unplug the AC cord and make a short circuit between TP651 and TP652. Now make sure that normal picture appears on the screen.
7. If the operation of the horizontal oscillator does not stop in step 5, the circuit must be repaired before the set is returned to the customer.

HIGH VOLTAGE CHECK

High voltage is not adjustable but must be checked to verify that the receiver is operating within safe and efficient design limitations as specified checks should be as follows:

1. Connect an accurate high voltage meter between ground and anode of picture tube.
2. Operate receiver for at least 15 minutes at 120V AC line voltage, with a strong air signal or a properly tuned in test signal.
3. Enter the service mode and select the service adjustment "S19" and Bus data "01" (Y-mute on).
4. The voltage should be approximately, 28.7kV (at zero beam).
   If a correct reading cannot be obtained, check circuitry for malfunctioning components. After the voltage test, make Y-mute off to the normal mode.

For adjustments of this model, the bus data is converted to various analog signals by the D/A converter circuit.

Note: There are still a few analog adjustments in this series such as focus and master screen voltage. Follow the steps below whenever the service adjustment is required. See "Table-B" to determine, if service adjustments are required.

1. Service mode

Before putting unit into the service mode, check that customer adjustments are in the normal mode. Use the reset function in the video adjustment menu to ensure customer controls are in their proper (reset) position.

2. Service number selection

Once in the service mode, press the Ch-up or Ch-down button on the remote controller or at the set. The service adjustment number will vary in increments of one, from "S01" to "OP2" (25N-M100/180, CN25M10), "S01" to "M05"(25N-S100/180, CN25S18/20).
Select the item you wish to adjust.

3. Data number selection

Press the Vol-up or down button to adjust the data number.

To enter the service mode and exit service mode.

While pressing the Vol-up and Ch-up buttons at the sametime, plug the AC cord into a wall socket.
Now the TV set is switched on and enters the service mode.
To exit the service mode, turn the television off by pressing the power button.

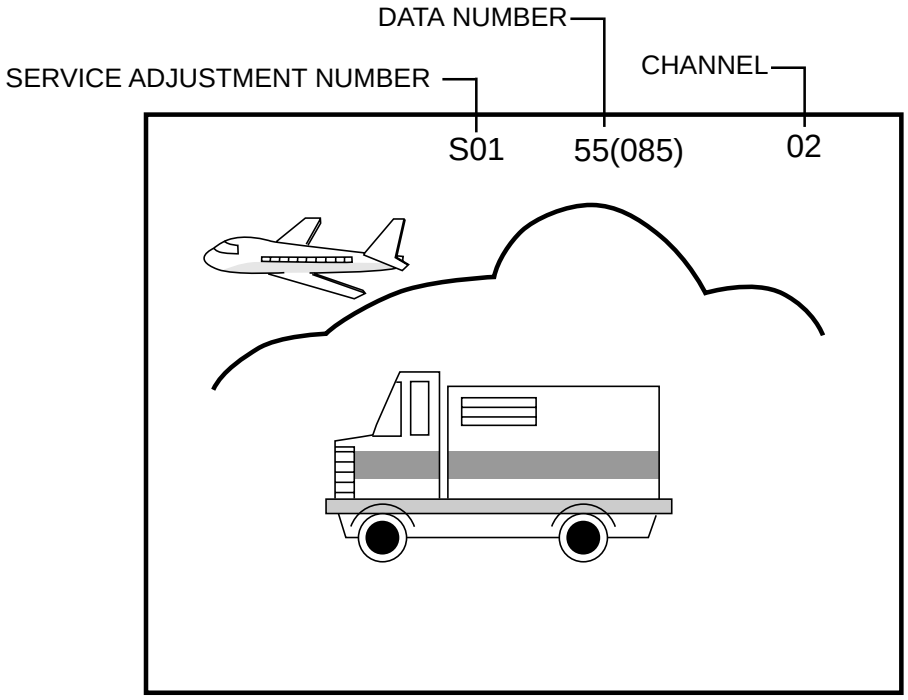

Figure A.

SERVICE NUMBER	ADJUSTMENT ITEM	DATA		ADJUSTMENT CONTENTS
		INITIAL VALUE	RANGE	
S01	PICTURE	55	00-7F	
S02	TINT	46	00-7F	
S03	COLOR	32	00-7F	
S04	BRIGHTNESS	40	00-7F	
S05	SHARPNESS	24	00-3F	Must be set to "28"
S06	VERTICAL PHASE	00	00-07	Must be set to "00"
S07	HORIZONTAL PHASE	12	00-1F	
S08	RF-AGC	23	00-3F	
S09	VERTICAL AMP	20	00-3F	
S10	VCO	2C	00-7F	
S11	R CUT-OFF	00	00-FF	
S12	G CUT -OFF	00	00-FF	
S13	B CUT-OFF	00	00-FF	
S14	G GAIN	7F	00-FF	
S15	B GAIN	7F	00-FF	
S16	TRAP(3.58MHz)	00	00 or 01	Must be set to "00"
S17	BALANCE	20	00-3F	Must be set to "20"
S18	C.C.POSITION	17	00-7F	
S19	Y-MUTE	00	00,01,03	00= NORMAL, 01= No Y, 03= No VERTICAL
S20	ENERGY SAVE OFFSET	20	00-3F	Must be set to "23"
S21	D.D.E. OFFSET	03	00-1F	Must be set to "03"
S22	OSD SETUP	00	00-03	Must be set to "00"
S23	TUNER SETUP	00	00,01	Must be set to "00"
OP1	OPTION 1 (Set to each mode)	00	00-FF	"B0"=25N-M100, "B3"=25N-M180, "B3"=25N-S100, "B7"=25N-S180, "A0"=CN25M10, "A7"=CN25S18, "A7"=CN25S20
OP2	OPTION 2	00	00-FF	"04"=25N-M100, "04"=25N-M180, "A7"=25N-S100, "A7"=25N-S180, "04"=CN25M10, "07"=CN25S18, "A7"=CN25S20
M01	MTS LEVEL	0A	00-0F	Only for Models 25N-S100/180, CN25S18/20
M02	STEREO-VCO	20	00-3F	
M03	FILTER	1C	00-3F	
M04	LOW SEPARATION	20	00-3F	
M05	HIGH SEPARATION	1B	00-3F	

Table - A

Holding down both the Vol-up/CH-down buttons on the TV set at service mode for more than 2 seconds will automatically write the above initial values into IC2101.

PART REPLACED	ADJUSTMENT		NOTES
	NECESSARY	UNNECESSARY	
IC2001		X	Data is stored in IC2101.
IC201	X		The adjustment is needed to compensate for characteristics of parts including IC201 and MTS level (M01).
IC2101	X		Holding down both the Vol-up/CH-down buttons on the TV set in the service mode for more than 2 seconds will automatically write the above initial values into IC2101. Then perform a complete adjustment.
CRT	X		Adjust items related to picture tube only.
IC3001 (25N-S100/180, CN25S18)	X		Adjust items related to MTS only (M01~M05).

Table - B

■ SERVICE ADJUSTMENT

VCO Adjustment

1. Connect a digital voltmeter between pin (44) of IC201 and ground.
2. Receive a good local channel.
3. Enter the service mode and select the service adjustment "S10".
4. Adjust the data so that digital voltmeter reads 2.2V.
5. Adjustment is completed, remove the voltmeter, return to "normal" mode.

RF AGC Adjustment

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S08".
3. Set the data value to point where no noise or beat appears.
4. Select another channel to confirm that no noise or beat appears.

Note 1 : You will have to come out of the service mode to select another channel.

Note 2 : Setting the data to "00" will produce a black raster.

Screen Adjustment

1. Connect a oscilloscope between TP854 and GND on the CRT Unit.
2. Receive a good local channel.
3. Enter the service mode and select the service adjustment "S03" and set the data value to "00" to set the color level to minimum. (Record original data code under adjustment "S03" before changing) You may skip this step, if you selected a B/W picture or monoscope pattern.
4. Select the service adjustment "S19" and adjust the data value to "01", this turn off the luminance signal (Y-mute).
5. Select the service adjustment "S04" and adjust data value to obtain 2.35 volts on the oscilloscope screen.

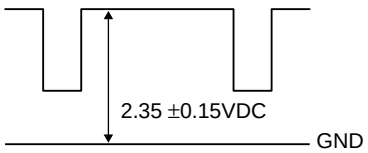

Figure B.

6. Adjust the master screen control until the raster darkens to the point where raster is barely seen.
7. Adjust the service adjustments "S11" red, "S12" green and "S13" blue to obtain a good grey scale with normal whites at low brightness level.
8. Select the service adjustment "S19" and reset data to "00". Select the service adjustment "S03" and reset data to obtain normal color level.
9. Remove oscilloscope, and reset the master screen control to obtain normal brightness range.

White Balance Adjustment

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S03" and set to "00" (minimum color)(Record original data code under adjustment "S03" before changing). "S03" does not have to be adjusted, if you selected a B/W picture or monoscope pattern.
3. Alternately adjust service adjustment data of "S14" and "S15" until a good grey scale with normal whites is obtained.
4. Select the service adjustment "S03" and adjust data to obtain normal color level.

Sub-Picture Adjustment

1. Receive a good local channel.
2. Make sure the customer picture control is set to maximum.
3. Enter the service mode and select the service adjustment "S01".
4. Adjust the data value to achieve normal contrast range.

Sub-Tint Adjustment

1. Receive a good local channel.
2. Set customer tint control to center of it's range.
3. Enter the service mode and select the service adjustment "S02".
4. Adjust "S02" data value to obtain normal flesh tones.

Sub-Color Adjustment

1. Receive a good local channel.
2. Make sure the customer color control is set to center position .
3. Enter the service mode and select service adjustment "S03".
4. Adjust "S03" data value to obtain normal color level.

Sub-Brightness Adjustment

1. Receive a good local channel.
2. Make sure the customer brightness control is set to center position.
3. Enter the service mode and select the service adjustment "S04".
4. Adjust "S04" data value to obtain normal brightness level.

Vertical-Size Adjustments

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S09".
3. While observing the top and bottom of the screen, adjust "S09" data value to proper vertical size.

Vertical Phase Adjustment

1. Enter the service mode and select the service adjustment "S06".
2. Adjust data value to "00".

Note: This must be set "00" when changed data retrace line will appear.

Horizontal Position Adjustment

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S07".
3. Adjust "S07" data value so that picture is centered.

Caption Position Adjustment (Horizontal)

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S18".
3. A black text box appears on the screen. (see **Figure C** below)
4. Adjust "S18" data value so that text box is positioned in the center of the screen.

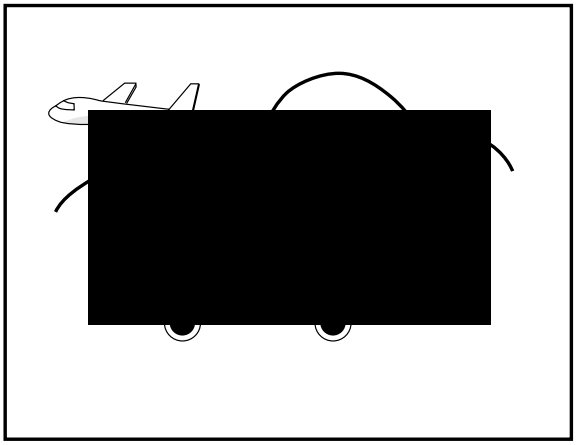

Figure C.

3.58MHz Trap Adjustment

1. Receive a good local channel.
2. Enter the service mode and select the service adjustment "S16".
3. This is a two position adjustment, "00" is ON, "01" is OFF.
4. Models should be adjusted as follows.

MODEL	"S16"
25N-M100/180	00
25N-S100/180	01
CN25M10	00
CN25S18	00
CN25S20	01

Sharpness and Audio Balance Adjustments

1. Receive a good local channel.
2. Enter the service mode and select the service adjustments "S05" for sharpness and "S17" for balance.

- **Sharpness adjustment**

3. Adjust data value to "28"(center of data range) for sharpness adjustment.

- **Audio balance adjustment**

4. Adjust data value to "20"(center of data range) for Audio balance adjustment.

Energy save offset Adjustment

1. Enter the service mode and select the service adjustment "S20".
2. Adjust data value to "23".

Note : This position is used to preset the level for the energy save function.

Other Adjustments

1. Enter the service mode.
2. Adjust the following data values as listed below.

S21	"03"	DDE OFFSET
S22	"00"	OSD SETUP
S23	"00"	TUNER SETUP

■ MTS ADJUSTMENT

(Only for 25N-S100/180, CN25S18/20)

MTS Level Adjustment

1. Feed the following monaural signal to pin (14) of IC3001.
   Monaural signal : 300Hz, 245mVrms
2. Connect the rms voltmeter to pin (39) of IC3001.
3. Enter the service mode and select the service adjustment "M01".
4. Adjust the data so that the rms voltmeter reads. 490 ±10mVrms.

MTS VCO Adjustment

1. Keep the unit in no-signal state.
2. Connect the frequency counter to pin (39) of IC3001.
3. Connect a capacitor (100µF, 50V) in between positive(+) side of C3005 and ground.
4. Enter the service mode and select the service adjustment "M02"
5. Adjust the data so that the frequency counter reads. 62.94 ±0.75kHz.

Filter Adjustment

1. Feed the following stereo pilot signal to pin (14) of IC3001 .
   Stereo pilot signal: 9.4kHz, 600mVrms.
2. Enter the service mode and select the service adjustment "M03".
3. Adjust the data at the point where "OK" appears on the screen. The "OK" represents the approximate center of the adjustable range of the data.

Separation Adjustment

1. Connect the rms voltmeter to pin (39) of IC3001.
2. Receive the following composite stereo signal 1.
   Composite stereo signal: 30% modulation, left channel only, noise reduction on, 300Hz
3. Enter the service mode and select the service adjustment "M04".
4. Adjust the data until the AC voltage reading of the rms voltmeter is minimum.
5. Receive the following composite stereo signal 2.
   Stereo signal: 30% modulation, left channel only, noise reduction on, 3kHz
6. Enter the service mode and select the service adjustment "M05".
7. Adjust the data until the AC voltage reading of the rms voltmeter is minimum.
8. Take the above steps 1 thru 8 again for fine adjustment.

MODELS 25N-M100/180, CN25M10 CHASSIS LAYOUT

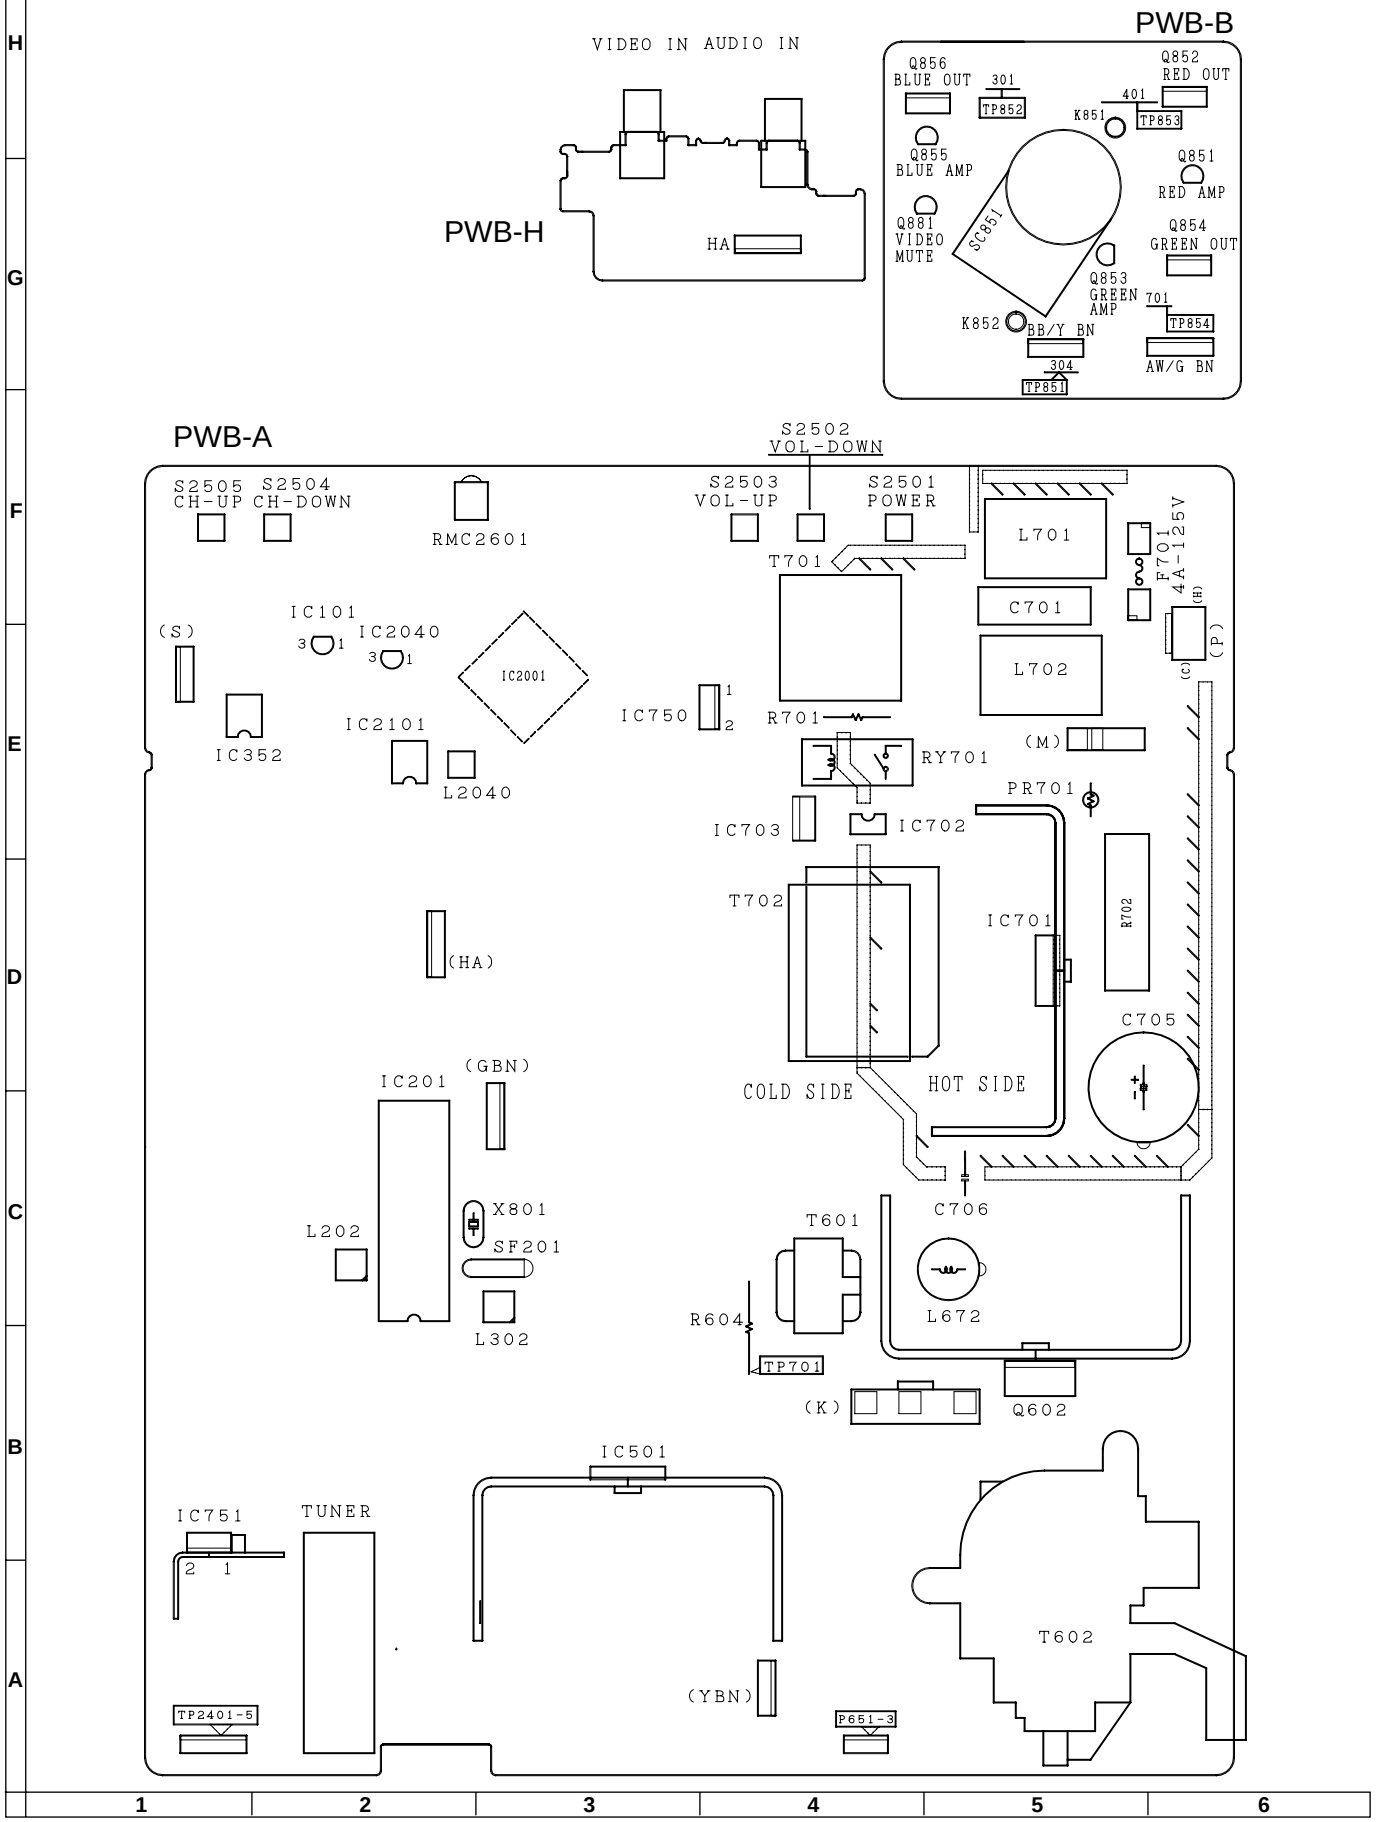

MODELS 25N-S100/180, CN25S18/20 CHASSIS LAYOUT

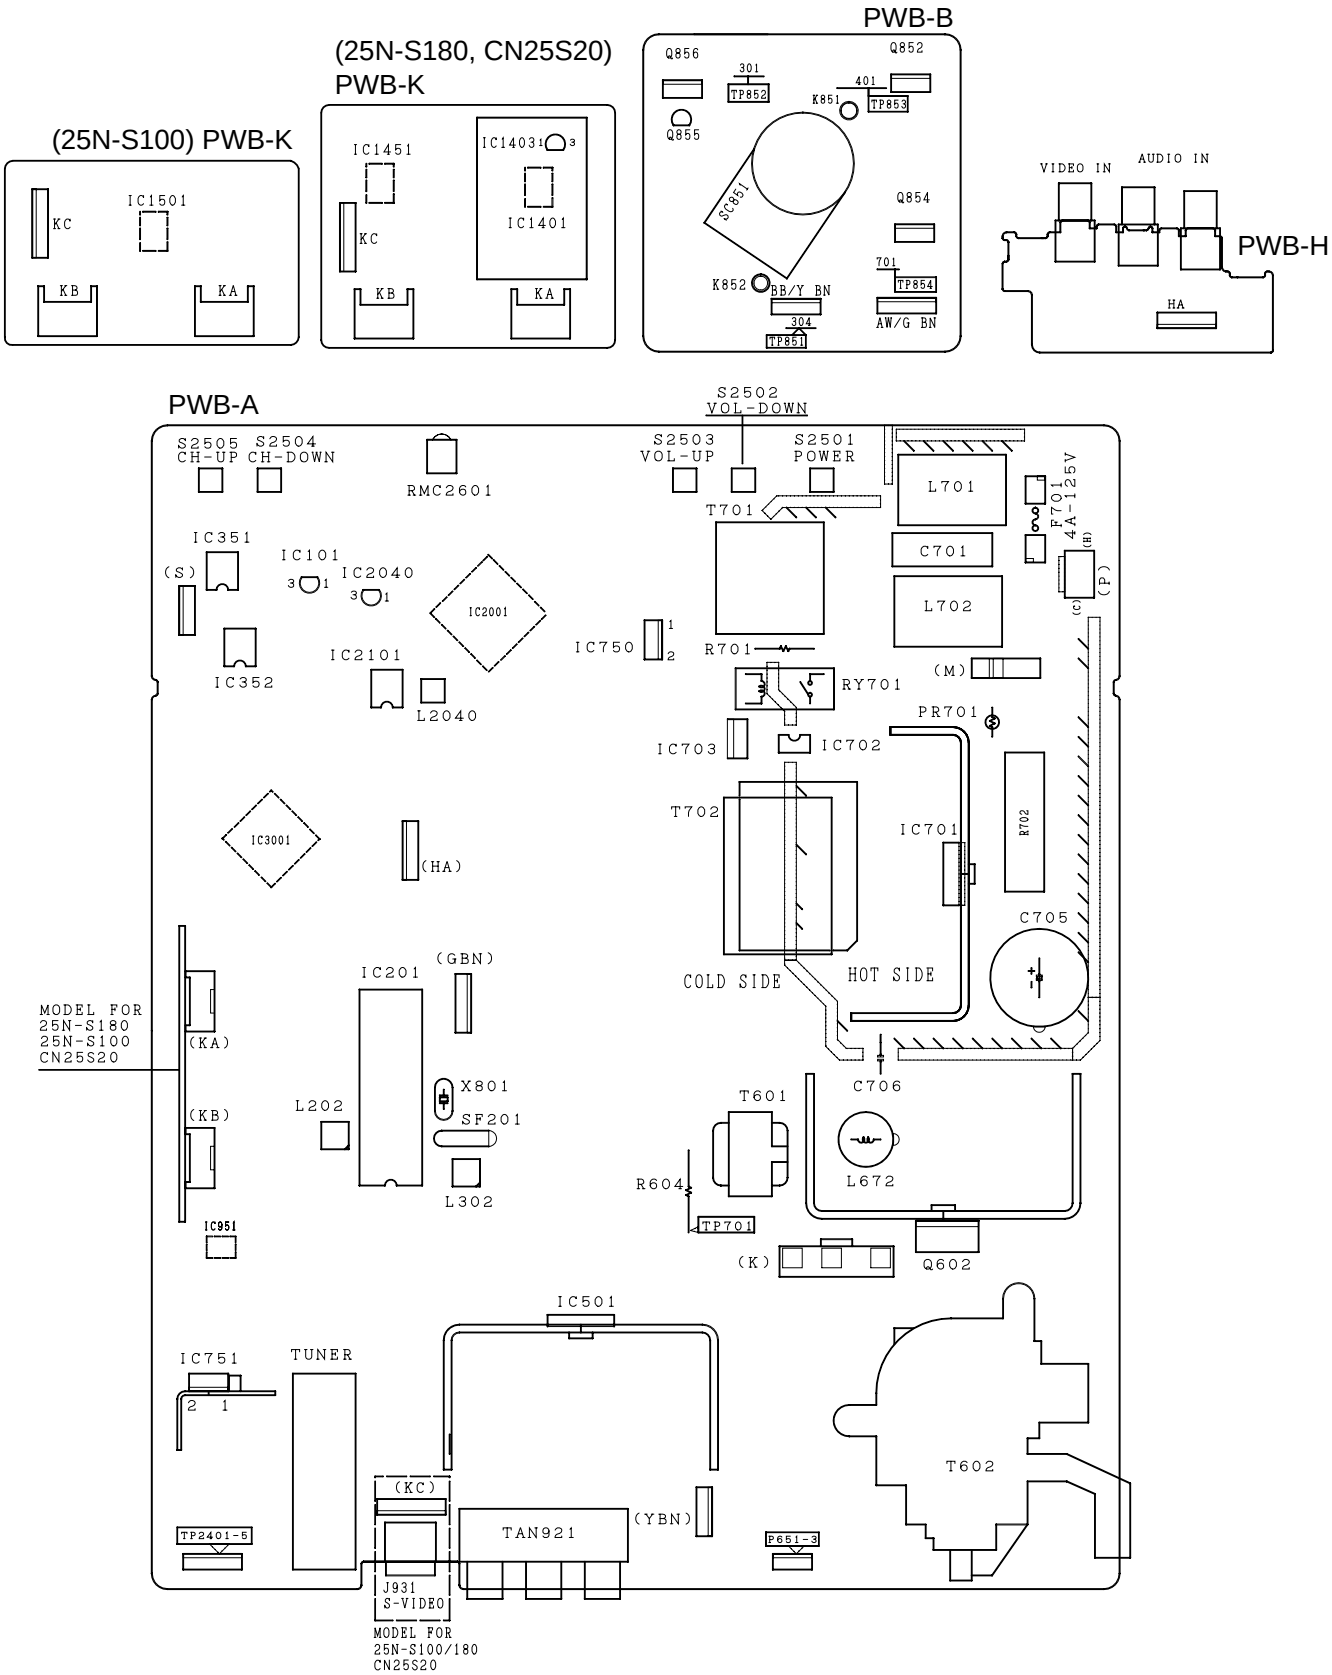

MODELS 25N-M100/180, CN25M10 BLOCK DIAGRAM

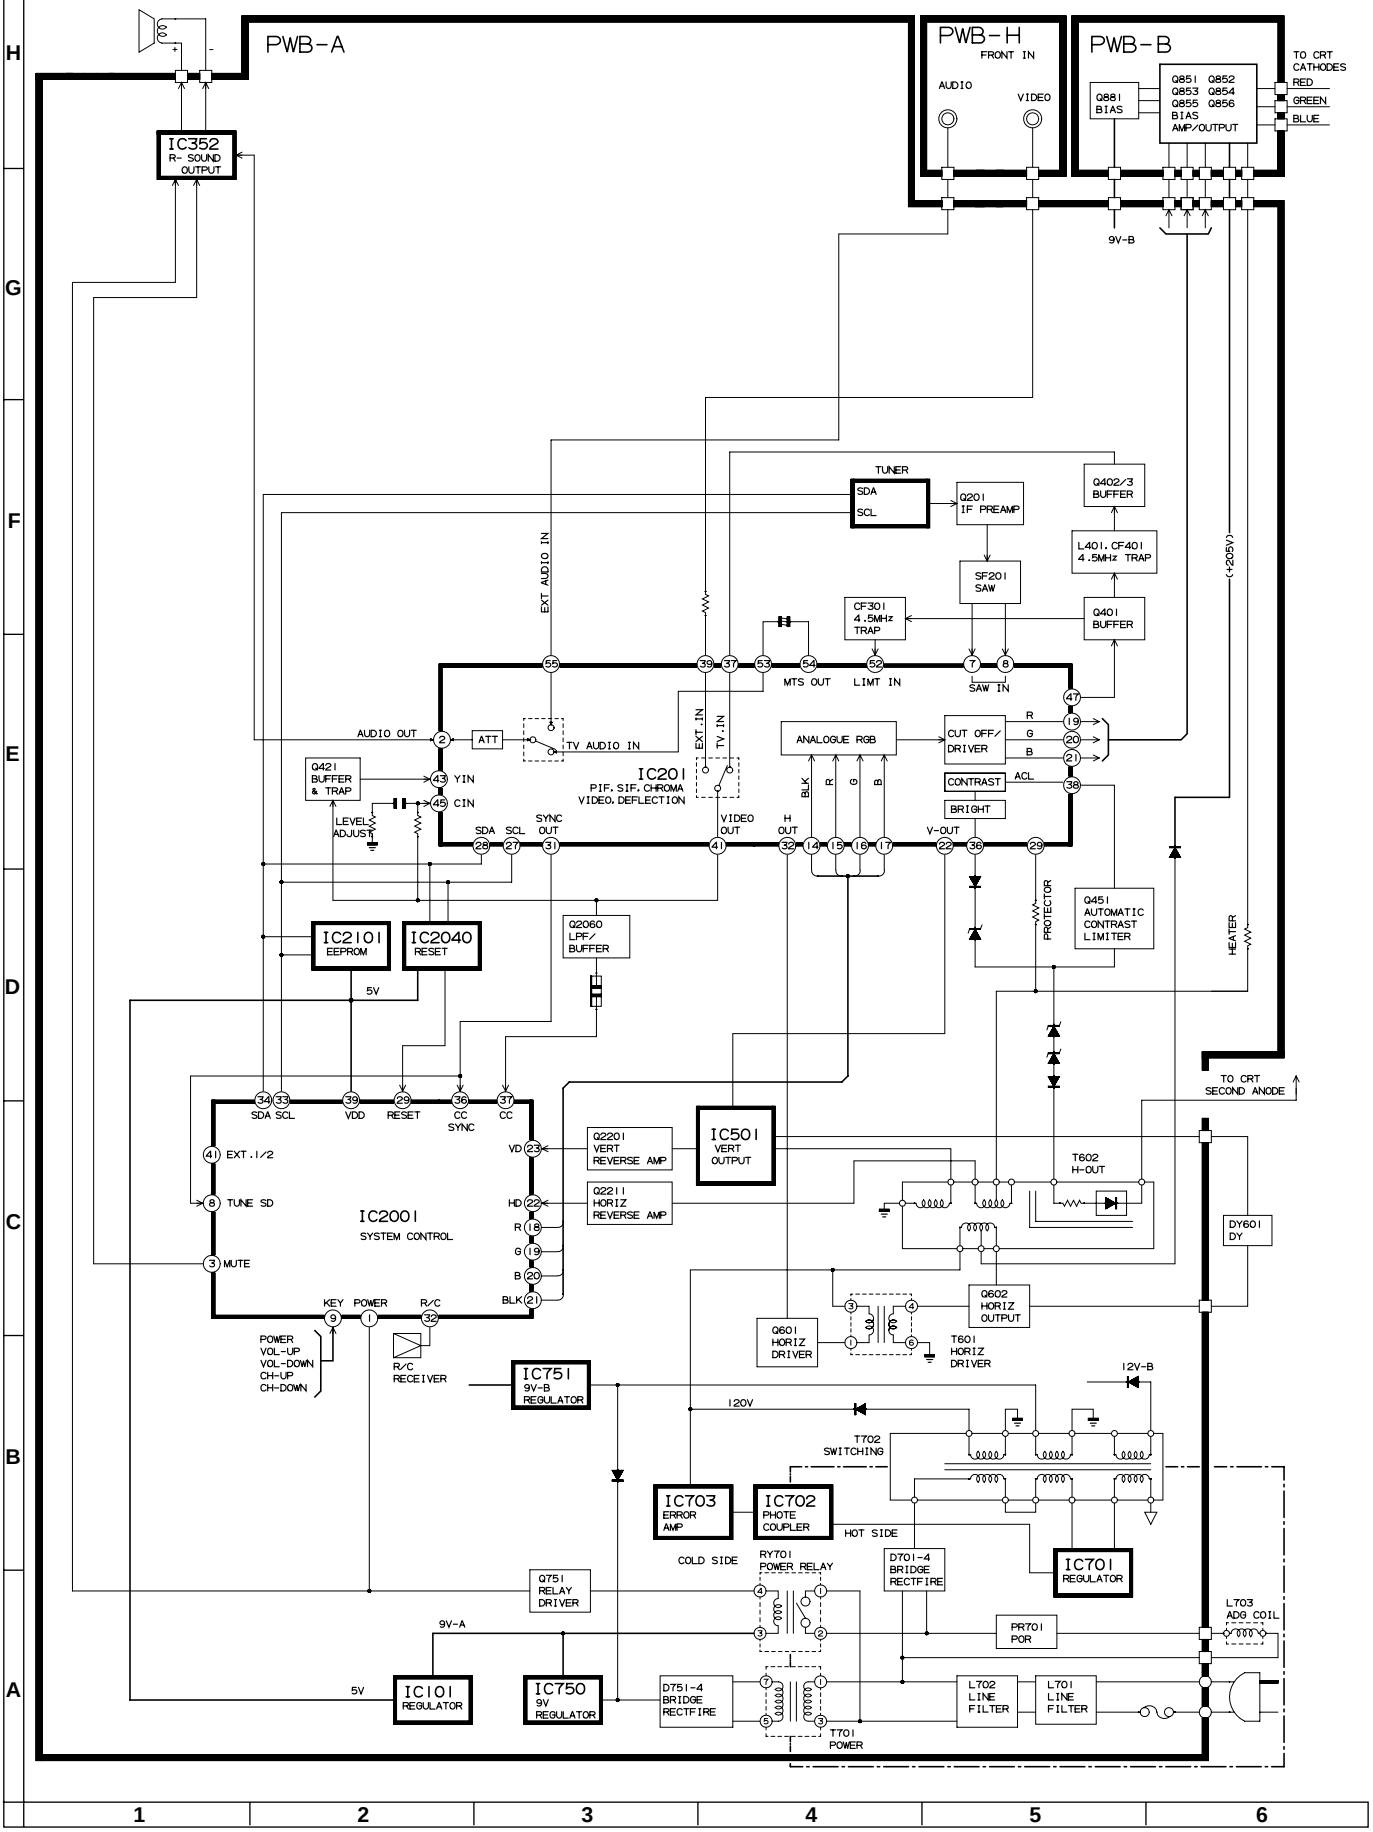

MODEL 25N-S100 BLOCK DIAGRAM

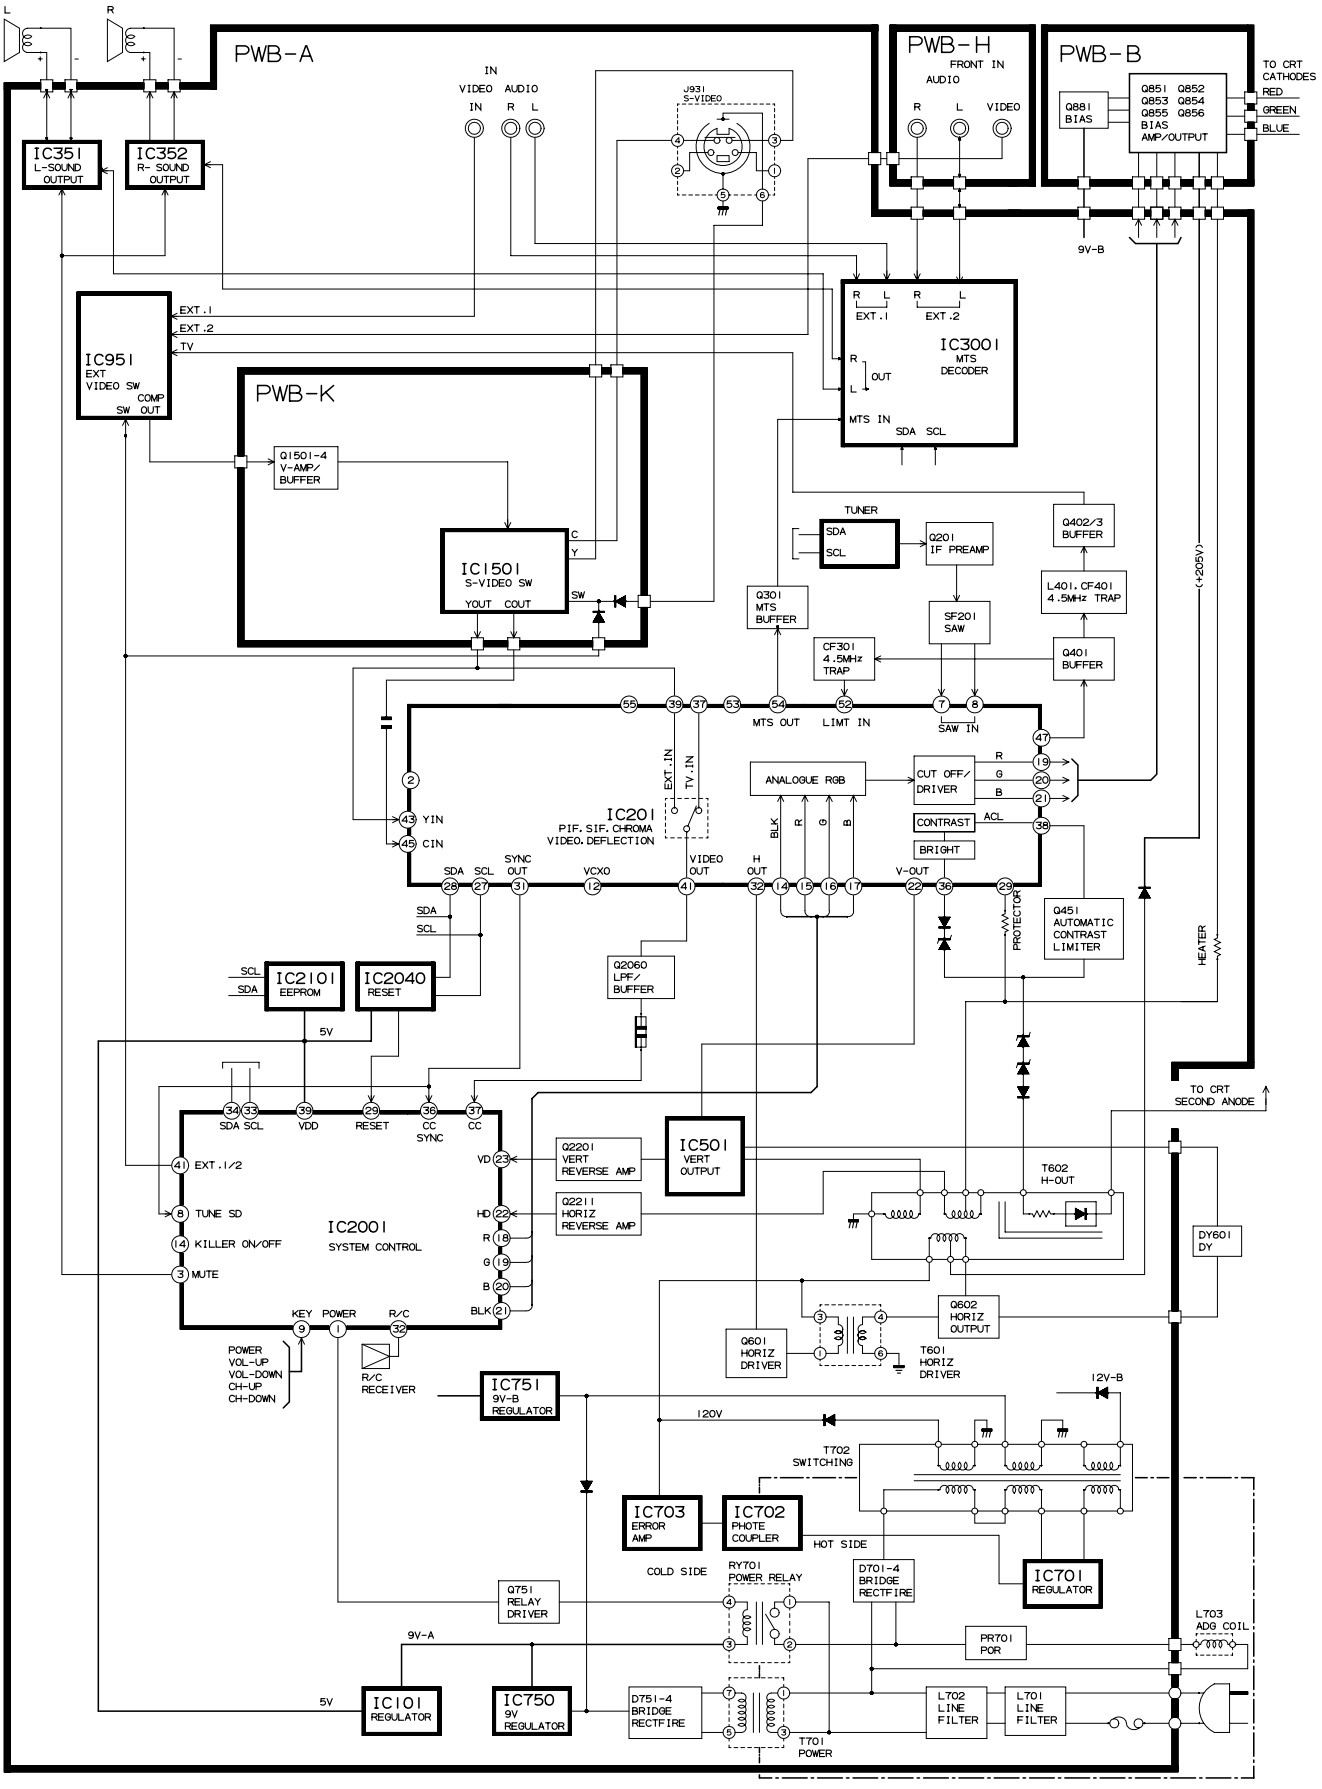

MODELS 25N-S180, CN25S20 BLOCK DIAGRAM

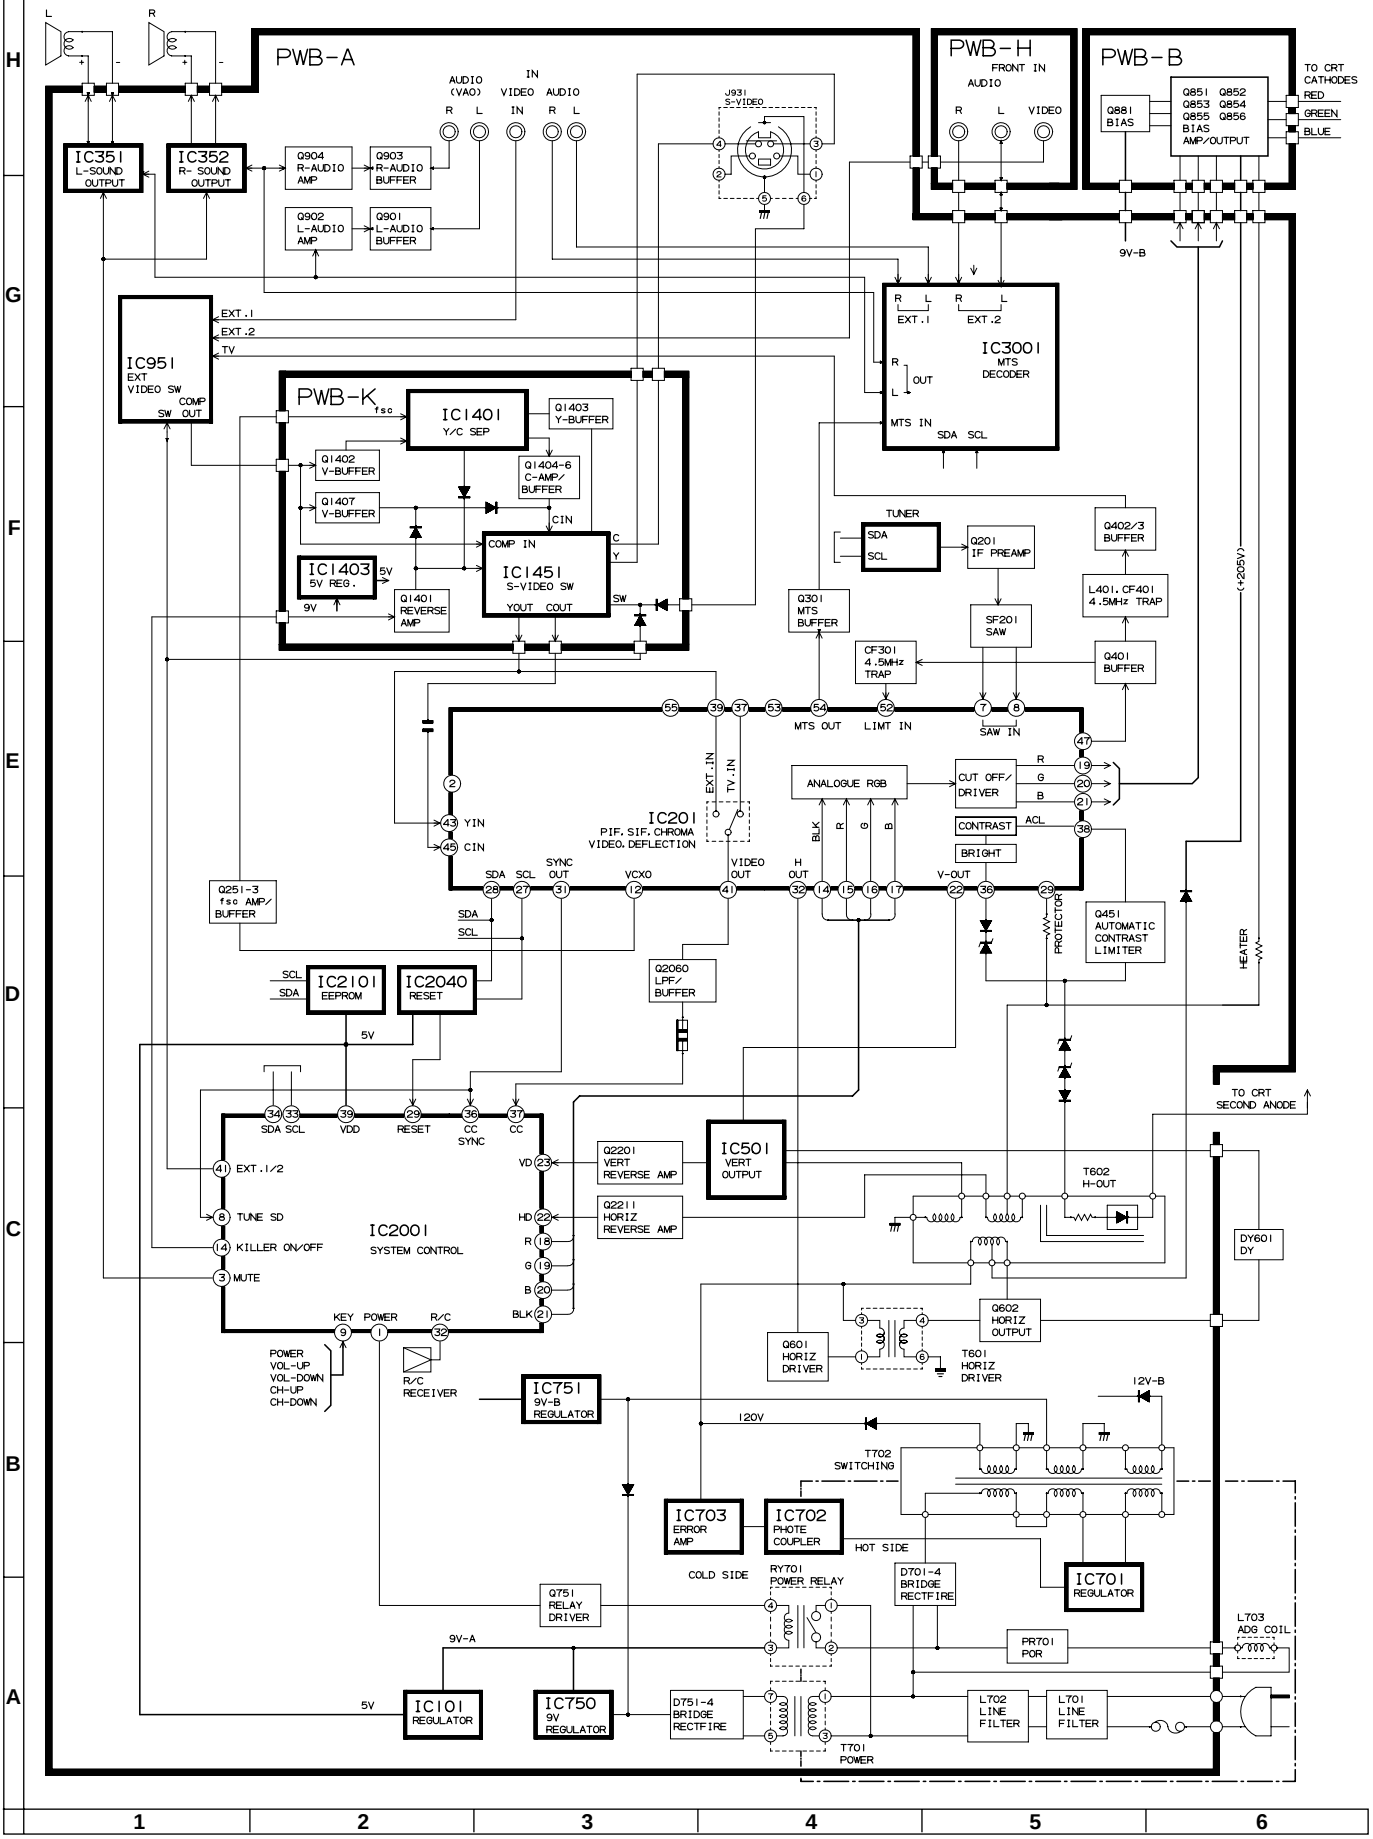

MODEL CN25S18 BLOCK DIAGRAM

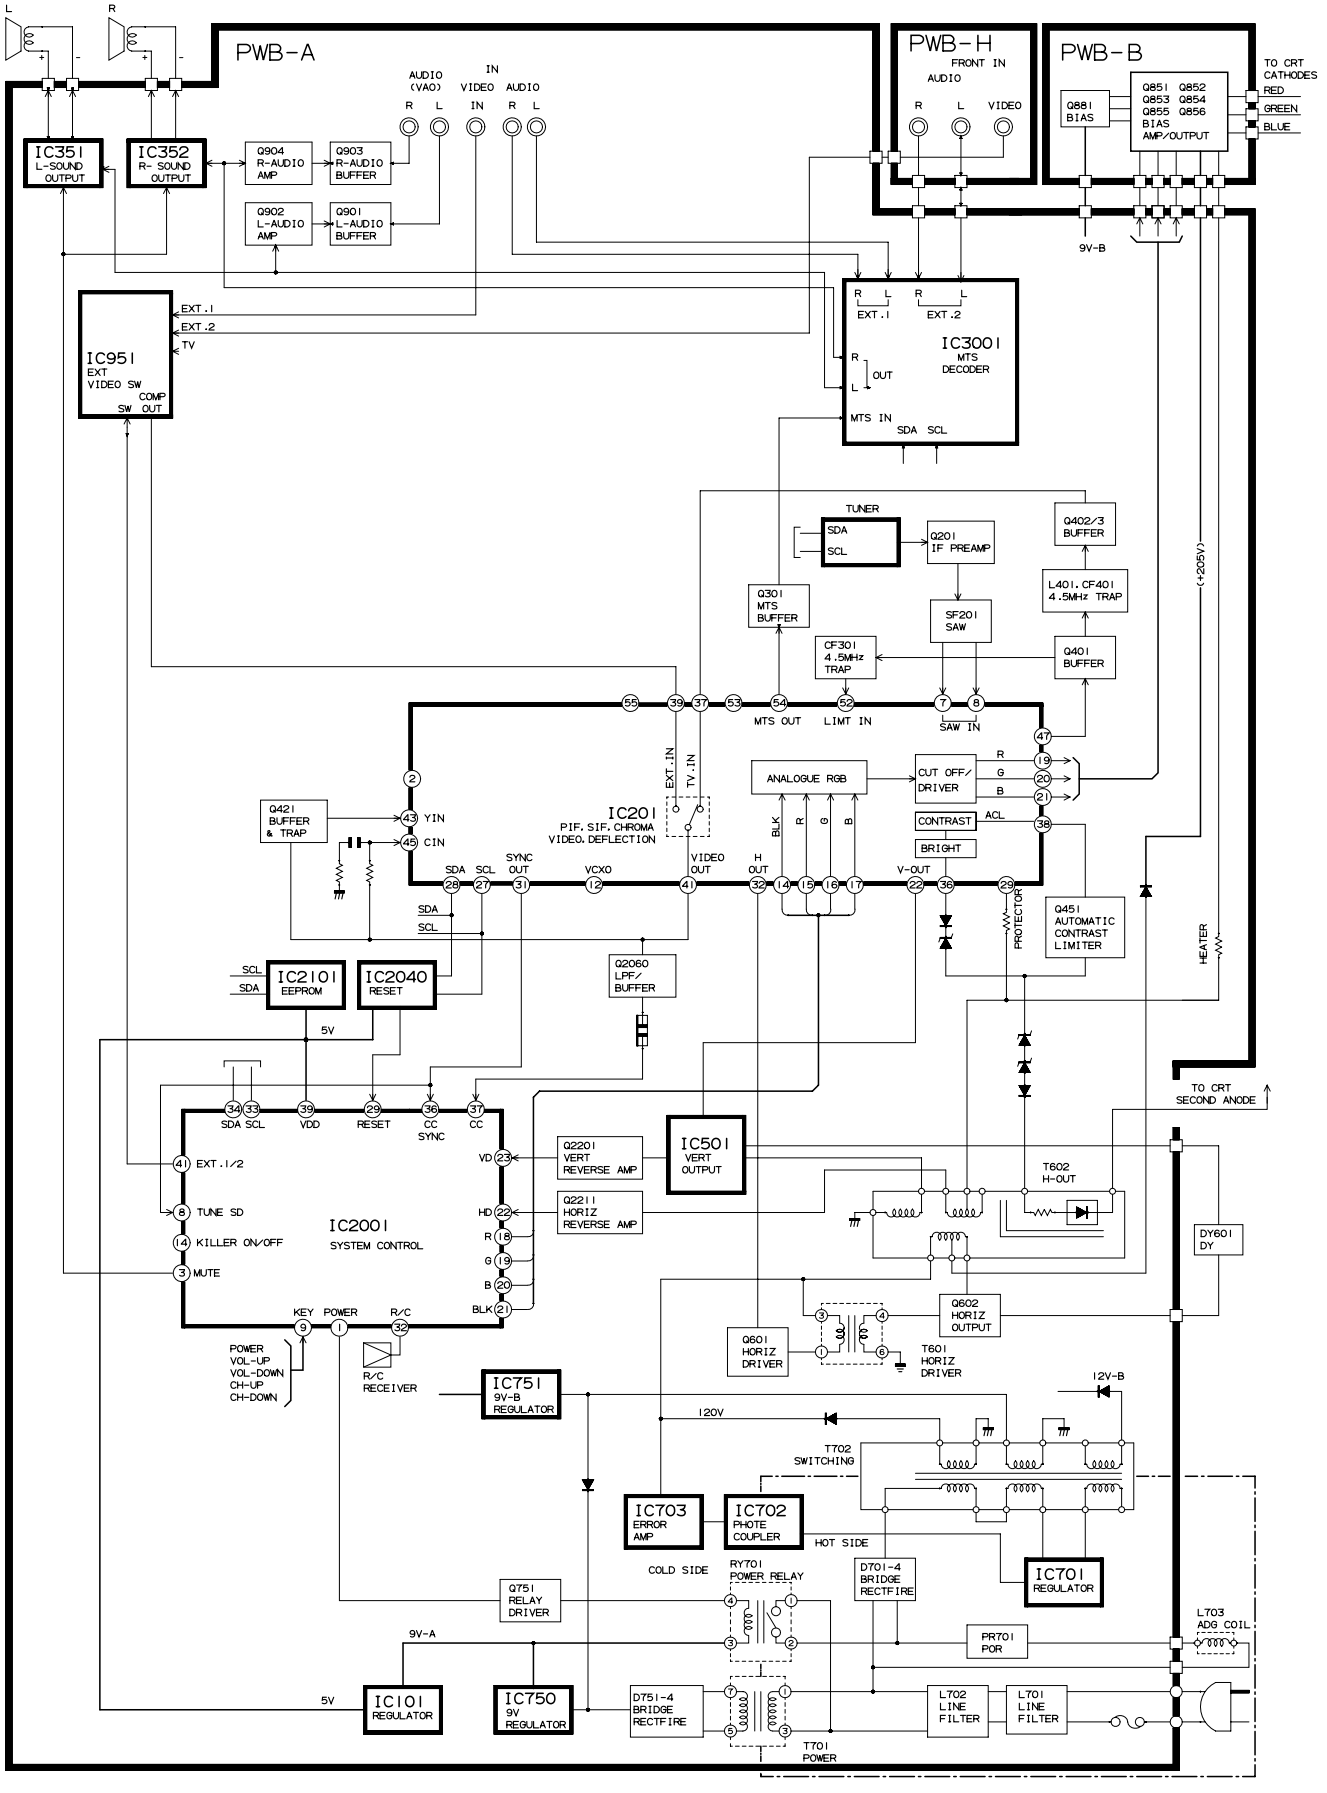

DESCRIPTION OF SCHEMATIC DIAGRAM

NOTES:

1. *The unit of resistance "ohm" is omitted. (K=kΩ=1000Ω, M=MΩ)*
2. *All resistors are 1/16 watt, unless otherwise noted.*
3. *All capacitors are μ F, unless otherwise noted. (P=pF=μμF)*
4. *(G) indicates ±2% tolerance may be used.*
5. *⏚ indicates line isolated ground.*

VOLTAGE MEASUREMENT CONDITIONS:

1. *All DC voltages are measured with DVM connected between points indicated and chassis ground, line voltage set at 120V AC and all controls set for normal picture unless otherwise indicated.*
2. *All voltages measured with 1000μ V B & W or Color signal.*

WAVEFORM MEASUREMENT CONDITIONS:

1. *Photographs taken on a standard gated color bar signal, the tint setting adjusted for proper color. The wave shapes at the red, green and blue cathodes of the picture tube depend on the tint, color level and picture control.*
2. *indicates waveform check points (See chart, waveforms are measured from point indicated to chassis ground.)*

⚠ AND SHADED ( ) COMPONENTS = SAFETY RELATED PARTS.
▲ MARK= X-RAY RELATED PARTS.

DRGANNES MARQUES ⚠ ET HACHRES ( ): PIECES RELATIVES A LA SECURITE.
MARQUE ▲ : PIECS RELATIVE AUX RAYONS X.

This circuit diagram is a standard one, printed circuits may be subject to change for product improvement without prior notice.

WAVE FORMS

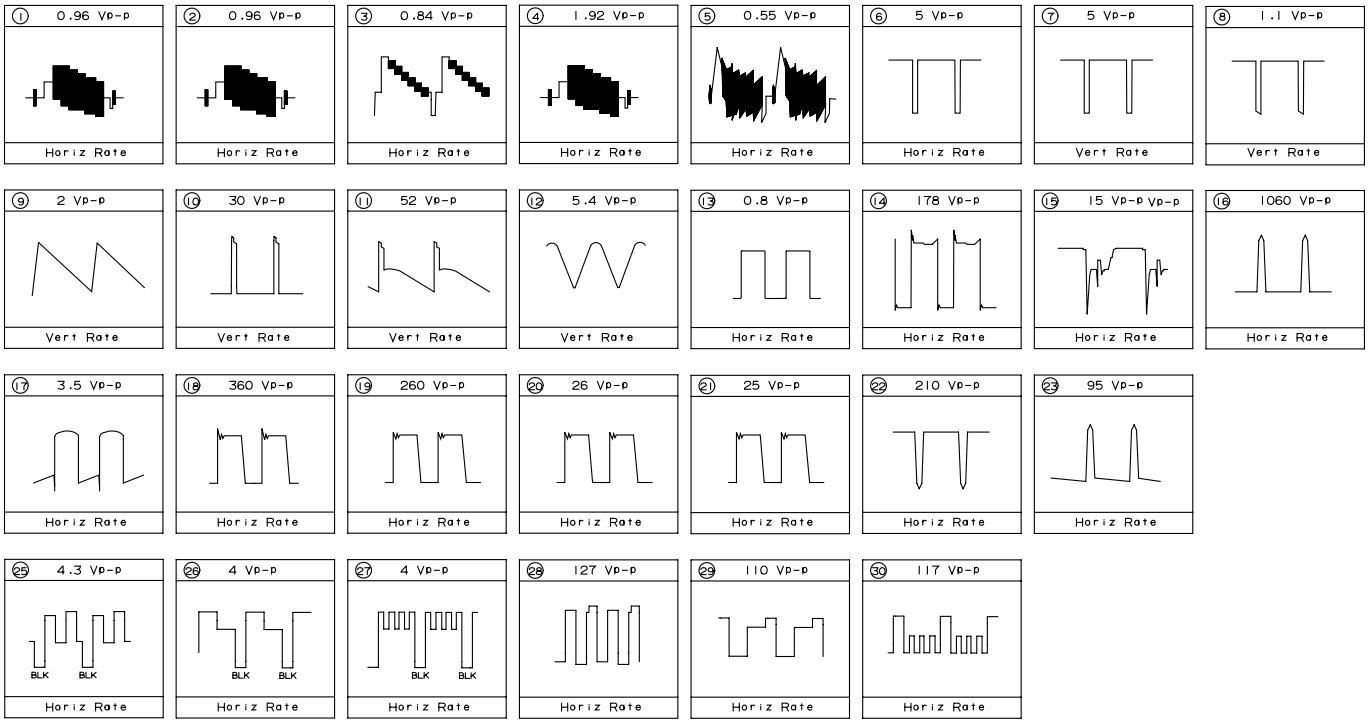

MODELS 25N-M100, CN25M10 SCHEMATIC DIAGRAM: MAIN-1 Unit

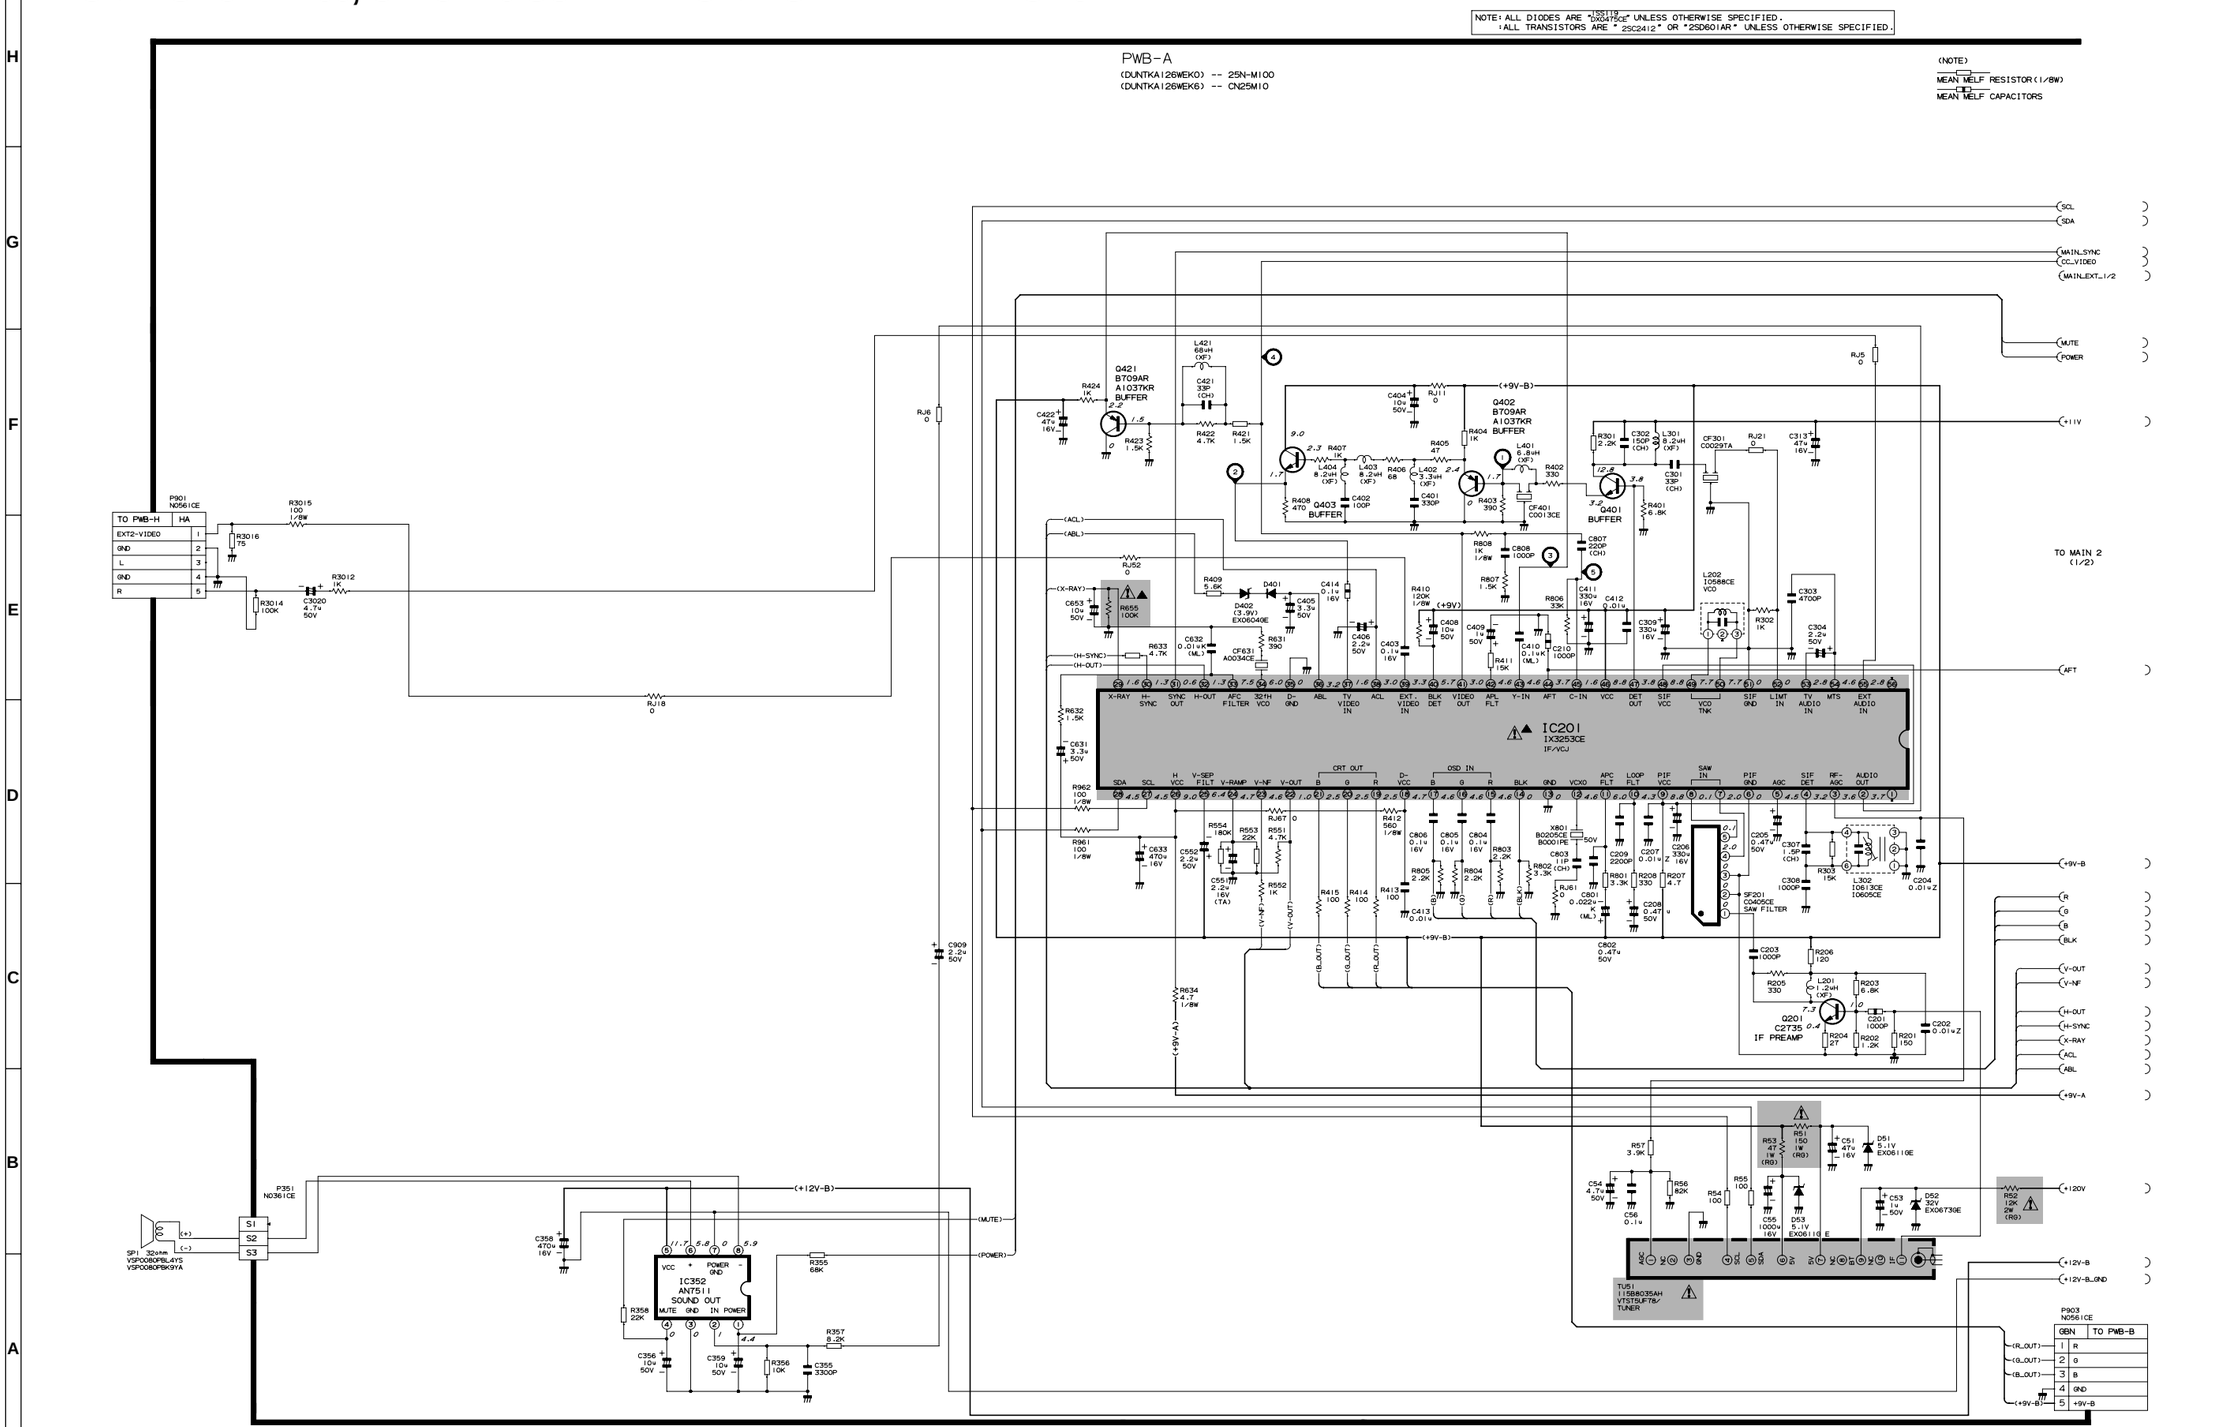

MODELS 25N-M100, CN25M10 SCHEMATIC DIAGRAM: MAIN-2 Unit

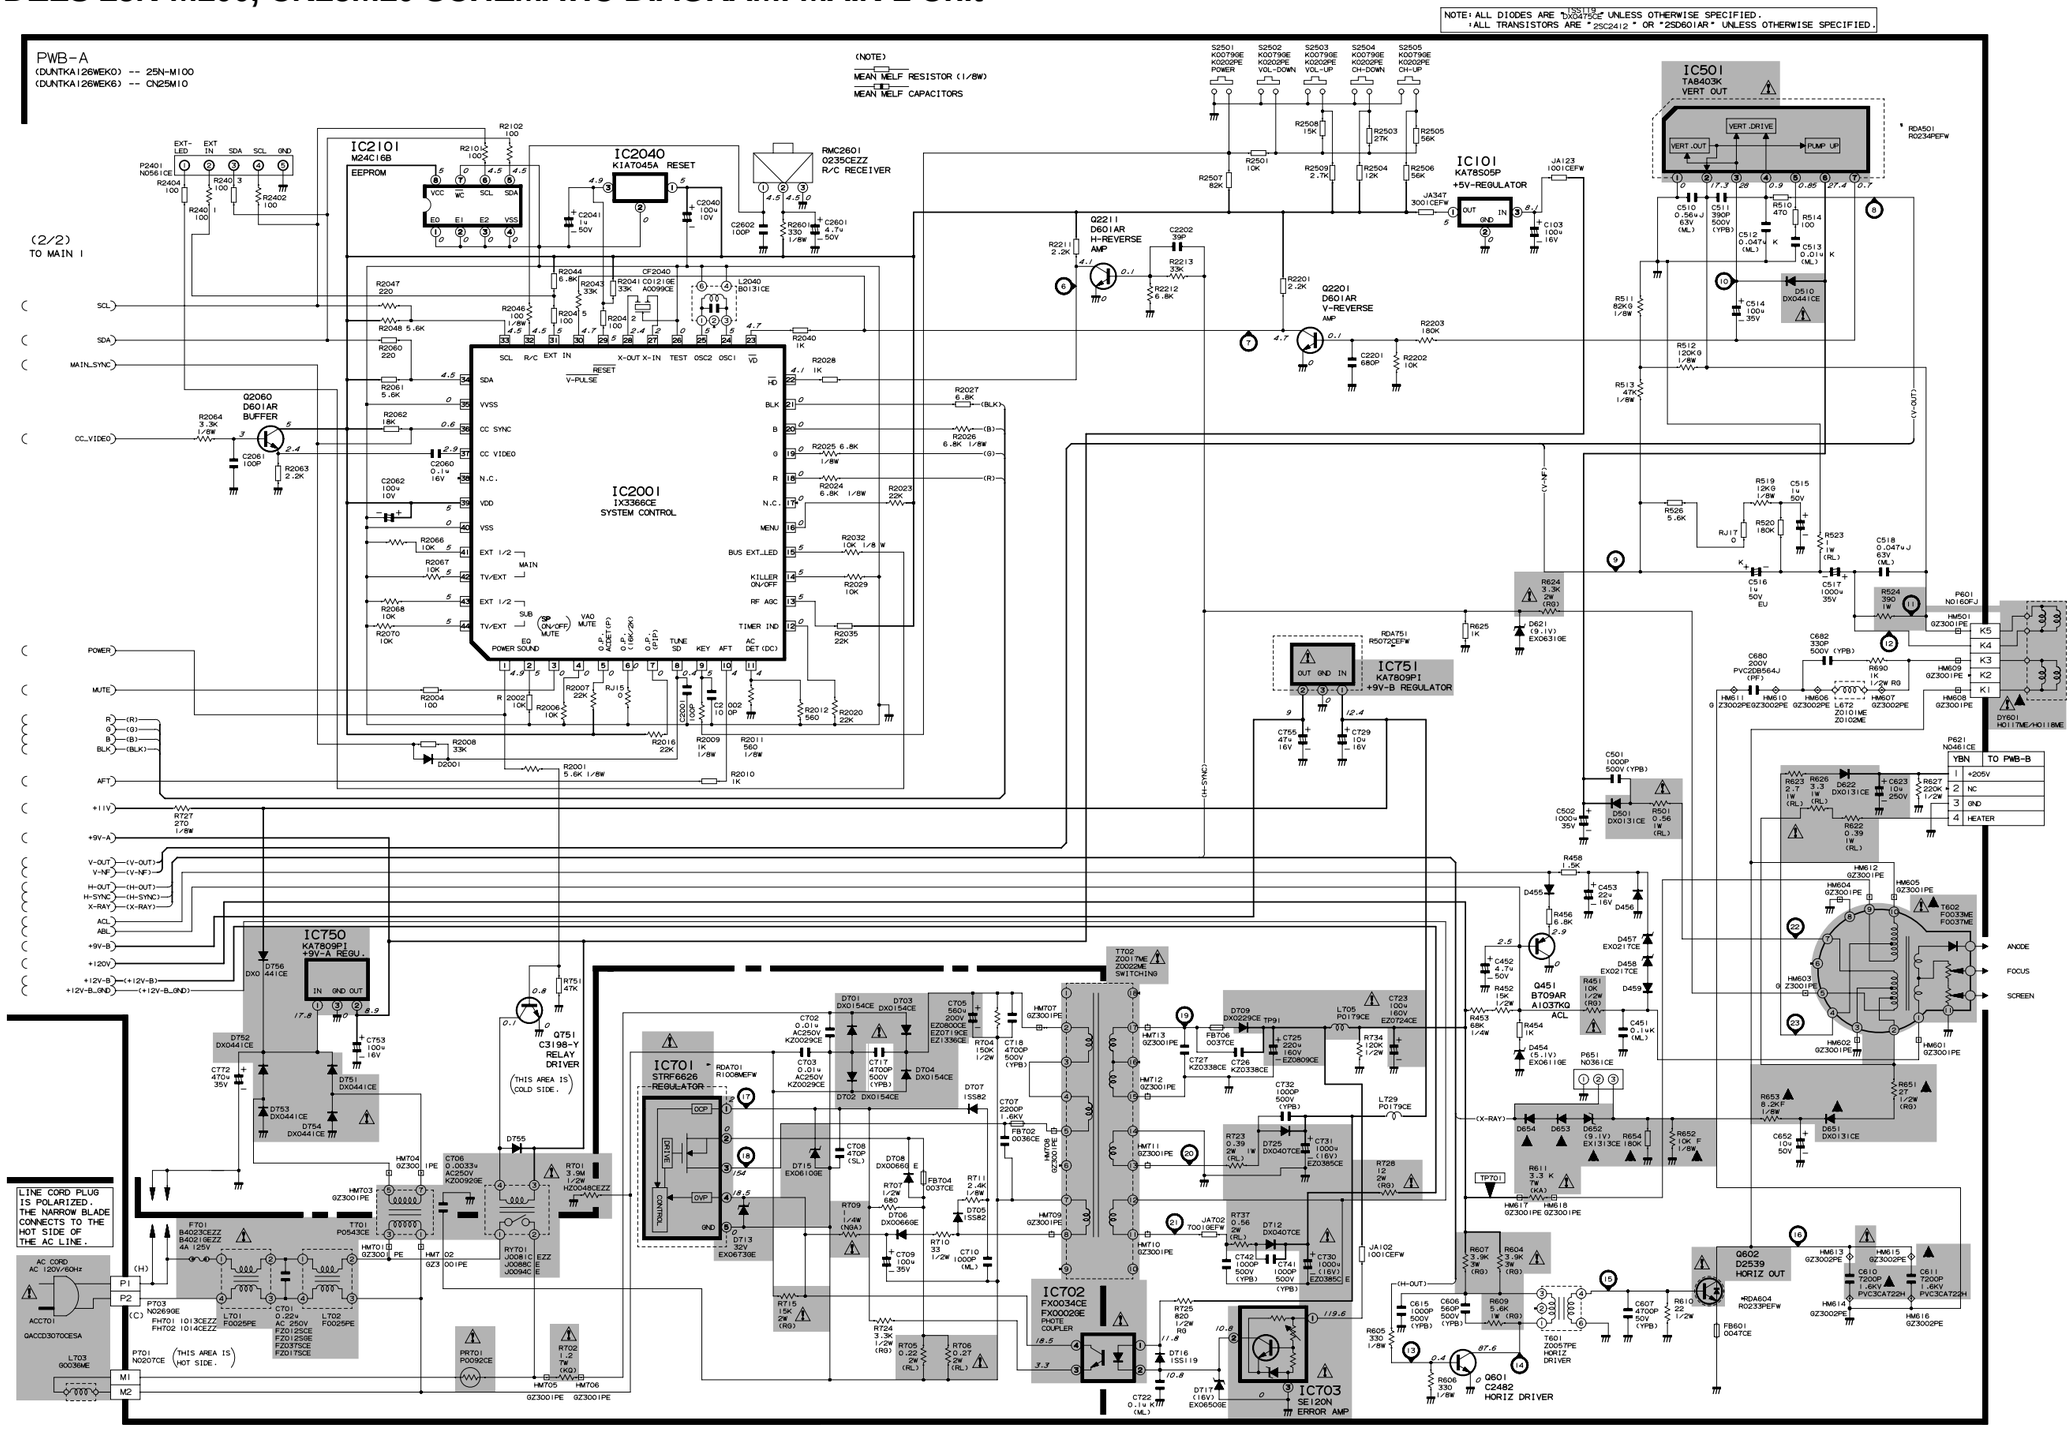

MODEL 25N-M180 SCHEMATIC DIAGRAM: MAIN-1 Unit

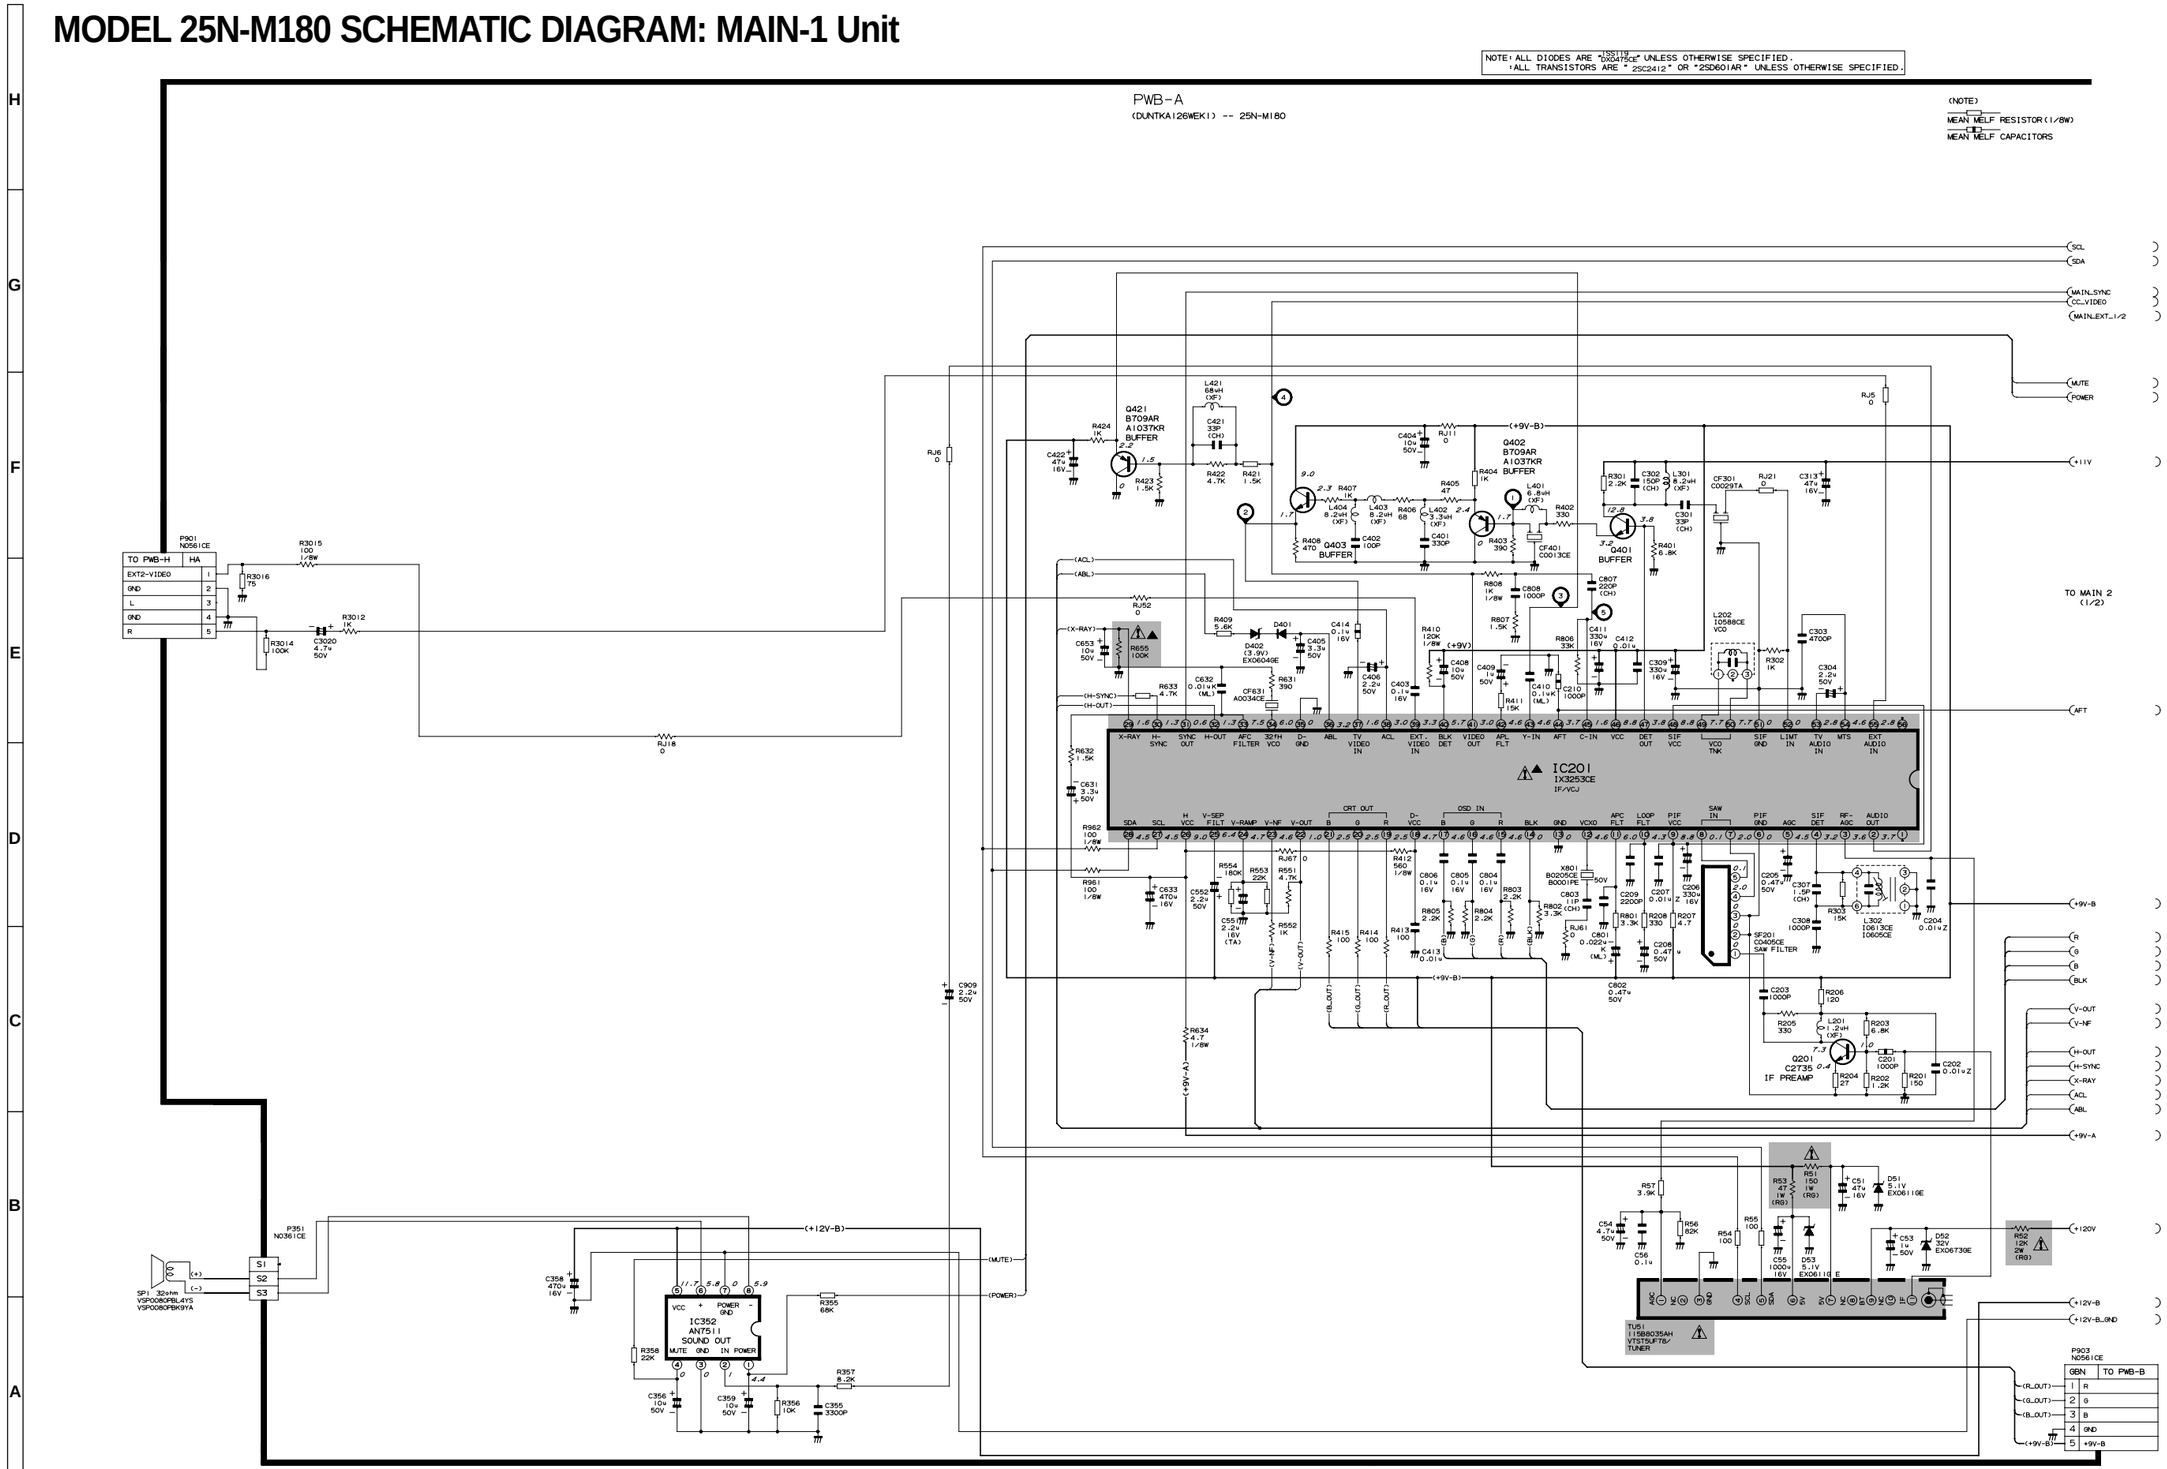

MODEL 25N-M180 SCHEMATIC DIAGRAM: MAIN-2 Unit

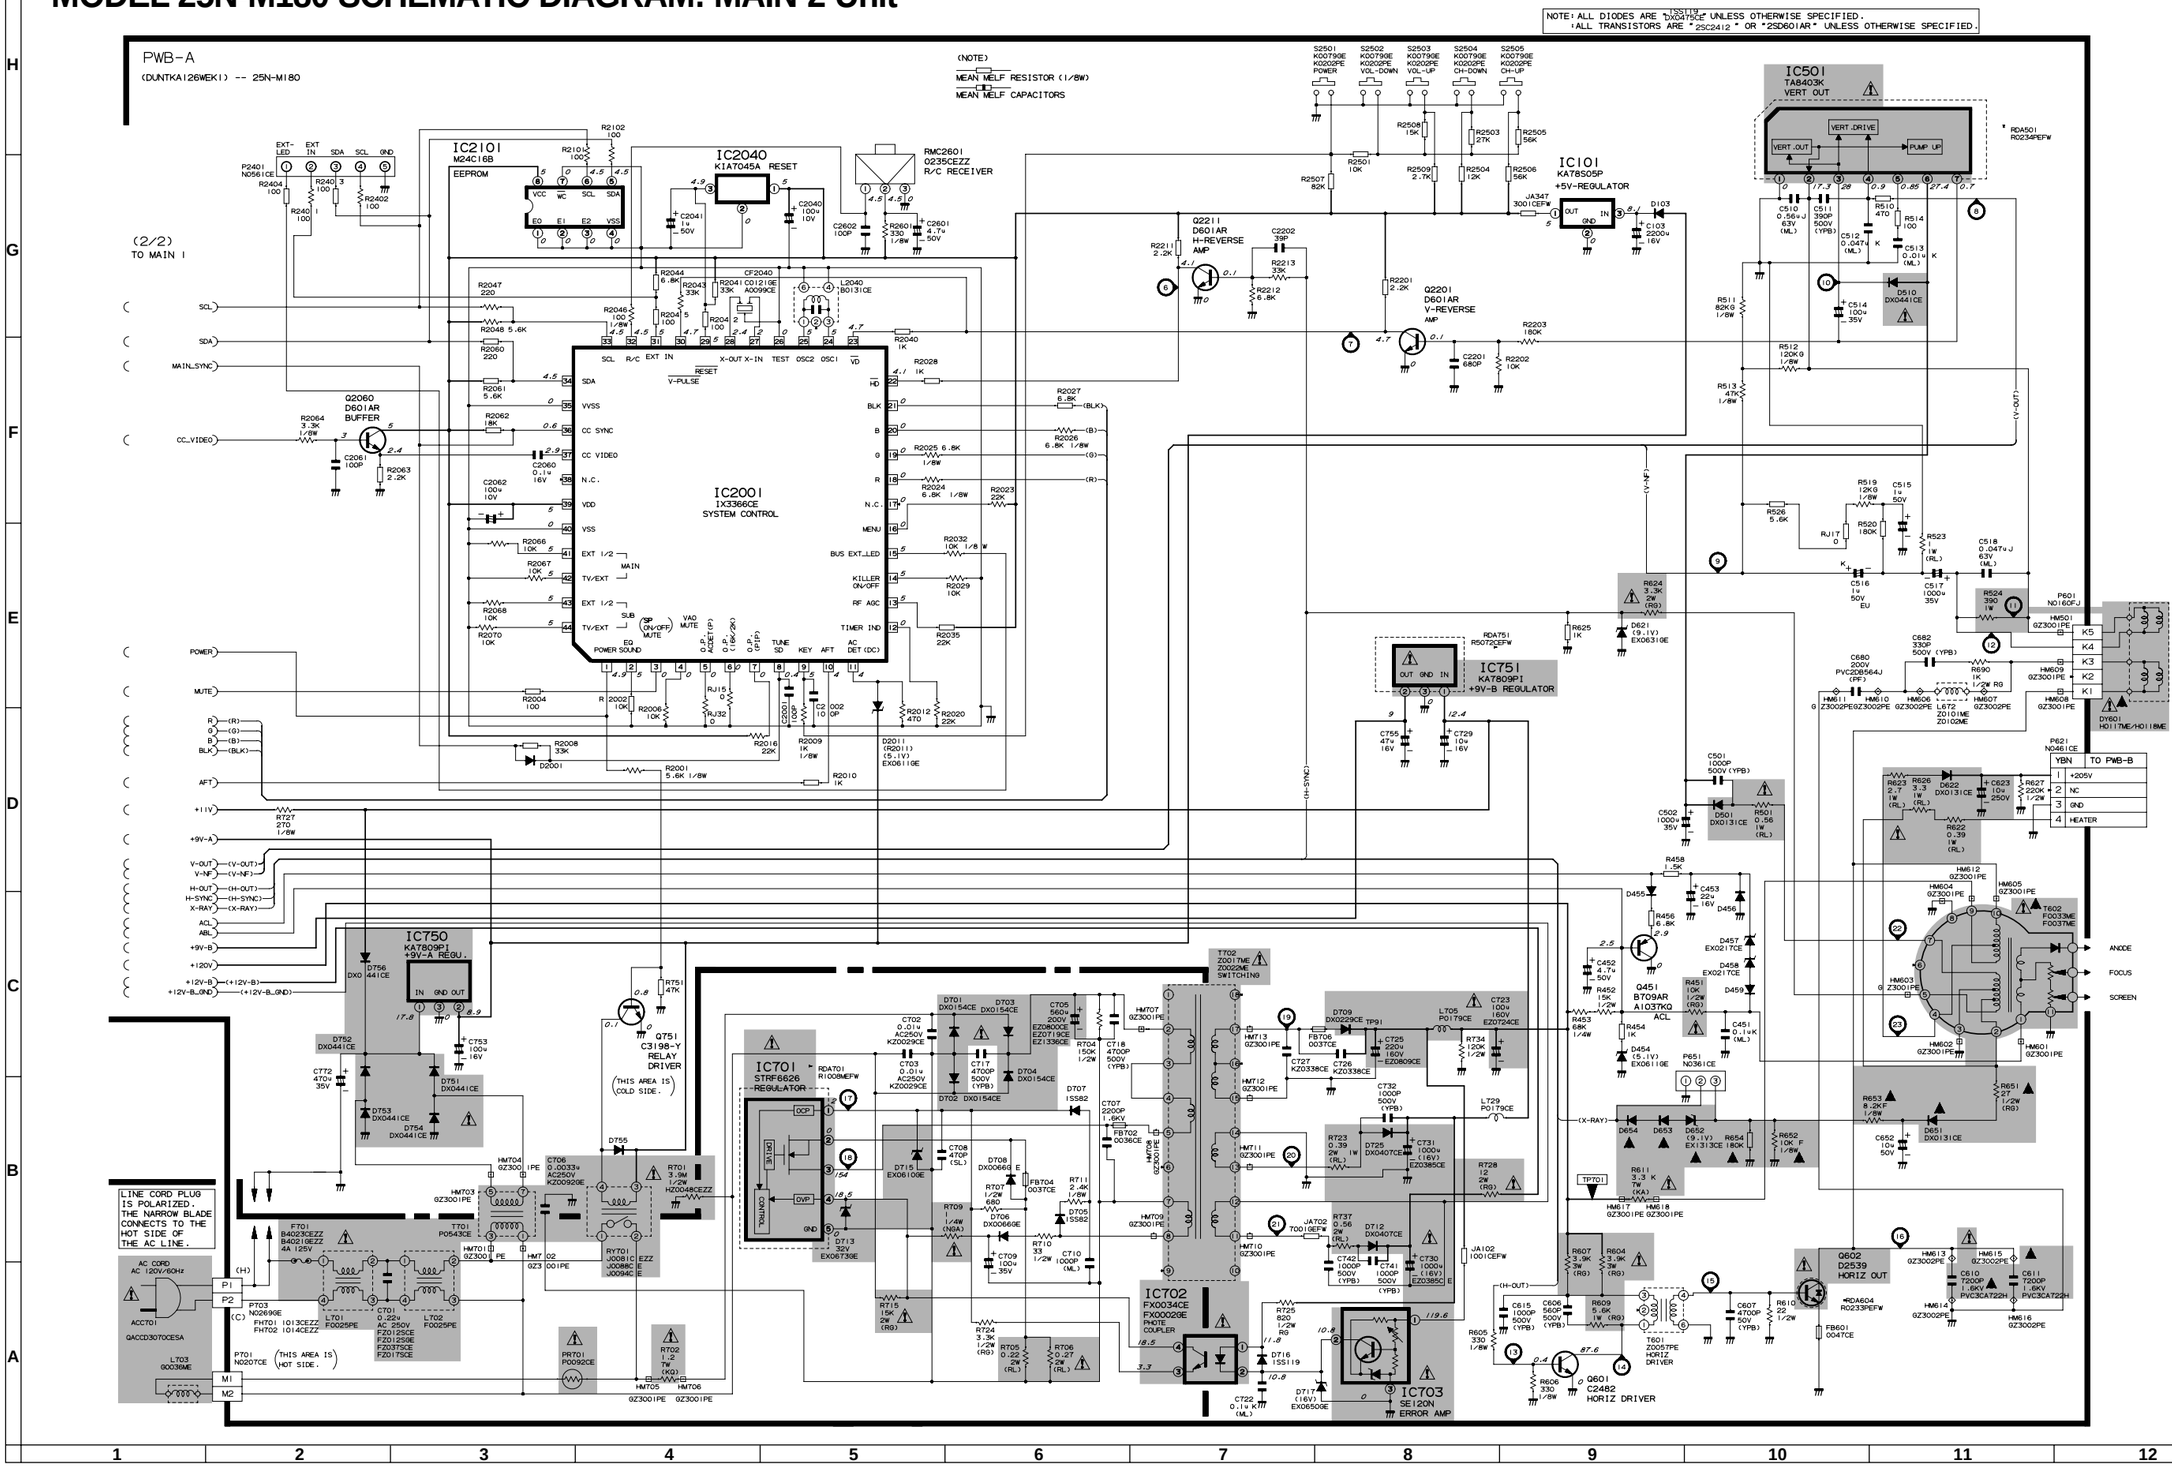

MODEL 25N-S100 SCHEMATIC DIAGRAM: MAIN-1 Unit

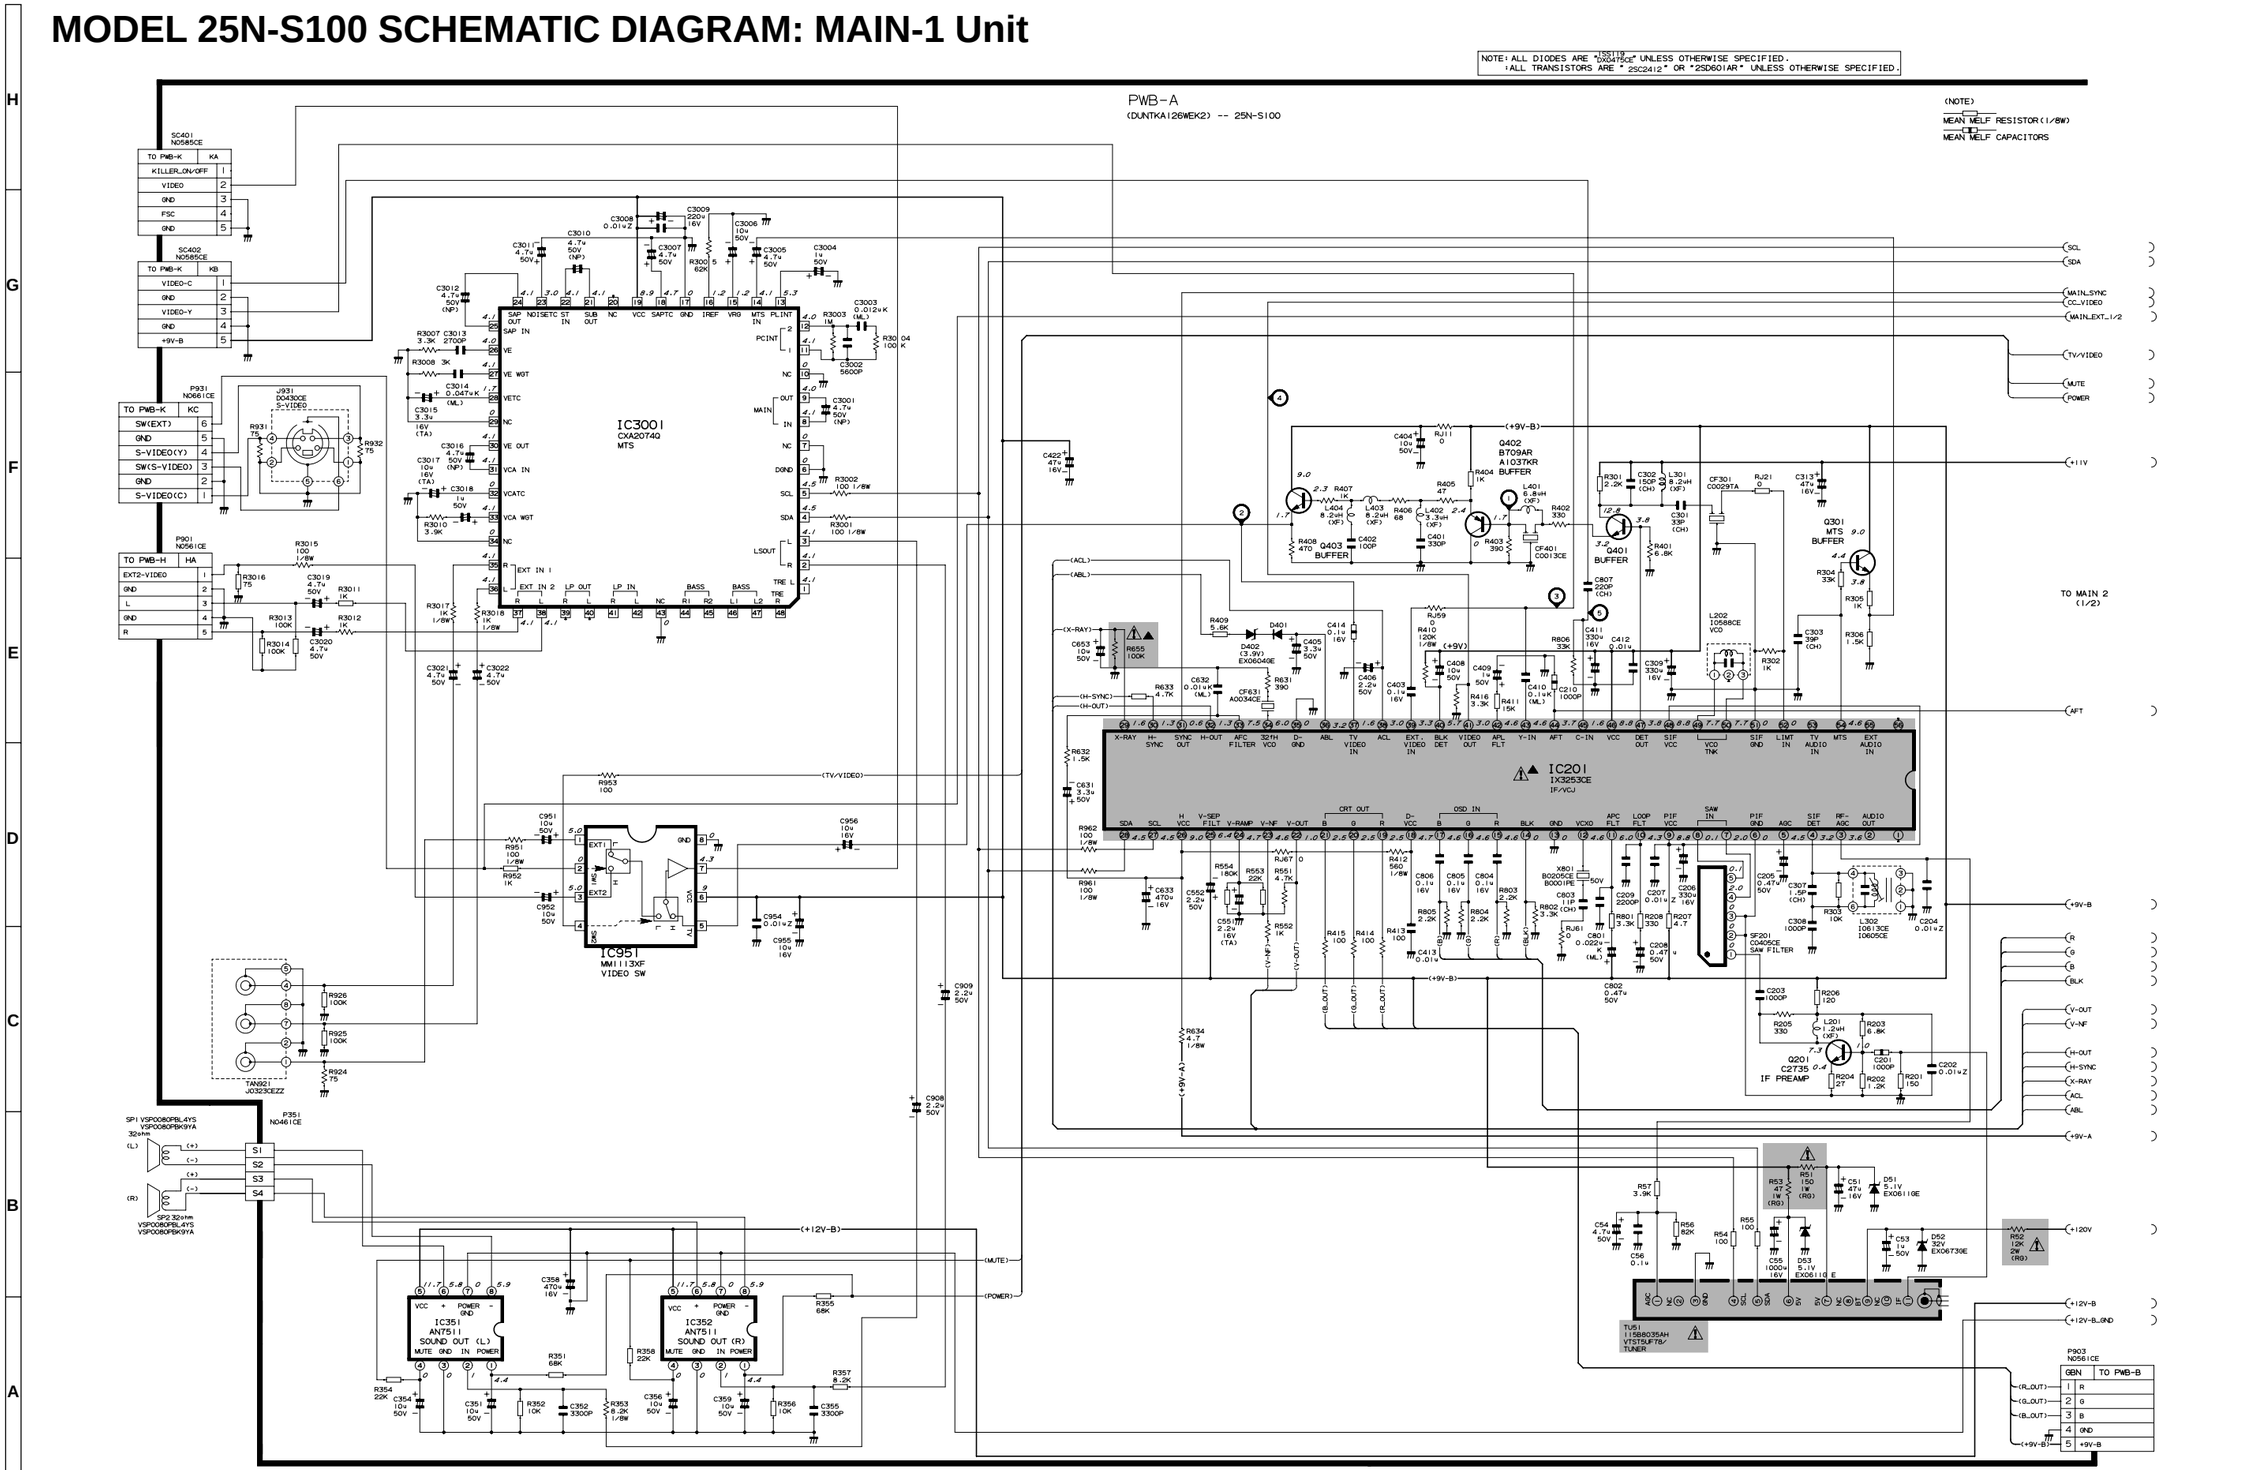

TO PWB-K	KA
KILLER_ON/OFF	1
VIDEO	2
GND	3
FSC	4
GND	5

TO PWB-K	KB
VIDEO-C	1
GND	2
VIDEO-Y	3
GND	4
+9V-B	5

TO PWB-K	KC
SW(EXT)	6
GND	5
S-VIDEO(Y)	4
SW(S-VIDEO)	3
GND	2
S-VIDEO(C)	1

TO PWB-H	HA
EXT2-VIDEO	1
GND	2
L	3
GND	4
R	5

GBN	TO PWB-B
1	R
2	G
3	B
4	GND
5	+9V-B

MODEL 25N-S100 SCHEMATIC DIAGRAM: MAIN-2 Unit

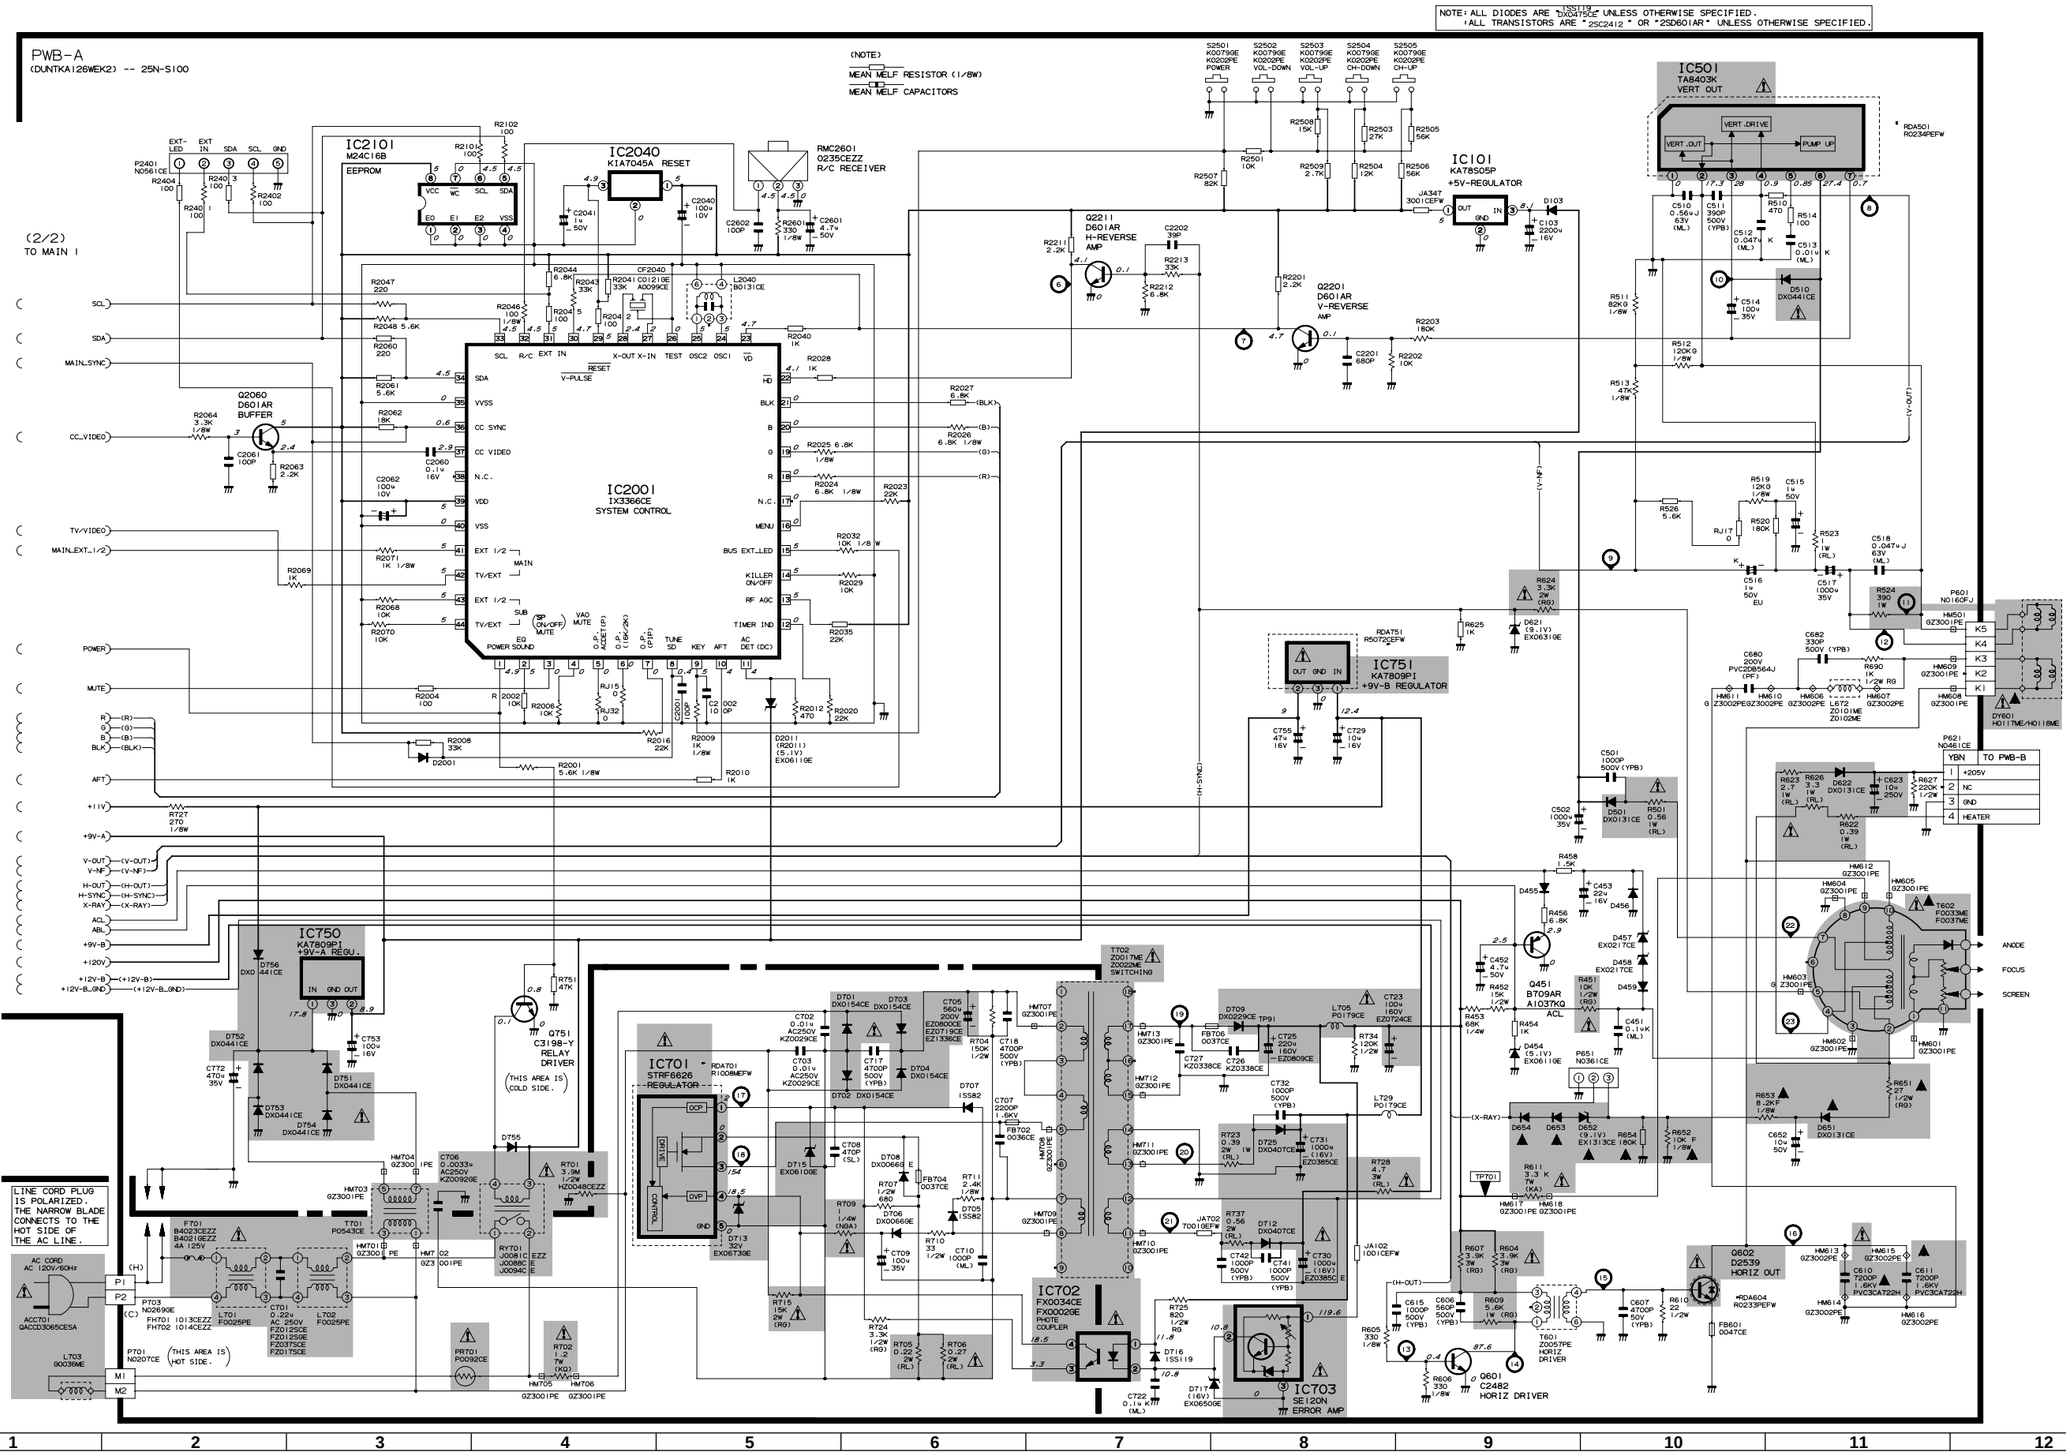

MODELS 25N-S180, CN25S20 SCHEMATIC DIAGRAM: MAIN-1 Unit

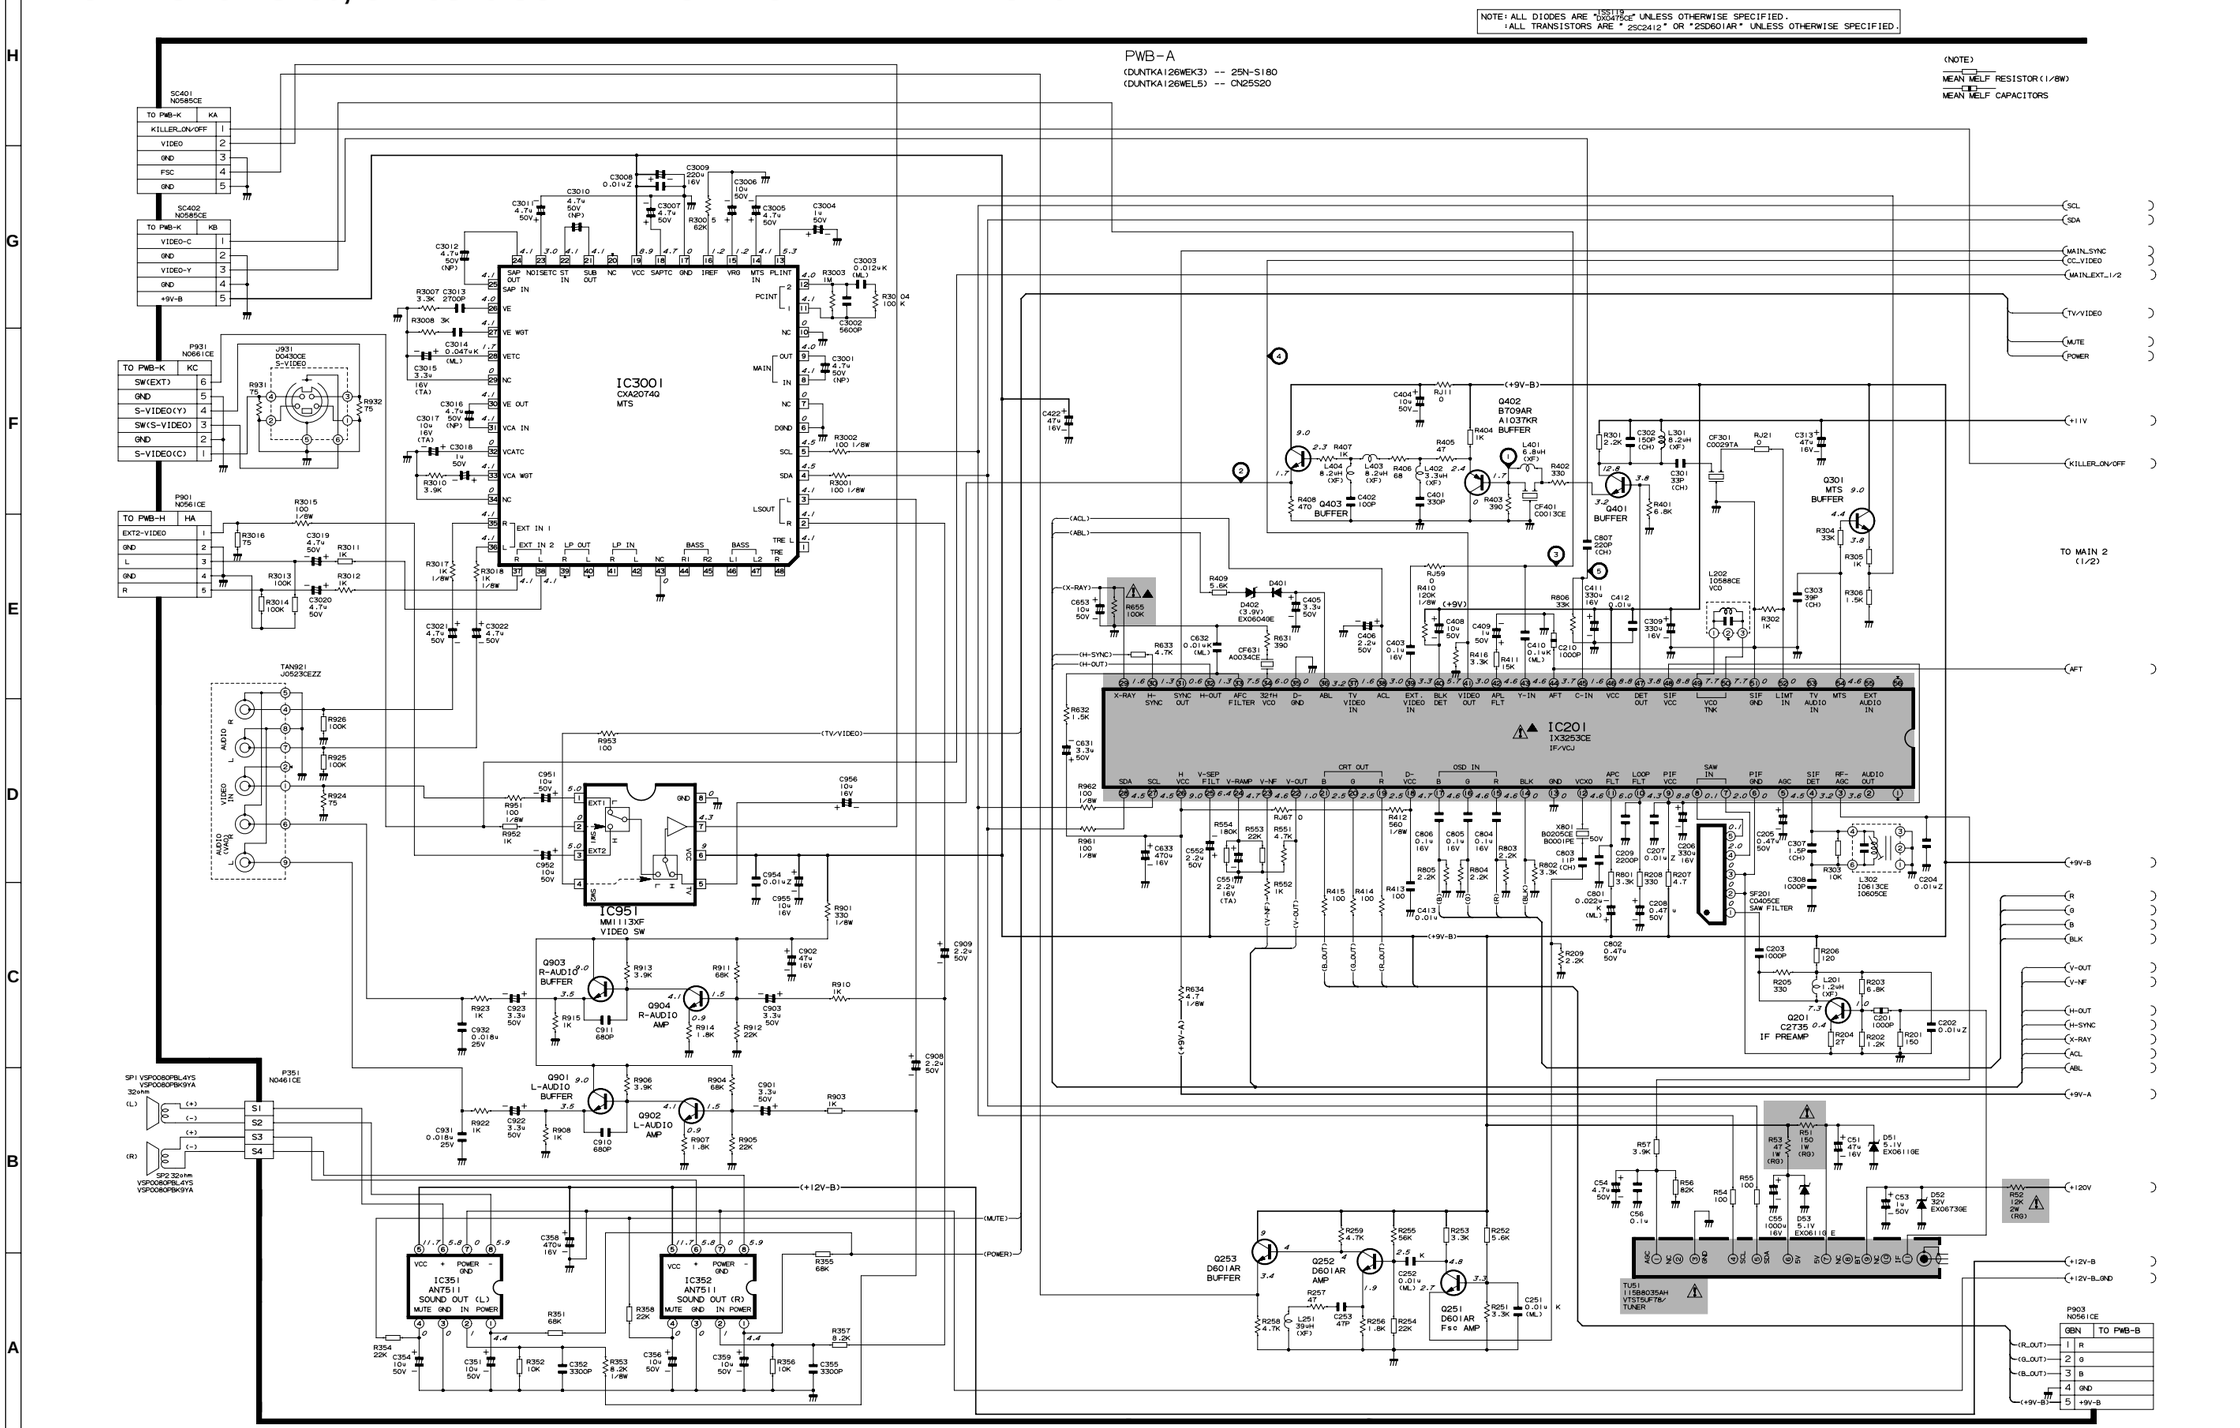

MODELS 25N-S180, CN25S20 SCHEMATIC DIAGRAM: MAIN-2 Unit

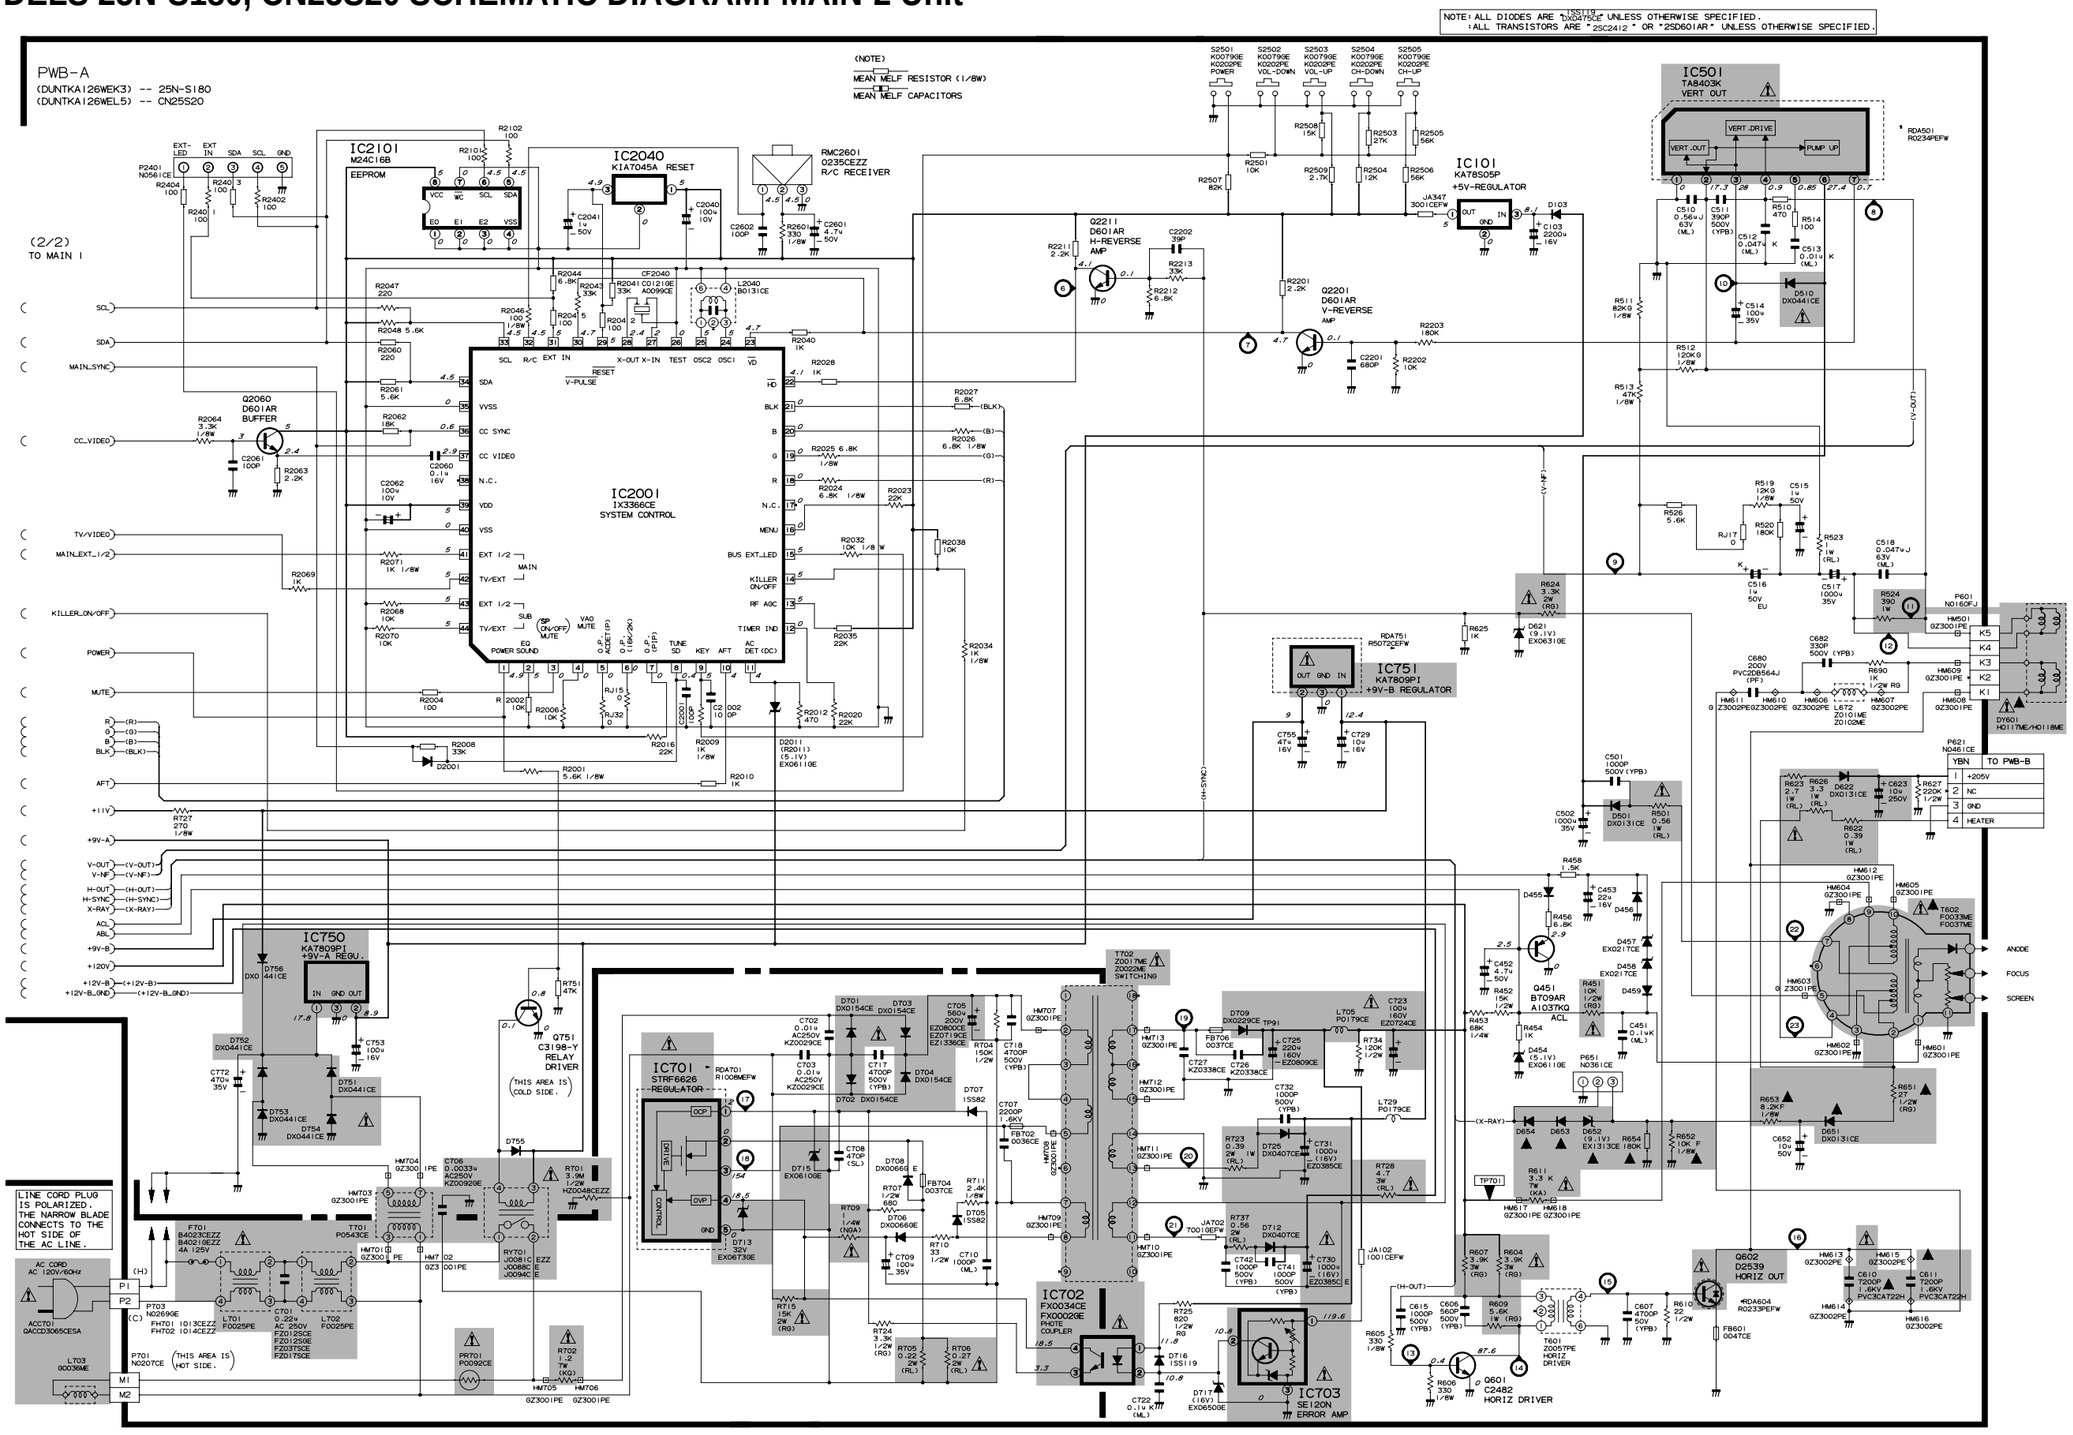

MODEL CN25S18 SCHEMATIC DIAGRAM: MAIN-1 Unit

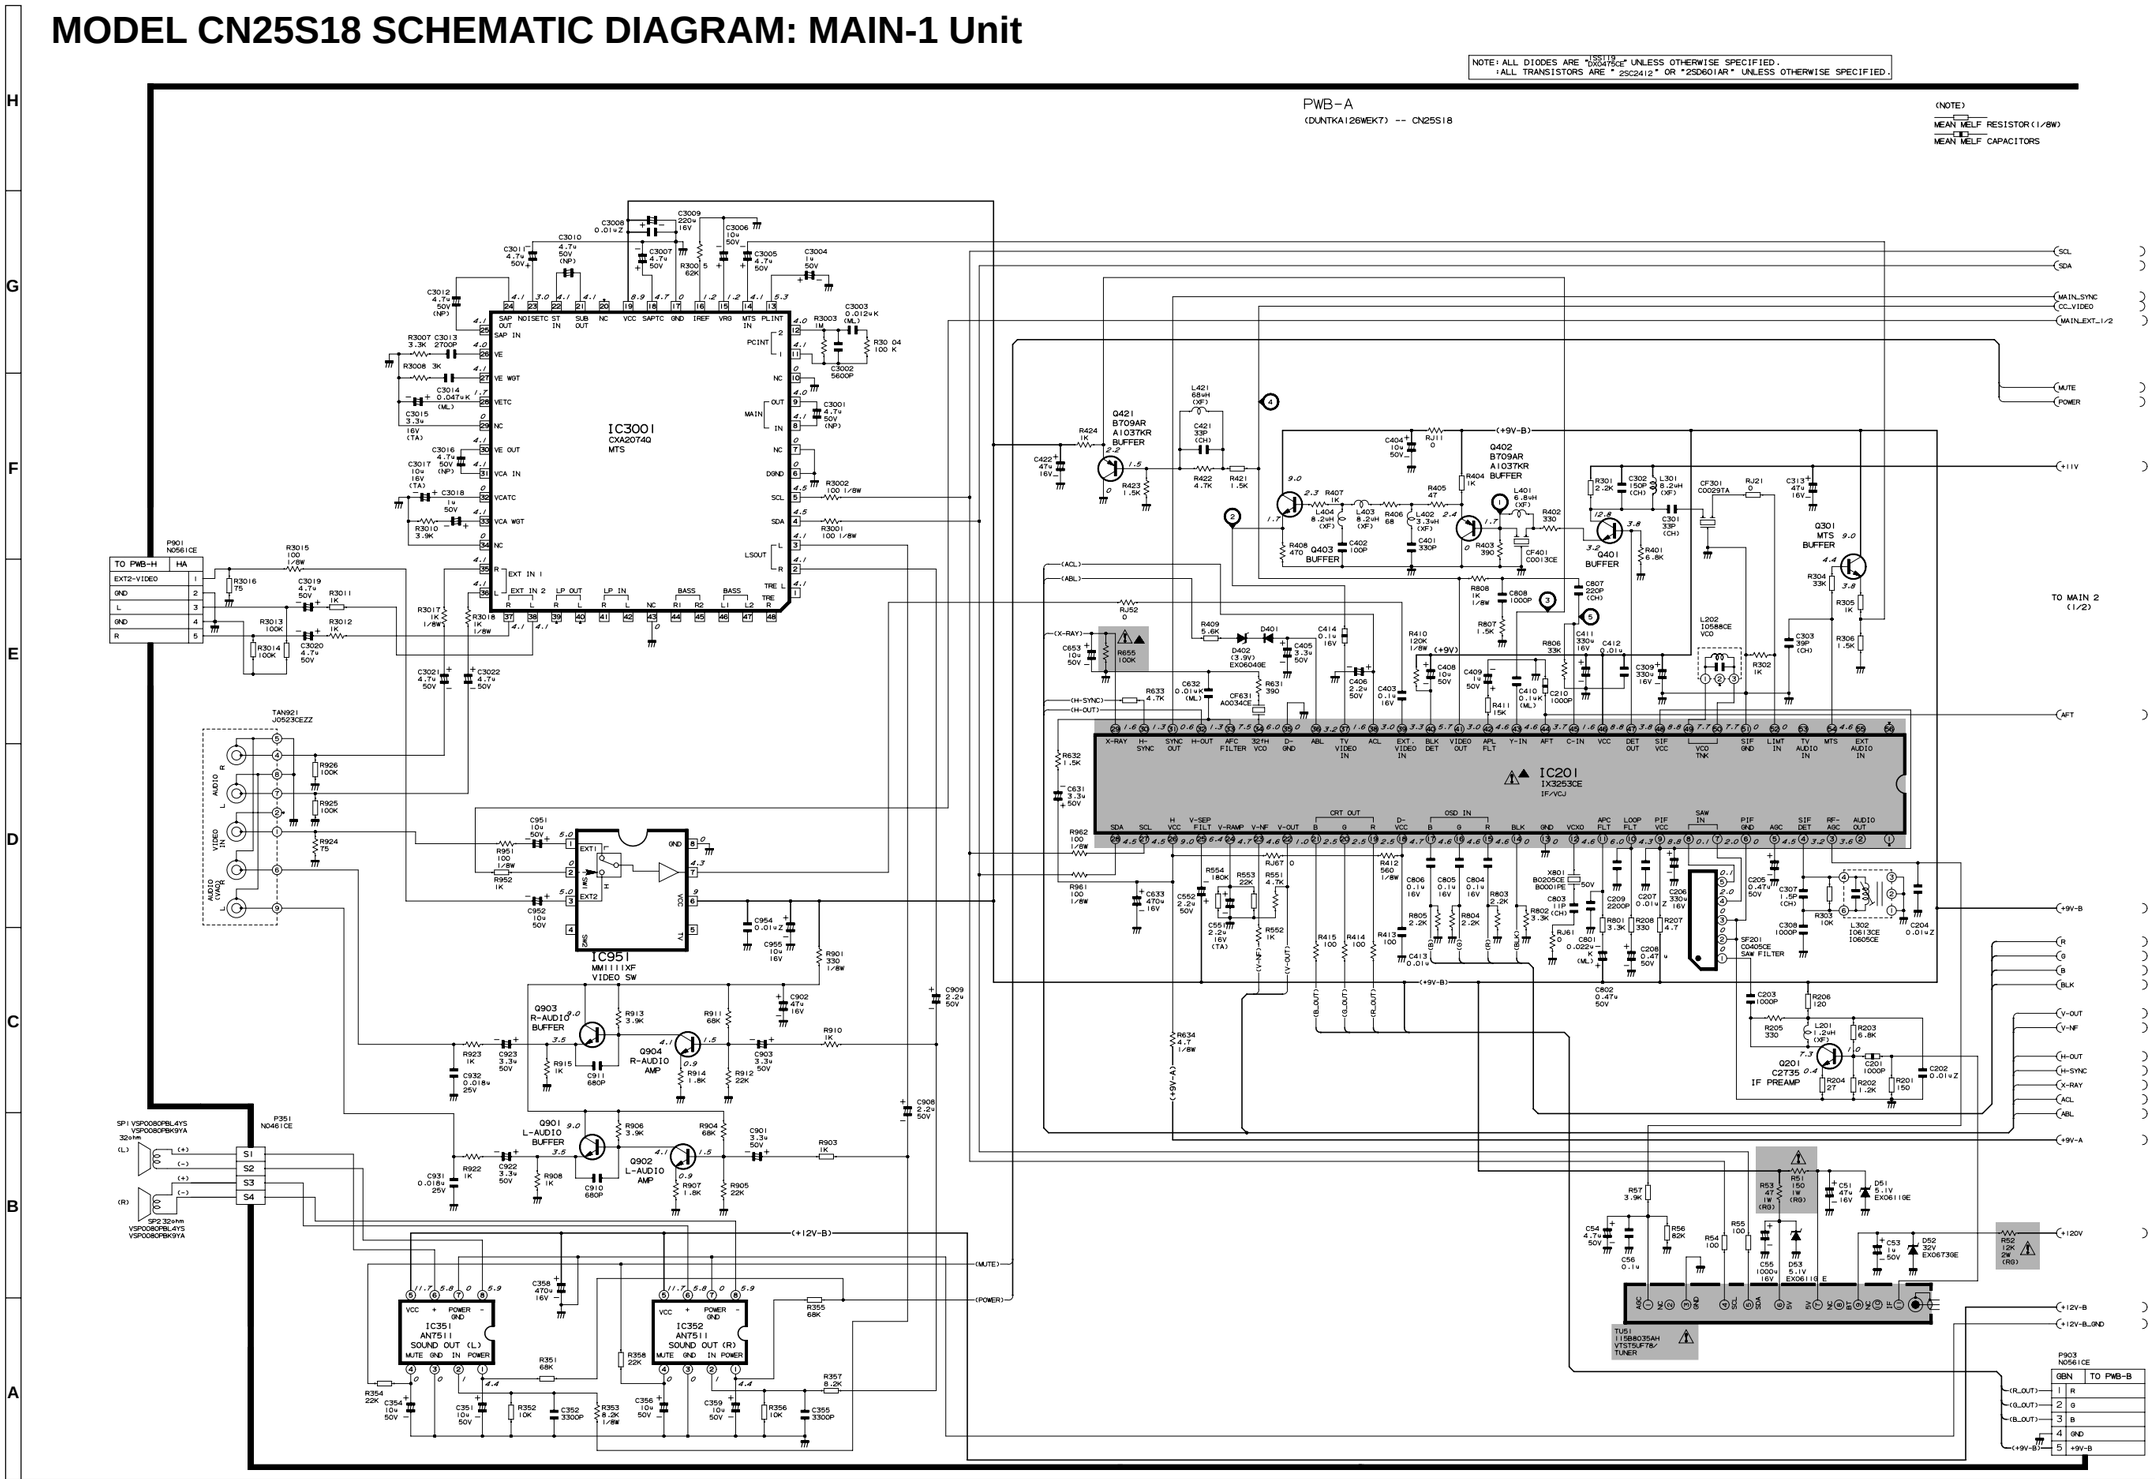

MODEL CN25S18 SCHEMATIC DIAGRAM: MAIN-2 Unit

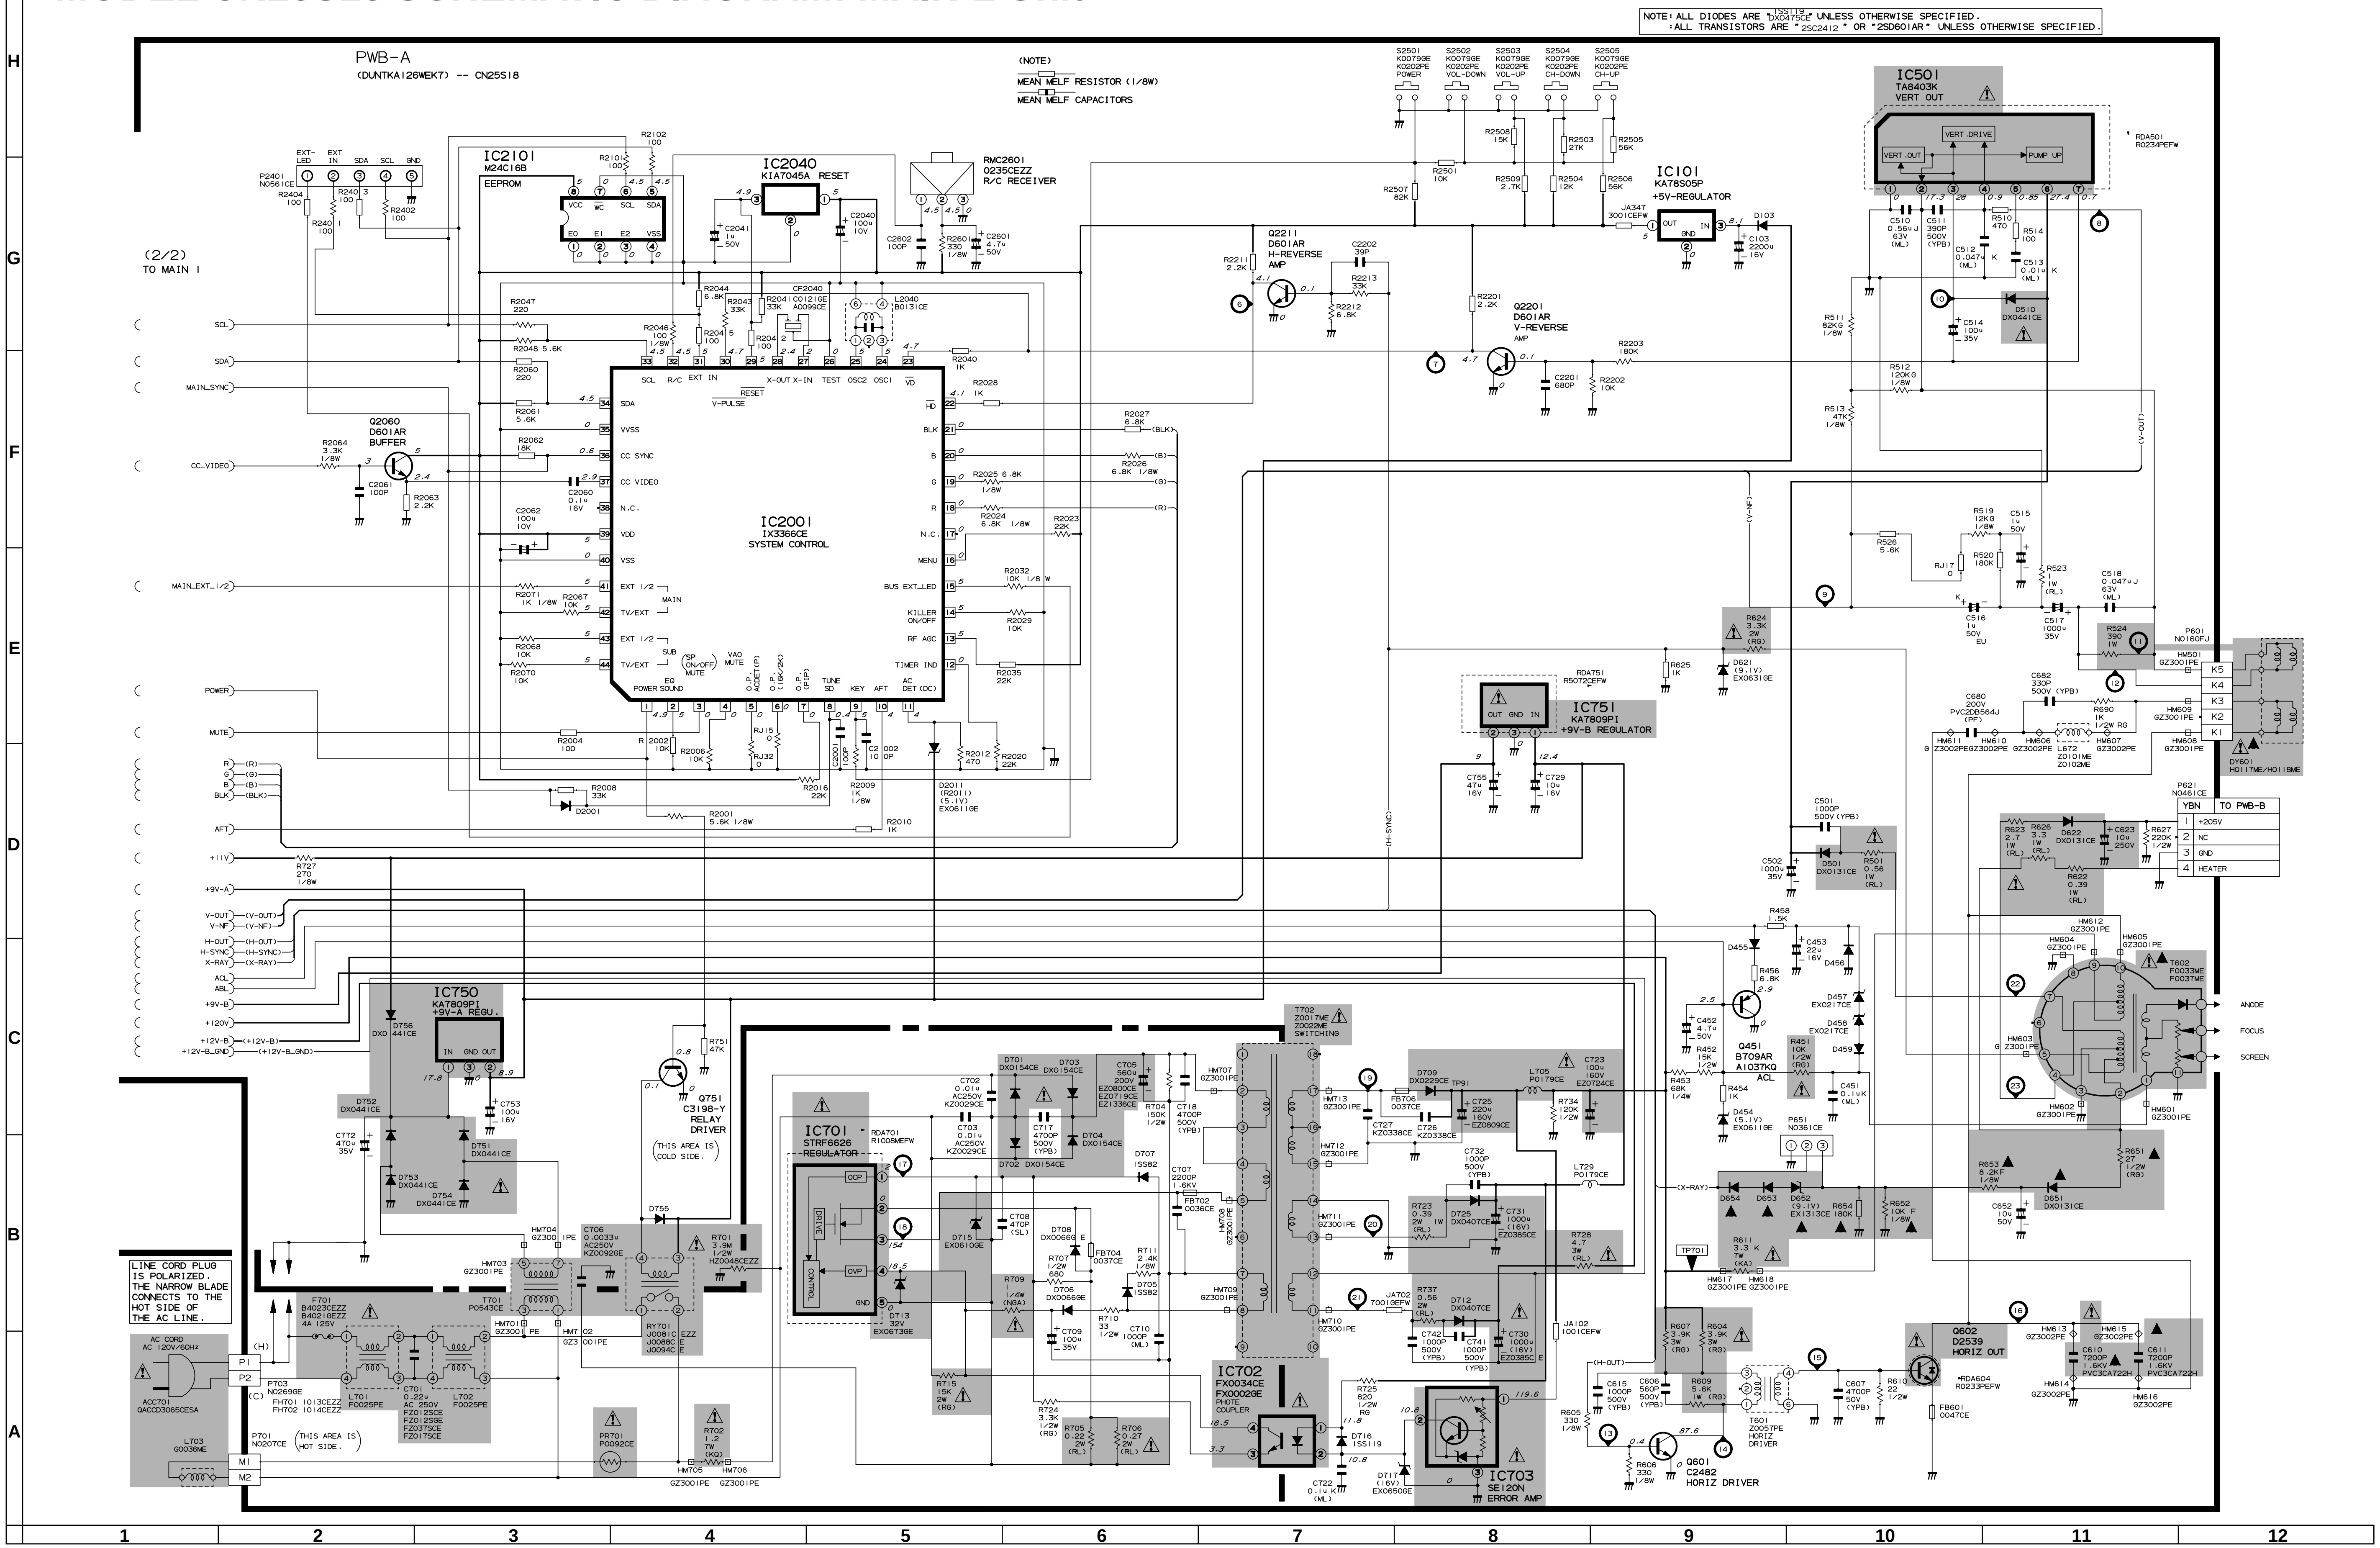
NOTE: ALL DIODES ARE "1SS119 DX0475CE" UNLESS OTHERWISE SPECIFIED.
:ALL TRANSISTORS ARE "2SC2412" OR "2SD601AR" UNLESS OTHERWISE SPECIFIED.
PWB-A
(DUNTKA126WEK7) -- CN25S18
(NOTE)
MEAN MELF RESISTOR (1/8W)
MEAN MELF CAPACITORS
(2/2)
TO MAIN 1
SCL
SDA
MAIN_SYNC
CC_VIDEO
MAIN_EXT_1/2
POWER
MUTE
R (R)
G (G)
B (B)
BLK (BLK)
AFT
+11V
+9V-A
V-OUT (V-OUT)
V-NF (V-NF)
H-OUT (H-OUT)
H-SYNC (H-SYNC)
X-RAY (X-RAY)
ACL
ABL
+9V-B
+120V
+12V-B (+12V-B)
+12V-B_GND (+12V-B_GND)
P2401 N0561CE
EXT-LED
EXT IN
SDA
SCL
GND
IC2101
M24C16B
EEPROM
IC2040
KIA7045A RESET
RMC2601
0235CEZZ
R/C RECEIVER
IC2001
IX3366CE
SYSTEM CONTROL
Q2060
D601AR
BUFFER
Q2211
D601AR
H-REVERSE AMP
Q2201
D601AR
V-REVERSE AMP
S2501 K0079GE K0202PE POWER
S2502 K0079GE K0202PE VOL-DOWN
S2503 K0079GE K0202PE VOL-UP
S2504 K0079GE K0202PE CH-DOWN
S2505 K0079GE K0202PE CH-UP
IC101
KA78S05P
+5V-REGULATOR
IC501
TA8403K
VERT OUT
VERT.DRIVE
VERT.OUT
PUMP UP
RDA501 R0234PEFW
IC751
KA7809PI
+9V-B REGULATOR
RDA751 R5072CEFW
IC750
KA7809PI
+9V-A REGU.
Q751
C3198-Y
RELAY DRIVER
(THIS AREA IS COLD SIDE.)
IC701
STRF6626
REGULATOR
RDA701 R1008MEFW
T702
Z0017ME
Z0022ME
SWITCHING
IC702
FX0034CE
FX0002GE
PHOTE COUPLER
IC703
SE120N
ERROR AMP
LINE CORD PLUG IS POLARIZED. THE NARROW BLADE CONNECTS TO THE HOT SIDE OF THE AC LINE.
AC CORD
AC 120V/60Hz
ACC701
QACCD3065CESA
F701
B4023CEZZ
B4021GEZZ
4A 125V
T701 P0543CE
RY701 J0081CEZZ J0088CEZZ J0094CEZZ
(THIS AREA IS HOT SIDE.)
PR701 P0092CE
Q451
B709AR
A1037KQ
ACL
Q601
C2482
HORIZ DRIVER
T601
Z0057PE
HORIZ DRIVER
Q602
D2539
HORIZ OUT
RDA604 R0233PEFW
T602
F0033ME
F0037ME
ANODE
FOCUS
SCREEN
DY601
H0117ME/H0118ME
P601 N0160FJ
P621 N0461CE
YBN TO PWB-B
1 +205V
2 NC
3 GND
4 HEATER
P651 N0361CE
TP701

SCHEMATIC DIAGRAM: CRT and FRONT AV Units

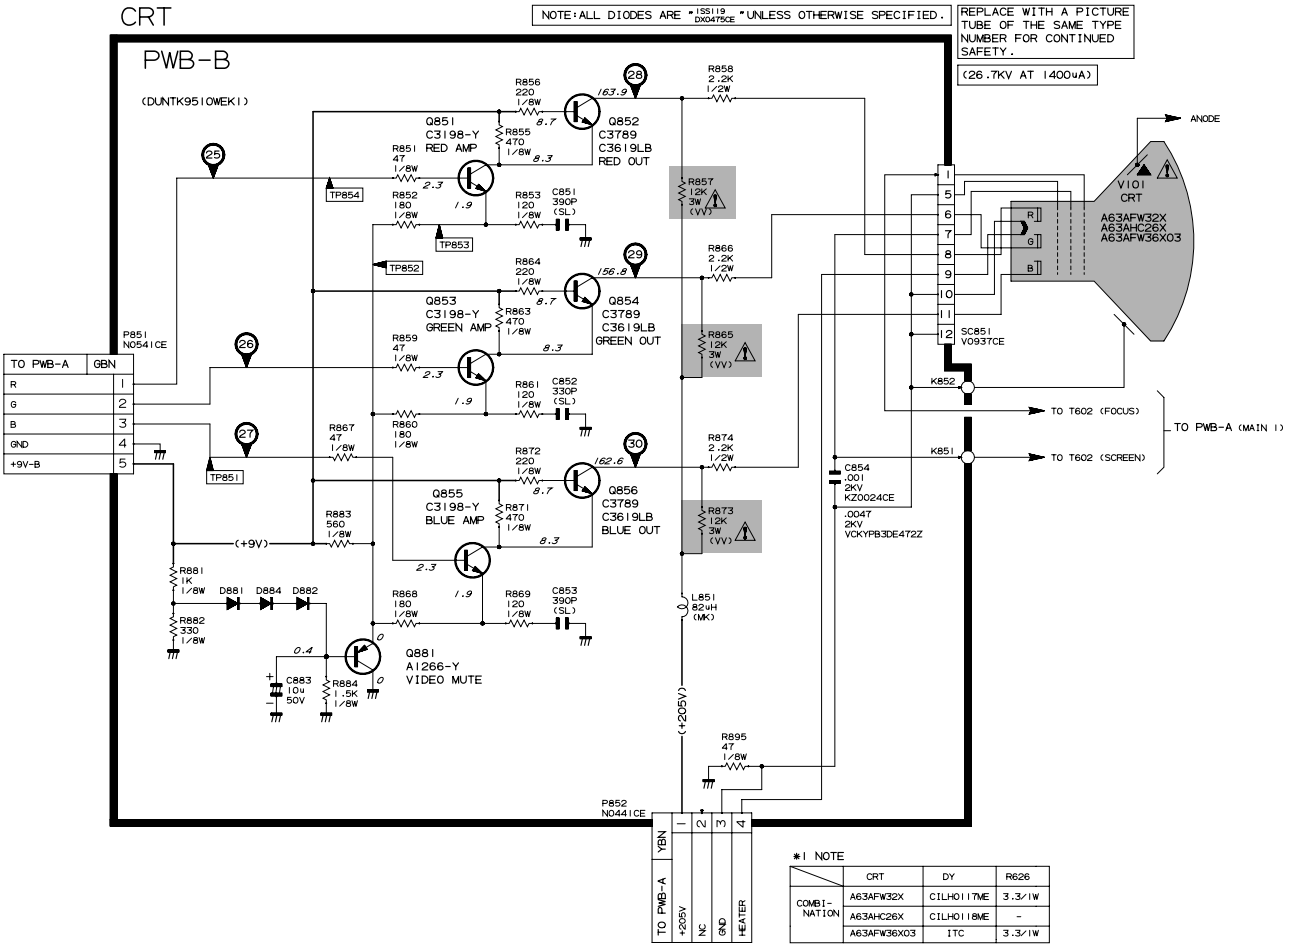

■ 25N-M100/180, CN25M10

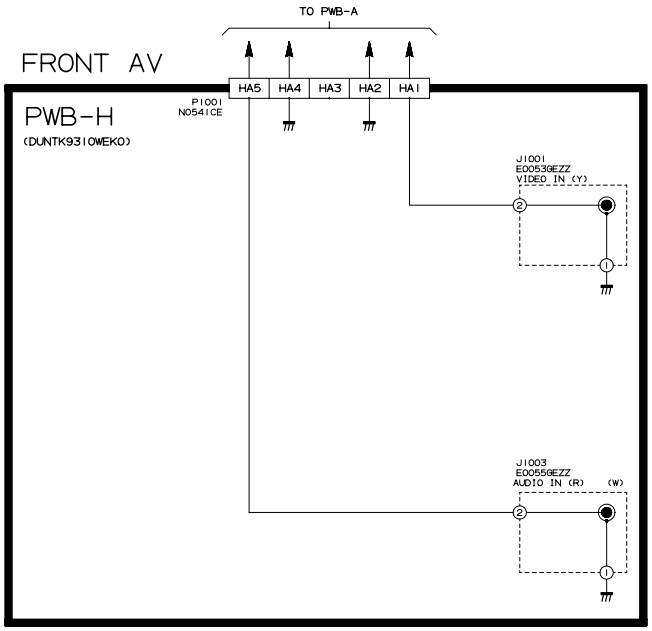

■ 25N-S100/180, CN25S18/20

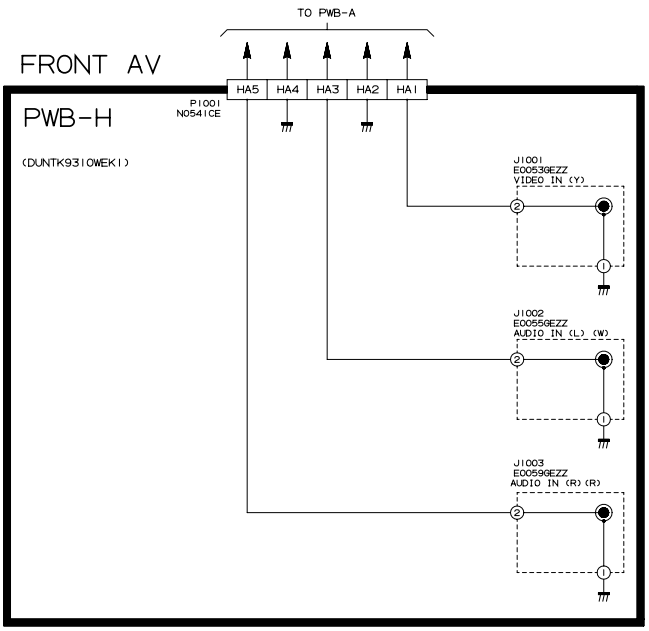

MODEL 25N-S100 SCHEMATIC DIAGRAM: S-VIDEO Unit

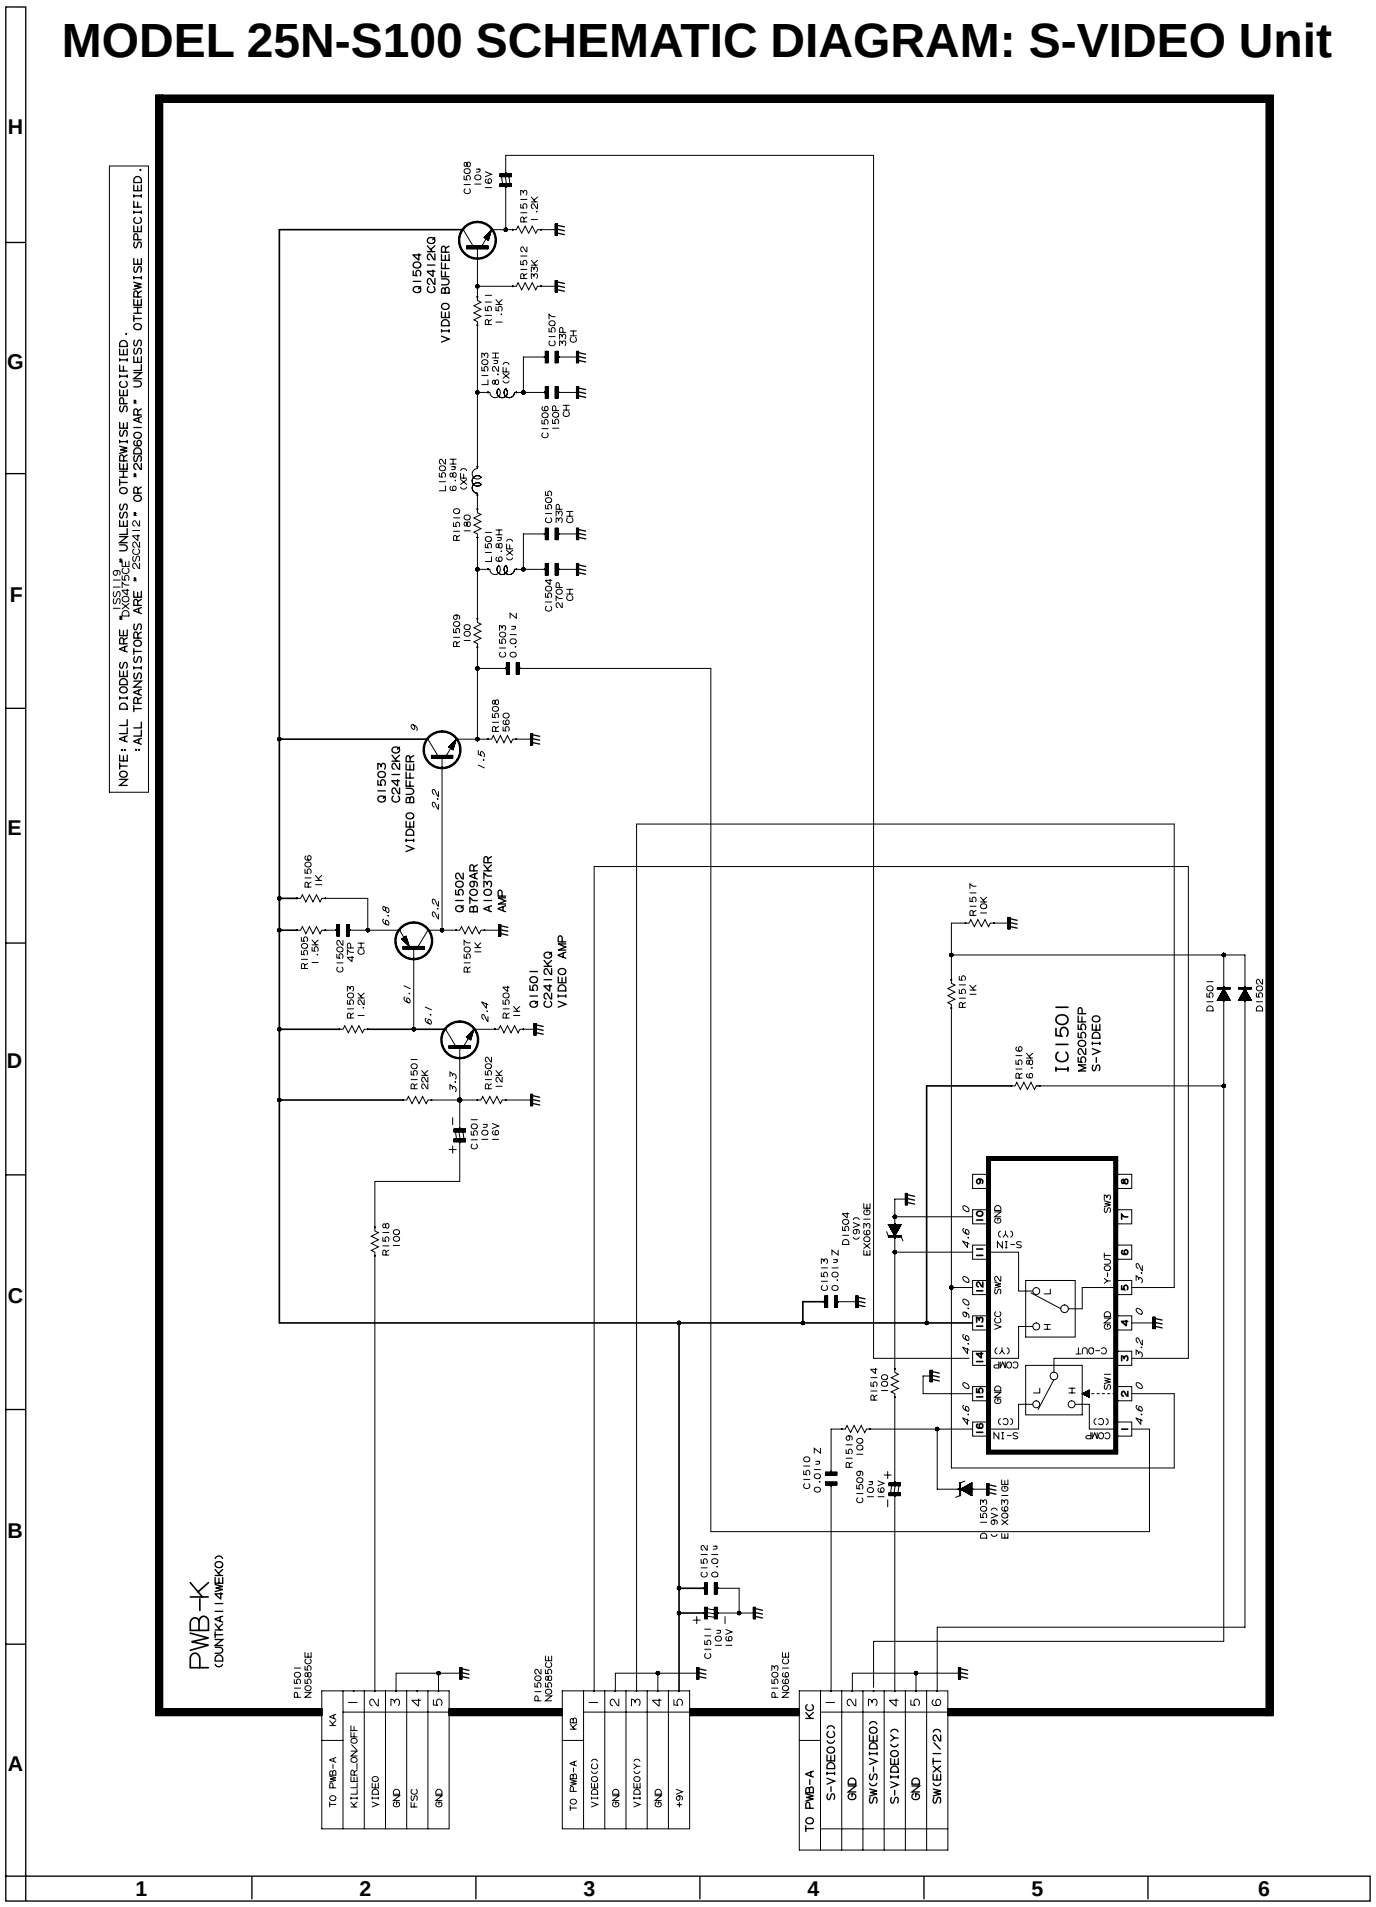

MODELS 25N-S180, CN25S20 SCHEMATIC DIAGRAM: DIGICOM/S-VIDEO Unit

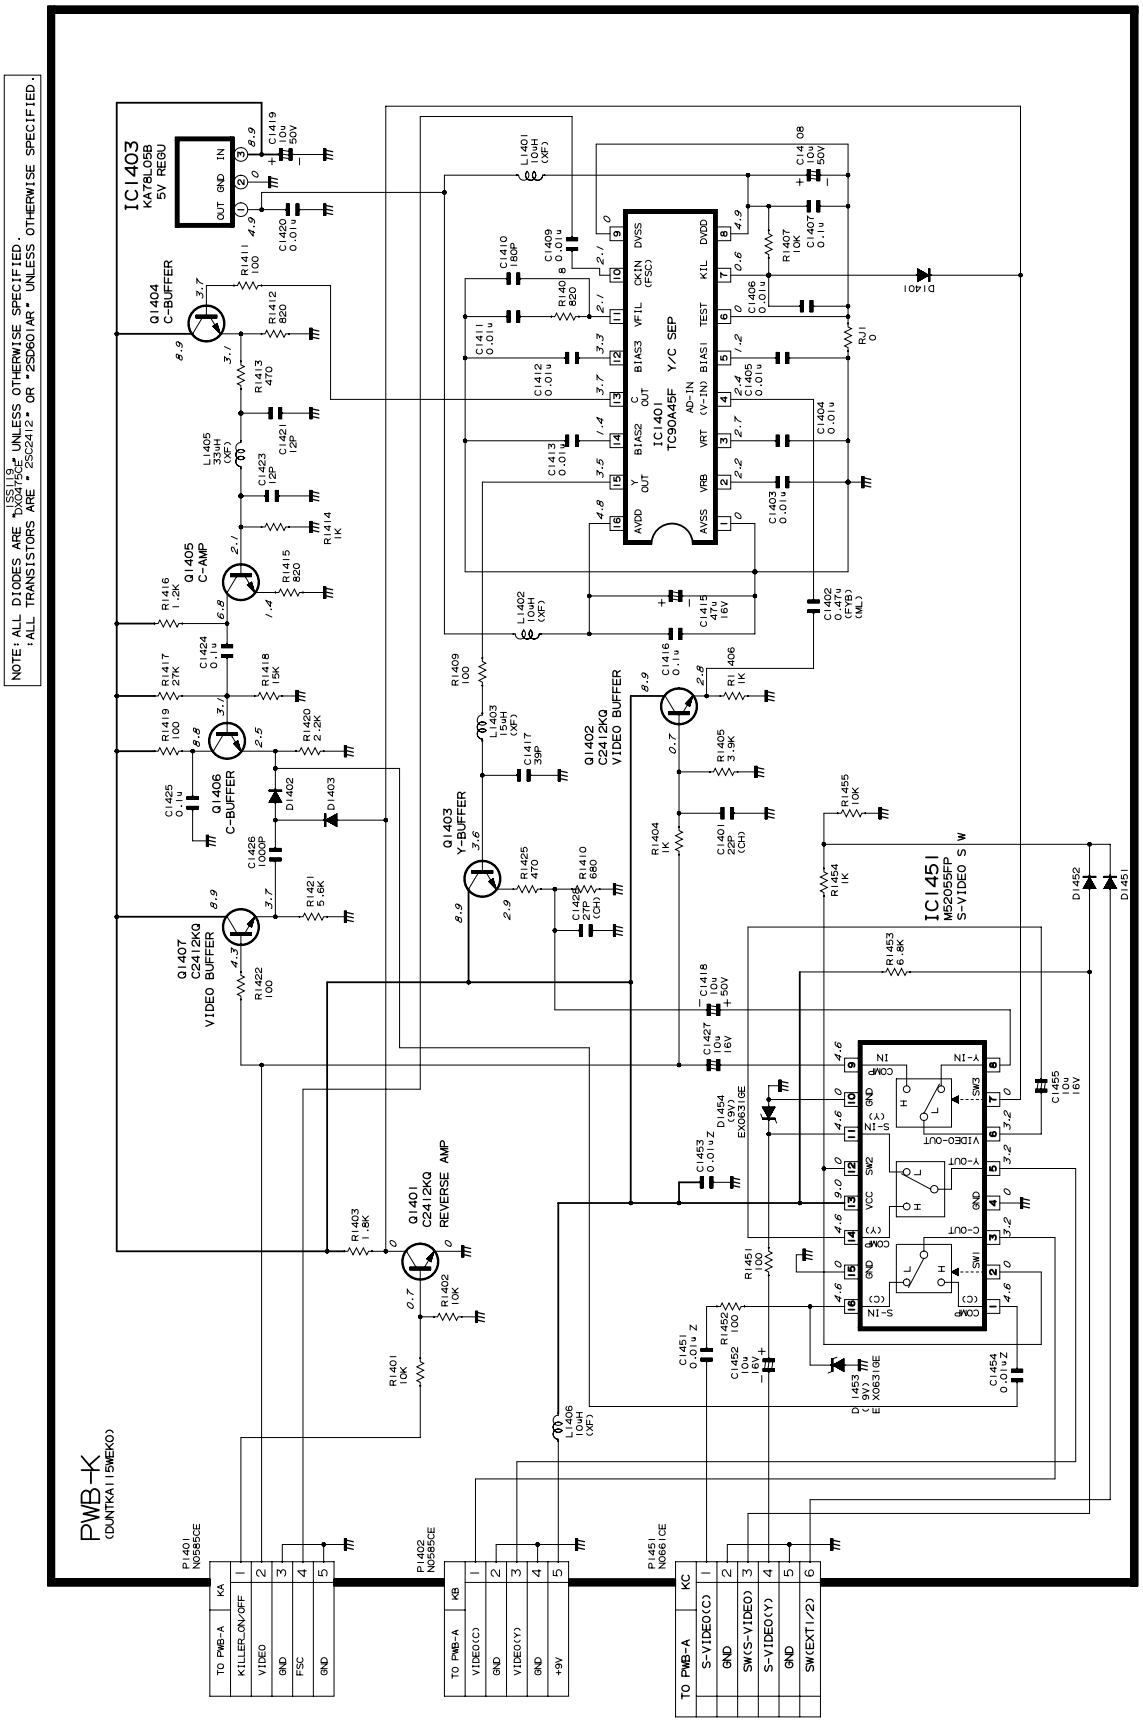

PRINTED WIRING BOARD ASSEMBLIES

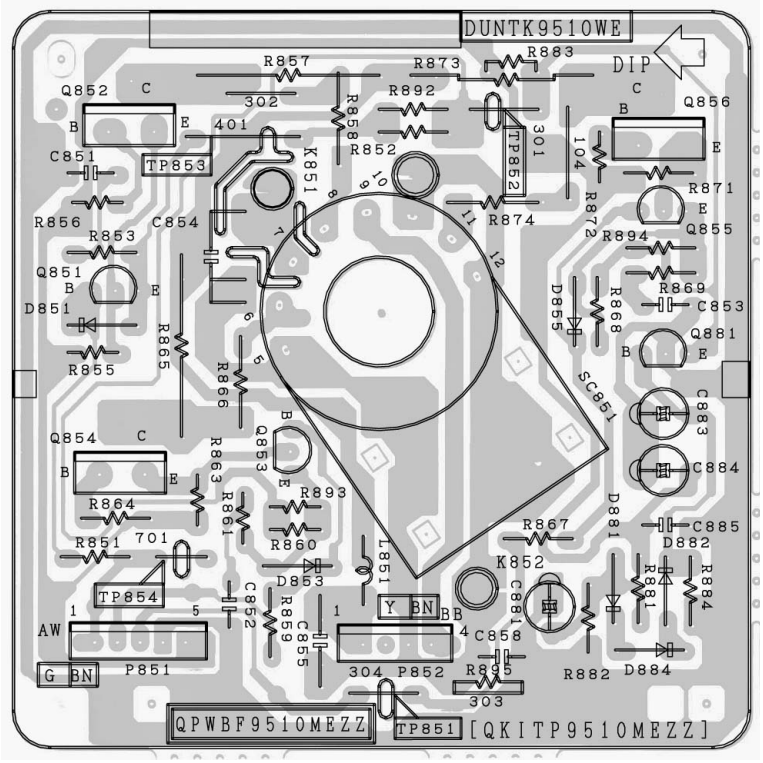

PWB-B: CRT Unit (Wiring Side)

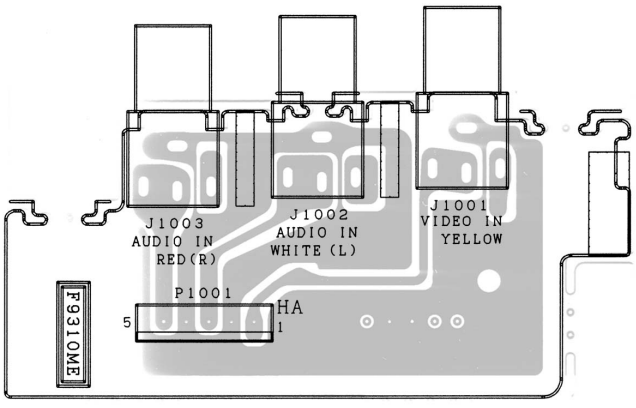

PWB-H: FRONT AV Unit (Wiring Side)

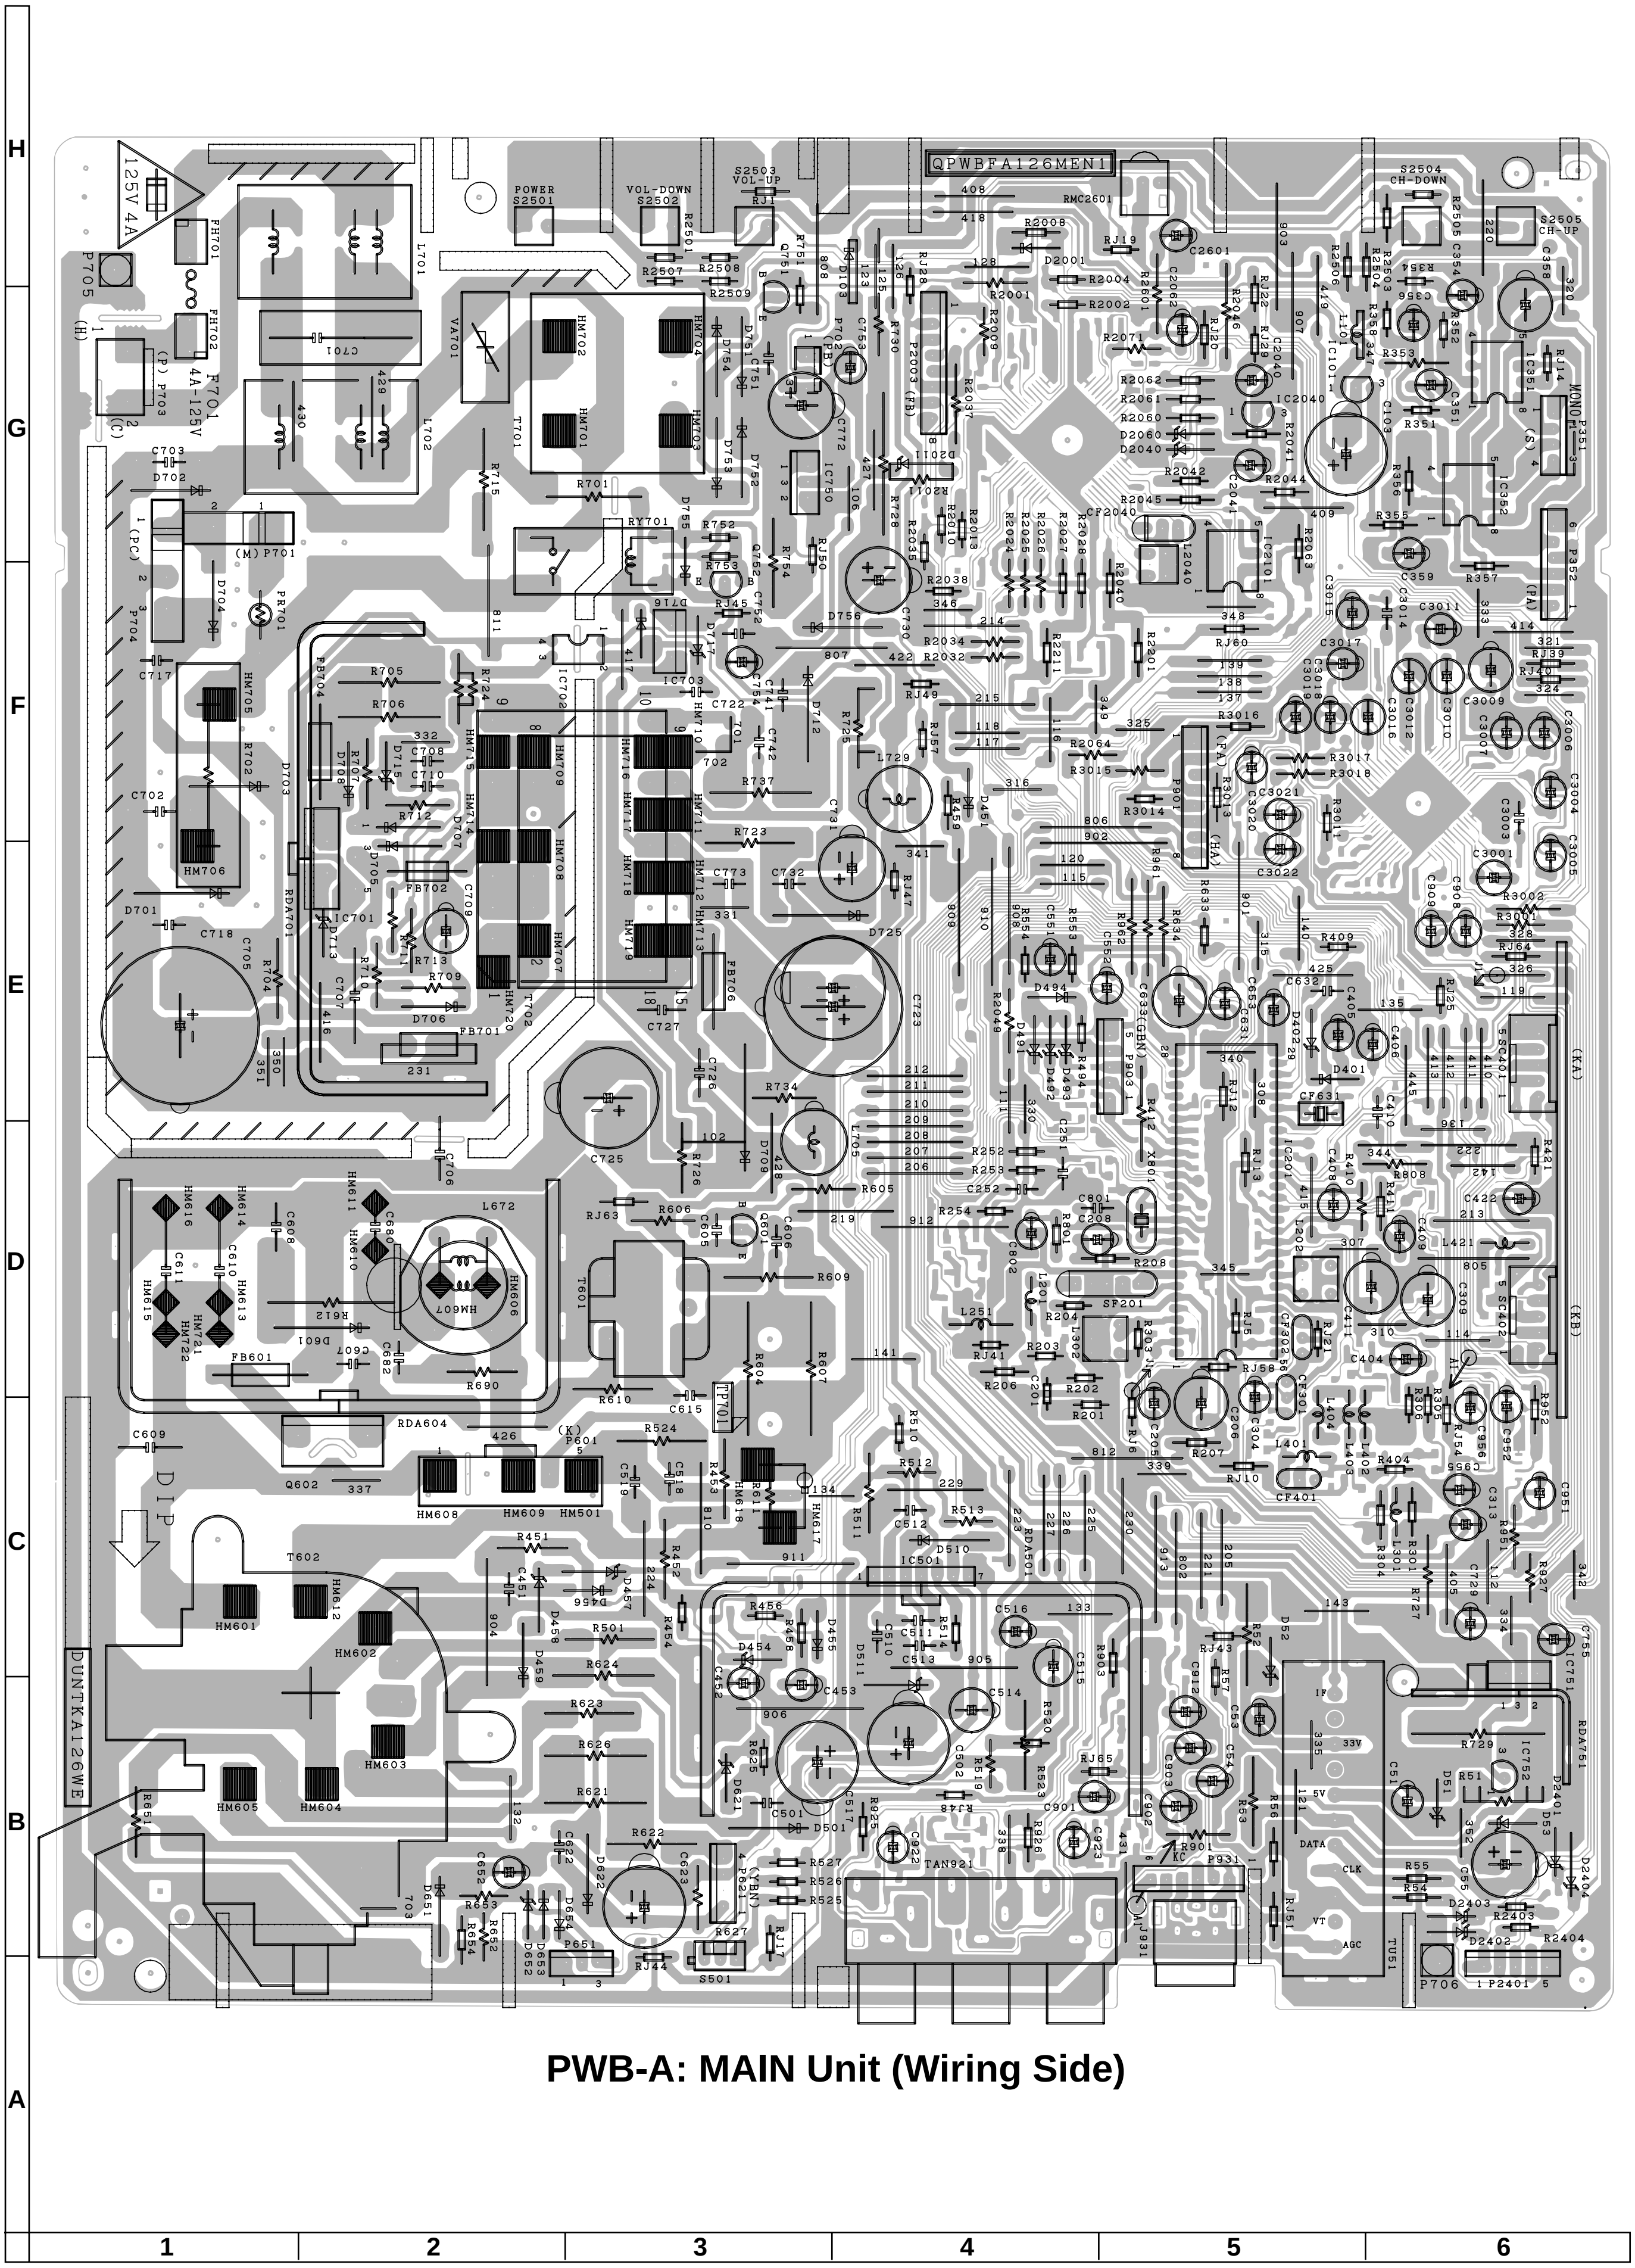

PWB-A: MAIN Unit (Wiring Side)

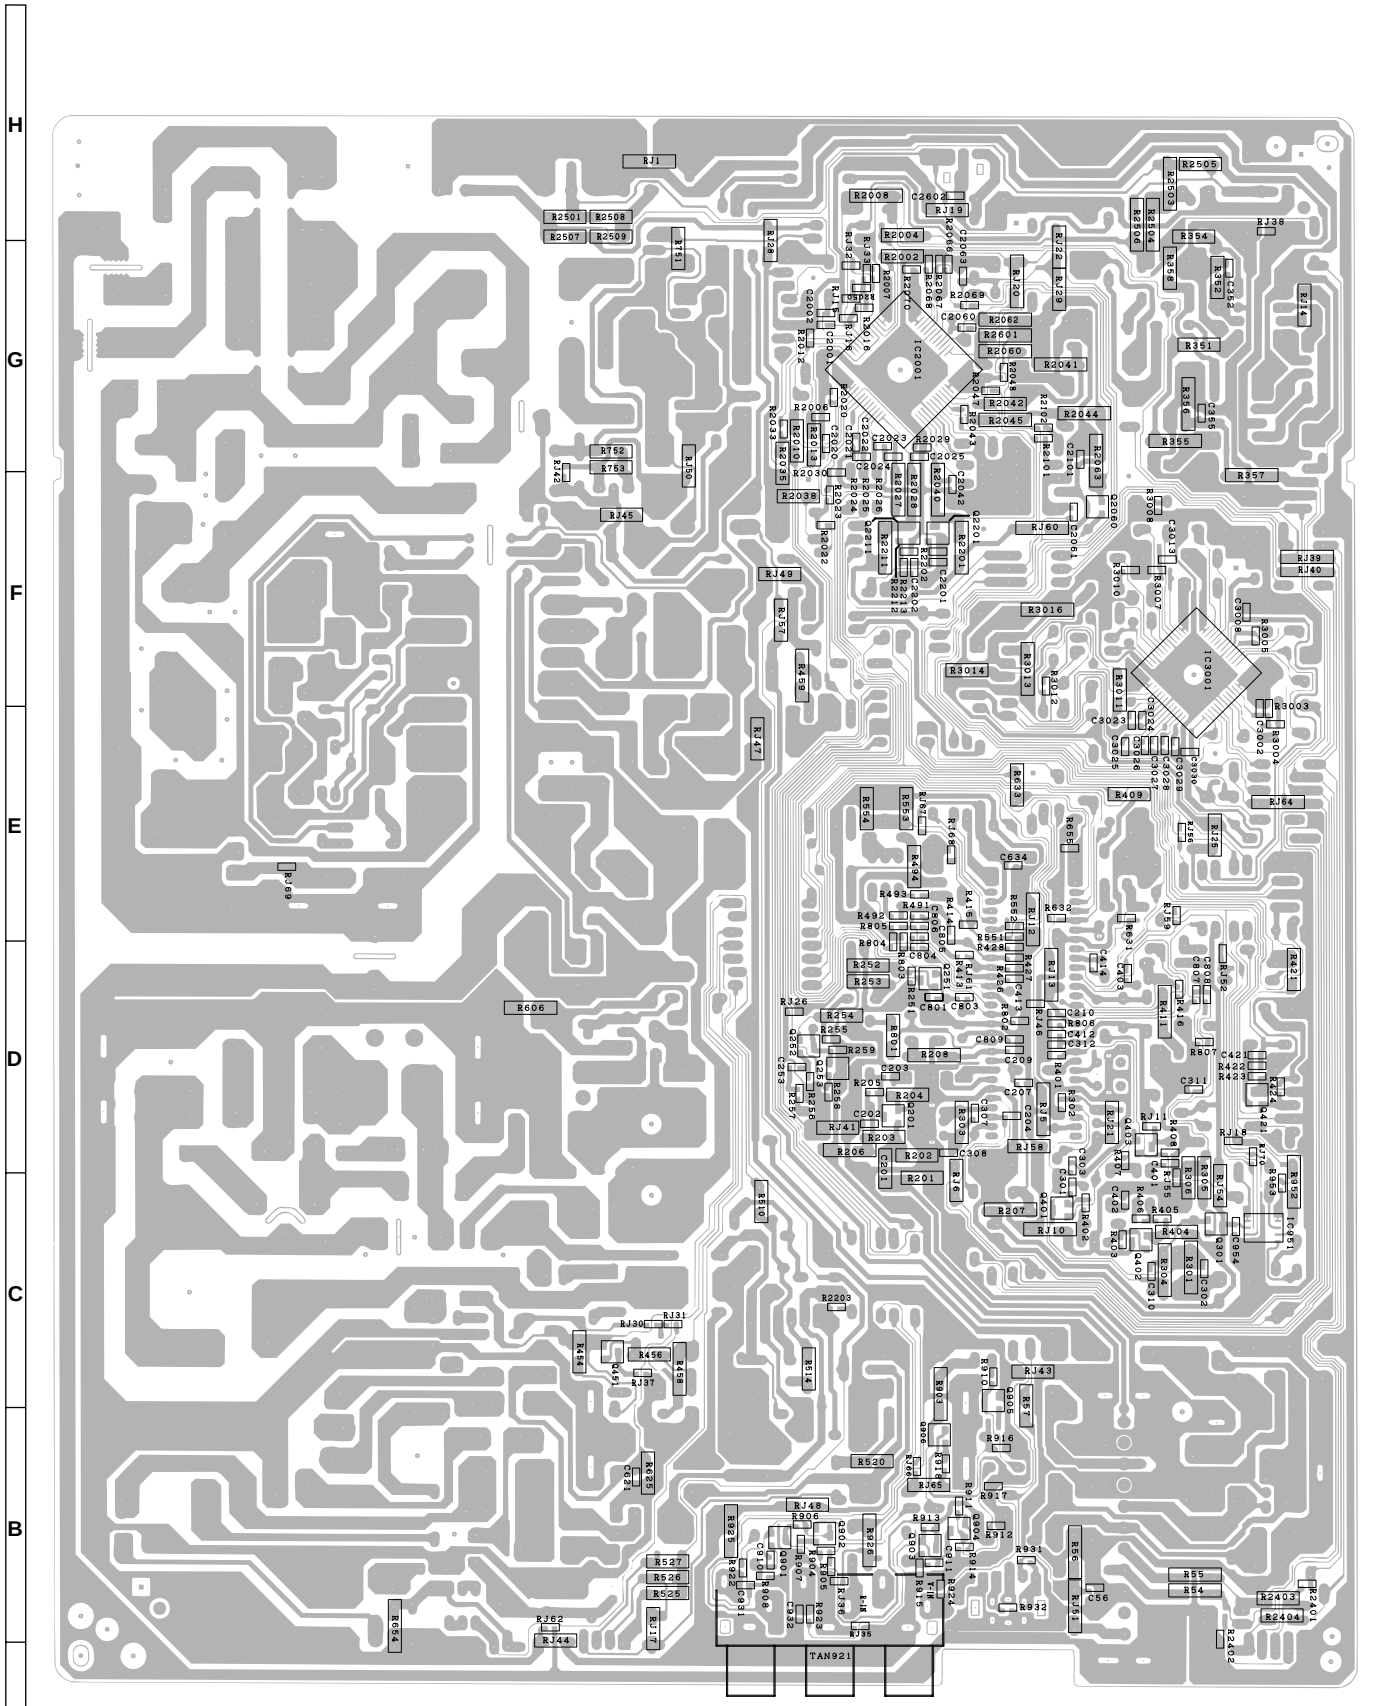

PWB-A: MAIN Unit (Chip Parts Side)

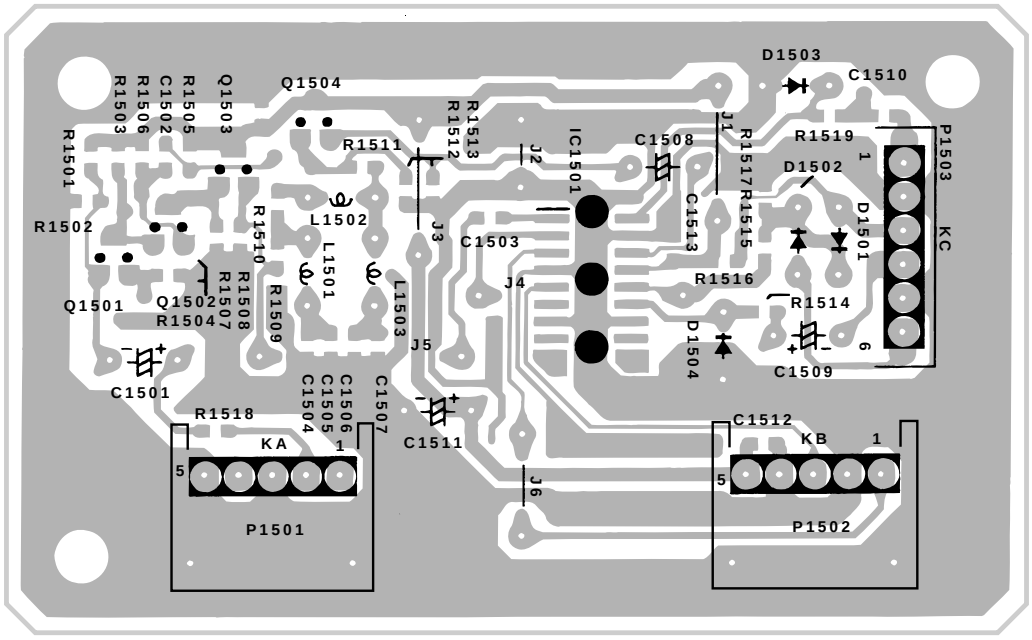

PWB-K: S-VIDEO Unit (Wiring Side)
(Only for 25N-S100)

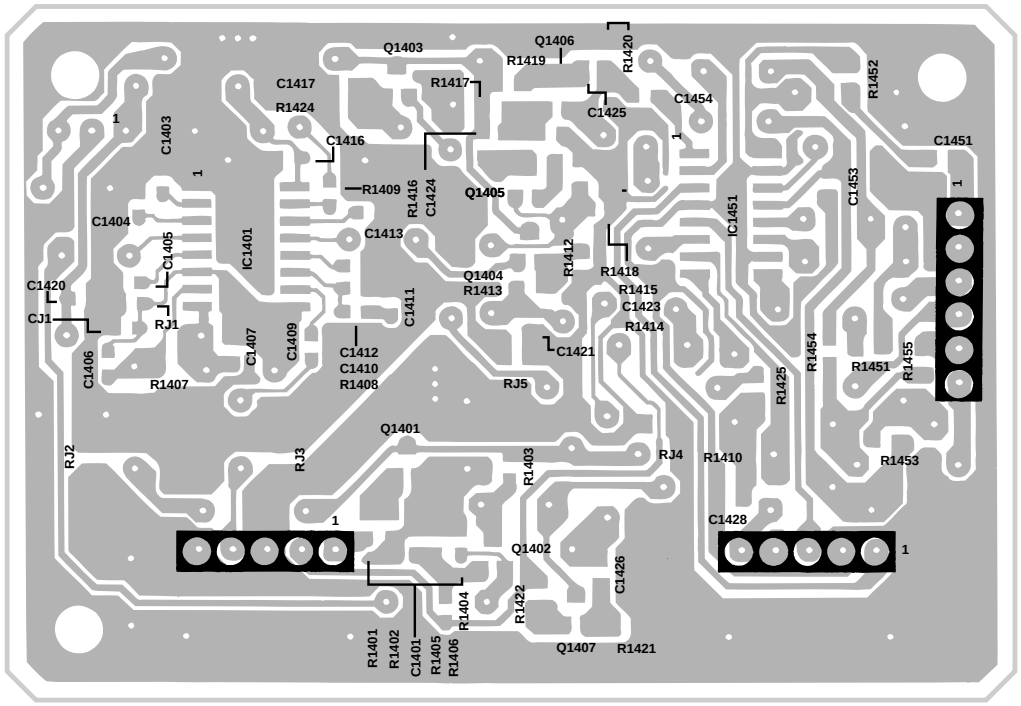

PWB-K: DIGICOM/S-VIDEO Unit (Wiring Side)
(Only for 25N-S180, CN25S20)

PARTS LIST

PARTS REPLACEMENT

Replacement parts which have these special safety characteristics identified in this manual; electrical components having such features are identified by ⚠ and shaded areas in the Replacement Parts Lists and Schematic Diagrams. The use of a substitute replacement part which dose no have the same safety characteristic as the factory recommended replacement parts shown in this service manual may create shock, fire or other hazards.

"HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following informations.

1. MODEL NUMBER
2. REF. NO.
3. PART NO.
4. DESCRIPTION

in **USA**: Contact your nearest SHARP Parts Distributor to order. For location of SHARP Parts Distributor, Please call Toll-Free; 1-800-BE-SHARP

LISTE DES PIECES

CHANGE DES PIECES

Les pi`eces de rechange qui pr élelesentent ces caract éleristiques sp éleciales de s élecurit éle, sont identifi élees dans ce manuel : les pi`eces élelectriques qui pr élesentent ces particularit éles, sont rep éler élee par la marque ⚠ et sont hachur élees dans les listes de pi`eces et dans les diagrammes sch élematiques.
La substitution d'une pi`ece de rechange par une autre qui ne pr éLesente pas les m éoemes caract éLeristiques de s élecurit éle que la pi`ece recommand élee parl'usine et dans ce manuel de service, peut provoquer une éLelectrocution, un incendie ou toutautre sinistre.

"COMMENT COMMANDER LES PIECES DE RECHANGE"

Pour que votre commande soit rapidement et correctement remplie, veuillez fournir les renseignements suivants.

1. NUMERO DU MODELE
2. NO. DE REF
3. NO. DE PIECE
4. DESCRIPTION

in **CANADA**: Contact SHARP Electronics of Canada Limited
Phone (416) 890-2100

★ MARK: SPARE PARTS-DELIVERY SECTION

▲ MARK: X- RAY RELATED PARTS

★MARQUE: SECTION LIVRAISON DES PIECES DE RECHANGE

▲ MARQUE: PIECES RELATIVE AUX RAYONS X

PICTURE TUBE

Ref. No.	Part No.	★	Description	Code
▲⚠ V101	VB63AFW32X/*S	M	CRT (DY601:H0117ME)	CK
	or			
	VB63AHC26X/*S		CRT (DY601:H0118ME)	
	or			
	VB63AFW36031E		CRT (I.T.C.)	
▲⚠ DY601	RCiLH0117MEZZ	M	DY (CRT:A63AFW32X)	BA
	or			
	RCiLH0118MEZZ		DY (CRT:A63AHC26X)	
⚠ L703	RCiLG0036MEZZ	M	Degaussing Coil	BB
	MSPRT0002MEZZ	M	Spring for CRT	AA
	PMAGF3003CEZZ	M	Magnet Ass'y	AK
	QEARC2508MEZZ	M	Grounding Part	AF

	CRT	DY	R626
COMBI-NATION	A63AFW32X	CILH0117ME	3.3/1W
	A63AHC26X	CILH0118ME	-
	A63AFW36X03	ITC	3.3/1W

PRINTED WIRING BOARD ASSEMBLIES
(NOT REPLACEMENT ITEM)

PWB-A	DUNTKA126WEK0	–	MAIN Unit (25N-M100)	—
PWB-A	DUNTKA126WEK1	–	MAIN Unit (25N-M180)	—
PWB-A	DUNTKA126WEK2	–	MAIN Unit (25N-S100)	—
PWB-A	DUNTKA126WEK3	–	MAIN Unit (25N-S180)	—
PWB-A	DUNTKA126WEK6	–	MAIN Unit (CN25M10)	—
PWB-A	DUNTKA126WEK7	–	MAIN Unit (CN25S18)	—
PWB-A	DUNTKA126WEL5	–	MAIN Unit (CN25S20)	—
PWB-B	DUNTK9510WEK1	–	CRT Unit	—
PWB-H	DUNTK9310WEK0	–	FRONT AV Unit (25N-M100/180, CN25M10)	—
PWB-H	DUNTK9310WEK1	–	FRONT AV Unit (25N-S100/180, CN25S18/20)	—
PWB-K	DUNTKA114WEK0	–	S-VIDEO Unit (25N-S100)	—
PWB-K	DUNTKA115WEK0	–	DIGICOM/S-VIDEO Unit (25N-S180, CN25S20)	—

Ref. No.	Part No.	★	Description	Code

PWB-A: DUNTKA126WEK0/K1 (25N-M100/25N-M180)
PWB-A: DUNTKA126WEK2/K3 (25N-S100/25N-S180)
PWB-A: DUNTKA126WEK6 (CN25M10)
PWB-A: DUNTKA126WEK7/L5 (CN25S18/CN25S20)
MAIN UNIT

TUNER

NOTE: THE PARTS HERES SHOWN ARE SUPPLIED AS AN ASSEMBLY BUT NOT INDEPENEDENTLY.

⚠ TU51	VTU115B8035AH	M	Tuner	AU
	or			
	VTUVTST5UF78S			

INTEGRATED CIRCUITS

IC101	VHiKA78S05P-1	J	KA78S05P	AD
▲⚠ IC201	RH-iX3253CEZZ	J	TA1268AN	AV
IC351	VHiAN7511//-1	J	I.C. (25N-S100/180, CN25S18/20)	AK
IC352	VHiAN7511//-1	J	I.C.	AK
⚠ IC501	VHiTA8403K/-1	J	TA8403K	AL
⚠ IC701	VHiSTRF66261E	J	STR-F6626	AX
⚠ IC702	RH-FX0034CEZZ	J	PC817	AE
	or			
	RH-FX0002GEZZ			
⚠ IC703	VHiSE120N//-1	J	SE120N	AG
⚠ IC750	VHiKA7809Pi-1	M	KA7809PI	AE
⚠ IC751	VHiKA7809Pi-1	M	KA7809PI	AE
IC951	VHiMM1111XF1E	J	MM1111XFBE (CN25S18)	AE
IC951	VHiMM1113XF1E	J	MM1113XFBE (25N-S100/180, CN25S20)	AE
IC2001	RH-iX3366CEZZ	M	TMPA8700CPF-164	AT
IC2040	VHiKiA7045A-1	J	KIA7045A	AD
IC2101	VHiM24C16B/-1	J	M24C16-BN6	AG
IC3001	VHiCXA2074Q-1	J	CXA2074Q (25N-S100/180, CN25S18/20)	AY

PWB-A: DUNTKA126WEK0/K1 (25N-M100/25N-M180)
PWB-A: DUNTKA126WEK2/K3 (25N-S100/25N-S180)
PWB-A: DUNTKA126WEK6 (CN25M10)
PWB-A: DUNTKA126WEK7/L5 (CN25S18/CN25S20)
MAIN UNIT (Continued)

TRANSISTORS

You can substitute "VS2SC2412-C-1" for "VS2SD601AR/-1".

Ref. No.	Part No.	★	Description	Code
Q201	VS2SC2735//1E	J	2SC2735	AC
Q251	VS2SD601AR/-1	J	2SD601AR (25N-S180, CN25S20)	AC
Q252	VS2SD601AR/-1	J	2SD601AR (25N-S180, CN25S20)	AC
Q253	VS2SD601AR/-1	J	2SD601AR (25N-S180, CN25S20)	AC
Q301	VS2SD601AR/-1	J	2SD601AR (25N-S100/180, CN25S18/20)	AC
Q401	VS2SD601AR/-1	J	2SD601AR	AC
Q402	VS2SB709AR/-1 or VS2SA1037KR-1	J	2SB709AR	AC
Q403	VS2SD601AR/-1	J	2SD601AR	AC
Q421	VS2SB709AR/-1 or VS2SA1037KR-1	J	2SB709AR (25N-M100/180, CN25M10, CN25S18)	AC
Q451	VS2SB709AR/-1 or VS2SA1037KQ-1	J	2SB709AR	AC
Q601	VS2SC2482//-1	J	2SC2482	AD
⚠ Q602	VS2SD2539//1E	J	2SD2539	AP
Q751	VS2SC3198-Y-1	J	2SC3198 (Y)	AA
Q901	VS2SD601AR/-1	J	2SD601AR (25N-S180, CN25S18/20)	AC
Q902	VS2SD601AR/-1	J	2SD601AR (25N-S180, CN25S18/20)	AC
Q903	VS2SD601AR/-1	J	2SD601AR (25N-S180, CN25S18/20)	AC
Q904	VS2SD601AR/-1	J	2SD601AR (25N-S180, CN25S18/20)	AC
Q2060	VS2SD601AR/-1	J	2SD601AR	AC
Q2201	VS2SD601AR/-1	J	2SD601AR	AC
Q2211	VS2SD601AR/-1	J	2SD601AR	AC

DIODES

You can substitute "RH-DX0475CEZZ" for "VHD1SS119//-1".

Ref. No.	Part No.	★	Description	Code
D51	RH-EX0611GEZZ	J	Zener Diode, 5.1V	AA
D52	RH-EX0673GEZZ	J	Zener Diode, 32V	AB
D53	RH-EX0611GEZZ	J	Zener Diode, 5.1V	AA
D103	VHD1SS119//-1	J	Diode (25N-M180, 25N-S100/180, CN25S18/20)	AB
D401	VHD1SS119//-1	J	Diode	AB
D402	RH-EX0604GEZZ	J	Zener Diode, 3.9V	AB
D454	RH-EX0611GEZZ	J	Zener Diode, 5.1V	AA
D455	VHD1SS119//-1	J	Diode	AB
D456	VHD1SS119//-1	J	Diode	AB
D457	RH-EX0217CEZZ	J	Zener Diode	AB
D458	RH-EX0217CEZZ	J	Zener Diode	AB
D459	VHD1SS119//-1	J	Diode	AB
⚠ D501	RH-DX0131CEZZ	J	Diode	AC
⚠ D510	RH-DX0441CEZZ	J	Diode	AC
D621	RH-EX0631GEZZ	J	Zener Diode, 9.1V	AA
⚠ D622	RH-DX0131CEZZ	J	Diode	AC
▲⚠ D651	RH-DX0131CEZZ	J	Diode	AC
▲⚠ D652	RH-EX1313CEZZ	M	Zener Diode, 9.1V	AB
▲⚠ D653	VHD1SS119//-1	J	Diode	AB
▲⚠ D654	VHD1SS119//-1	J	Diode	AB
⚠ D701	RH-DX0154CEZZ	J	Diode	AC
⚠ D702	RH-DX0154CEZZ	J	Diode	AC
⚠ D703	RH-DX0154CEZZ	J	Diode	AC
⚠ D704	RH-DX0154CEZZ	J	Diode	AC
D705	VHD1SS82///1A	J	Diode	AC
D706	RH-DX0066GEZZ	J	Diode	AB
D707	VHD1SS82///1A	J	Diode	AC
D708	RH-DX0066GEZZ	J	Diode	AB
⚠ D709	RH-DX0229CEZZ	J	Diode	AF
⚠ D712	RH-DX0407CEZZ	J	Diode	AD
⚠ D713	RH-EX0673GEZZ	J	Zener Diode, 32V	AB
⚠ D715	RH-EX0610GEZZ	J	Zener Diode	AA
D716	VHD1SS119//-1	J	Diode	AB
D717	RH-EX0650GEZZ	J	Zener Diode, 16V	AB
⚠ D725	RH-DX0407CEZZ	J	Diode	AD
⚠ D751	RH-DX0441CEZZ	J	Diode	AC
⚠ D752	RH-DX0441CEZZ	J	Diode	AC
⚠ D753	RH-DX0441CEZZ	J	Diode	AC
⚠ D754	RH-DX0441CEZZ	J	Diode	AC
D755	VHD1SS119//-1	J	Diode	AB
⚠ D756	RH-DX0441CEZZ	J	Diode	AC
D2001	VHD1SS119//-1	J	Diode	AB
D2011	RH-EX0611GEZZ	J	Zener Diode, 5.1V (25N-M180, 25N-S100/180, CN25S18/20)	AA

PACKAGED CIRCUITS

Ref. No.	Part No.	★	Description	Code
⚠ PR701	RMPTP0092CEZZ	J	Packaged Circuit	AH
X801	RCRSB0205CEZZ or RCRSB0001PEZZ	J	Crystal	AF

FILTERS

Ref. No.	Part No.	★	Description	Code
CF301	RFiLC0029TAZZ	J	Ceramic Filter	AD
CF401	RFiLC0013CEZZ	J	Ceramic Filter	AE
CF631	RFiLA0034CEZZ	J	Ceramic Filter	AD
CF2040	RFiLC0121GEZZ or RFiLA0099CEZZ	J	Ceramic Filter	AD
SF201	RFiLC0405CEZZ	J	SAW Filter	AH

COILS

Ref. No.	Part No.	★	Description	Code
L201	VP-XF1R2K0000	J	Peaking 1.2µH	AB
L202	RCiLi0588CEZZ	J	VCO Coil	AF
L251	VP-XF390K0000	J	Coil (25N-S180, CN25S20)	AB
L301	VP-XF8R2K0000	J	Peaking 8.2µH	AB
L302	RCiLi0613CEZZ or RCiLi0605CEZZ	J	IF Coil	AE
L401	VP-XF6R8K0000	J	Peaking 6.8µH	AB
L402	VP-XF3R3K0000	J	Peaking 3.3µH	AB
L403	VP-XF8R2K0000	J	Peaking 8.2µH	AB
L404	VP-XF8R2K0000	J	Peaking 8.2µH	AB
L421	VP-XF680K0000	J	Peaking 68µH (25N-M100/180, CN25M10, CN25S18)	AB
L672	RCiLZ0101MEZZ or RCiLZ0102MEZZ	M	Coil	AE
⚠ L701	RCiLF0025PEZZ	M	Coil	AK
⚠ L702	RCiLF0025PEZZ	M	Coil	AK
⚠ L705	RCiLP0179CEZZ	J	Coil	AD
L729	RCiLP0179CEZZ	J	Coil	AD
L2040	RCiLB0131CEZZ	J	Oscillation Coil	AE

TRANSFORMERS

Ref. No.	Part No.	★	Description	Code
T601	RTRNZ0057PEZZ	R	Transformer	AK
▲⚠ T602	RTRNF0037MEZZ or RTRNF0033MEZZ	M	H-Volt Transformer	AY
⚠ T701	RTRNP0543CEZZ	J	Power Transformer	AM
⚠ T702	RTRNZ0017MEZZ or RTRNZ0022MEZZ	M	Transformer	AM

CAPACITORS

[EL.··· Electrolytic, M-Poly.··· Metalized Polypro Film]

Ref. No.	Part No.	★				Code
C51	VCEA0A1CW476M	J	47	16V	EL.	AB
C53	VCEA0A1HW105M	J	1	50V	EL.	AB
C54	VCEA0A1HW475M	J	4.7	50V	EL.	AB

PWB-A: DUNTKA126WEK0/K1 (25N-M100/25N-M180)
PWB-A: DUNTKA126WEK2/K3 (25N-S100/25N-S180)
PWB-A: DUNTKA126WEK6 (CN25M10)
PWB-A: DUNTKA126WEK7/L5 (CN25S18/CN25S20)
MAIN UNIT (Continued)

Ref. No.	Part No.	★	Description	Code
C55	VCEA0A1CW108M	J	1000 16V EL.	AD
C56	VCKYCY1CB104K	J	0.1 16V Ceramic	AB
C103	VCEA0A1CW107M	J	100 16V EL. (25N-M100, CN25M10)	AC
C103	VCEA0A1CW228M	J	2200 16V EL. (25N-M180, 25N-S100/180, CN25S18/20)	AB
C201	VCKYMN1HB102K	J	1000p 50V Ceramic	AA
C202	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA
C203	VCKYCY1HB102K	J	1000p 50V Ceramic	AA
C204	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA
C205	VCEA0A1HW474M	J	0.47 50V EL.	AB
C206	VCEA0A1CW337M	J	330 16V EL.	AC
C207	VCKYCY1HF103Z	J	0.01 50V Ceramic	AA
C208	VCEA0A1HW474M	J	0.47 50V EL.	AB
C209	VCKYCY1HB222K	J	2200p 50V Ceramic	AA
C210	VCKYCY1HB102K	J	1000p 50V Ceramic	AA
C251	VCQYTA1HM103K	J	0.01 50V Mylar (25N-S180, CN25S20)	AB
C252	VCQYTA1HM103K	J	0.01 50V Mylar (25N-S180, CN25S20)	AB
C253	VCCCCY1HH470J	M	47p 50V Ceramic (25N-S180, CN25S20)	AA
C301	VCCCCY1HH330J	J	33p 50V Ceramic	AA
C302	VCCCCY1HH151J	J	150p 50V Ceramic	AA
C303	VCCCCY1HH390J	J	39p 50V Ceramic (25N-S100/180, CN25S18/20)	AA
C303	VCKYCY1HB472K	J	4700p 50V Ceramic (25N-M100/180, CN25M10)	AA
C304	VCEA0A1HW225M	J	2.2 50V EL. (25N-M100/180, CN25M10)	AB
C307	VCCCCY1HH1R5C	J	1.5p 50V Ceramic	AD
C308	VCKYCY1HB102K	J	1000p 50V Ceramic	AA
C309	VCEA0A1CW337M	J	330 16V EL.	AC
C313	VCEA0A1CW476M	J	47 16V EL.	AB
C351	VCEA0A1HW106M	J	10 50V EL. (25N-S100/180, CN25S18/20)	AB
C352	VCKYCY1HB332K	J	3300p 50V Ceramic (25N-S100/180, CN25S18/20)	AA
C354	VCEA0A1HW106M	J	10 50V EL. (25N-S100/180, CN25S18/20)	AB
C355	VCKYCY1HB332K	J	3300p 50V Ceramic	AA
C356	VCEA0A1HW106M	J	10 50V EL.	AB
C358	VCEA0A1CW477M	J	470 16V EL.	AC
C359	VCEA0A1HW106M	J	10 50V EL.	AB
C401	VCKYCY1HB331K	J	330p 50V Ceramic	AA
C402	VCCCCY1HH101J	J	100p 50V Ceramic	AA
C403	VCKYCY1CB104K	J	0.1 16V Ceramic	AB
C404	VCEA0A1HW106M	J	10 50V EL.	AB
C405	VCEA0A1HW335M	J	3.3 50V EL.	AB
C406	VCEA0A1HW225M	J	2.2 50V EL.	AB
C408	VCEA0A1HW106M	J	10 50V EL.	AB
C409	VCEA0A1HW105M	J	1 50V EL.	AB
C410	VCQYTA1HM104K	J	0.1 50V Mylar	AC
C411	VCEA0A1CW337M	J	330 16V EL.	AC
C412	VCKYCY1HB103K	J	0.01 50V Ceramic	AA
C413	VCKYCY1HB103K	J	0.01 50V Ceramic	AA
C414	VCKYCY1CB104K	J	0.1 16V Ceramic (25N-M100/180, CN25M10, CN25S18)	AB
C421	VCCCCY1HH330J	J	33p 50V Ceramic (25N-M100/180, CN25M10, CN25S18)	AA
C422	VCEA0A1CW476M	J	47 16V EL.	AB
C451	VCQYTA1HM104K	J	0.1 50V Mylar	AC
C452	VCEA0A1HW475M	J	4.7 50V EL.	AB
C453	VCEA0A1CW226M	J	22 16V EL.	AB
C501	VCKYPA2HB102K	J	1000p 500V Ceramic	AA
C502	VCEA0A1VW108M	J	1000 35V EL.	AD
C510	VCFYSA1JB564J	M	0.56 63V Mylar	AB
C511	VCKYPA2HB391K	J	390p 500V Ceramic	AA
C512	VCQYTA1HM473K	J	0.047 50V Mylar	AB
C513	VCQYTA1HM103K	J	0.01 50V Mylar	AB
C514	VCEA0A1VW107M	J	100 35V EL.	AC
C515	VCEA0A1HW105M	J	1 50V EL.	AB
C516	VCEACA1HC105K	J	1 50V EL.	AC
C517	VCEA0A1VW108M	J	1000 35V EL.	AD
C518	VCFYSA1JB473J	M	0.047 63V Mylar	AA
C551	VCSATA1CE225K	J	2.2 16V Tantalum	AB
C552	VCEA0A1HW225M	J	2.2 50V EL.	AB
C606	VCKYPA2HB561K	J	560p 500V Ceramic	AA
C607	VCKYPA1HB472K	J	4700p 50V Ceramic	AA
▲⚠ C610	VCFPVC3CA722H	J	7200p 1.6kV M-Poly.	AF
▲⚠ C611	VCFPVC3CA722H	J	7200p 1.6kV M-Poly.	AF
C615	VCKYPA2HB102K	J	1000p 500V Ceramic	AA
⚠ C623	VCEA4A2EN106M	J	10 250V EL.	AD
C631	VCEA0A1HW335M	J	3.3 50V EL.	AB
C632	VCQYTA1HM103K	J	0.01 50V Mylar	AB
C633	VCEA0A1CW477M	J	470 16V EL.	AC
C652	VCEA0A1HW106M	J	10 50V EL.	AB
C653	VCEA0A1HW106M	J	10 50V EL.	AB
C680	VCFPVC2DB564J	J	0.56 200V M-Poly.	AF
C682	VCKYPA2HB331K	J	330p 500V Ceramic	AA
⚠ C701	RC-FZ012SCEZZ or RC-FZ012SGEZZ or RC-FZ037SCEZZ or RC-FZ017SCEZZ	J	0.22 AC250V Plastic	AD
C702	RC-KZ0029CEZZ	J	0.01 AC250V Ceramic	AC
C703	RC-KZ0029CEZZ	J	0.01 AC250V Ceramic	AC
⚠ C705	RC-EZ0800CEZZ or RC-EZ0719CEZZ or RC-EZ1336CEZZ	J	560 200V EL.	AQ
⚠ C706	RC-KZ0092GEZZ	J	0.0033 AC250V Ceramic	AC
C707	VCFPVC3CA222H	J	2200p 1.6kV M-Poly.	AE
C708	VCCSPA1HL471J	J	470p 50V Ceramic	AA
C709	VCEA0A1VW107M	J	100 35V EL.	AC
C710	VCQYTA1HM102J	J	1000p 50V Mylar	AA
C717	VCKYPA2HB472K	J	4700p 500V Ceramic	AB
C718	VCKYPA2HB472K	J	4700p 500V Ceramic	AB
C722	VCQYTA1HM104K	J	0.1 50V Mylar	AC
⚠ C723	RC-EZ0724CEZZ	J	100 160V EL.	AG
⚠ C725	RC-EZ0809CEZZ	J	220 160V EL.	AL
C726	RC-KZ0338CEZZ	J	560p 2kV Ceramic	AD
C727	RC-KZ0338CEZZ	J	560p 2kV Ceramic	AD
C729	VCEA0A1CW106M	J	10 16V EL.	AB
⚠ C730	RC-EZ0385CEZZ	J	1000 16V EL.	AE
⚠ C731	RC-EZ0385CEZZ	J	1000 16V EL.	AE
C732	VCKYPA2HB102K	J	1000p 500V Ceramic	AA
C741	VCKYPA2HB102K	J	1000p 500V Ceramic	AA
C742	VCKYPA2HB102K	J	1000p 500V Ceramic	AA
C753	VCEA0A1CW107M	J	100 16V EL.	AC
C755	VCEA0A1CW476M	J	47 16V EL.	AB
C772	VCEA0A1VW477M	J	470 35V EL.	AB
C801	VCQYTA1HM223K	J	0.022 50V Mylar	AB
C802	VCEA0A1HW474M	J	0.47 50V EL.	AB
C803	VCCCCY1HH110J	J	11p 50V Ceramic	AA
C804	VCKYCY1CB104K	J	0.1 16V Ceramic	AB
C805	VCKYCY1CB104K	J	0.1 16V Ceramic	AB
C806	VCKYCY1CB104K	J	0.1 16V Ceramic	AB
C807	VCCCCY1HH221J	J	220p 50V Ceramic	AA
C808	VCKYCY1HB102K	J	1000p 50V Ceramic (25N-M100/180, CN25M10, CN25S18)	AA
C901	VCEA0A1HW335M	J	3.3 50V EL. (25N-S180, CN25S18/20)	AB
C902	VCEA0A1CW476M	J	47 16V EL. (25N-S180, CN25S18/20)	AB
C903	VCEA0A1HW335M	J	3.3 50V EL. (25N-S180, CN25S18/20)	AB

PWB-A: DUNTKA126WEK0/K1 (25N-M100/25N-M180)
PWB-A: DUNTKA126WEK2/K3 (25N-S100/25N-S180)
PWB-A: DUNTKA126WEK6 (CN25M10)
PWB-A: DUNTKA126WEK7/L5 (CN25S18/CN25S20)

MAIN UNIT (Continued)

Ref. No.	Part No.	★	Description	Code
C908	VCEA0A1HW225M	J	2.2 50V EL. (25N-S100/180, CN25S18/20)	AB
C909	VCEA0A1HW225M	J	2.2 50V EL.	AB
C910	VCKYCY1HB681K	J	680p 50V Ceramic (25N-S180, CN25S18/20)	AA
C911	VCKYCY1HB681K	J	680p 50V Ceramic (25N-S180, CN25S18/20)	AA
C922	VCEA0A1HW335M	J	3.3 50V EL. (25N-S180, CN25S18/20)	AB
C923	VCEA0A1HW335M	J	3.3 50V EL. (25N-S180, CN25S18/20)	AB
C931	VCKYCY1EB183K	J	0.018 25V Ceramic (25N-S180, CN25S18/20)	AA
C932	VCKYCY1EB183K	J	0.018 25V Ceramic (25N-S180, CN25S18/20)	AA
C951	VCEA0A1HW106M	J	10 50V EL. (25N-S100/180, CN25S18/20)	AB
C952	VCEA0A1HW106M	J	10 50V EL. (25N-S100/180, CN25S18/20)	AB
C954	VCKYCY1HF103Z	J	0.01 50V Ceramic (25N-S100/180, CN25S18/20)	AA
C955	VCEA0A1CW106M	J	10 16V EL. (25N-S100/180, CN25S18/20)	AB
C956	VCEA0A1CW106M	J	10 16V EL. (25N-S100/180, CN25S20)	AB
C2001	VCCCCY1HH101J	J	100p 50V Ceramic	AA
C2002	VCCCCY1HH101J	J	100p 50V Ceramic	AA
C2040	VCEA0A1AW107M	J	100 10V EL.	AB
C2041	VCEA0A1HW105M	J	1 50V EL.	AB
C2060	VCKYCY1CB104K	J	0.1 16V Ceramic	AB
C2061	VCCCCY1HH101J	J	100p 50V Ceramic	AA
C2062	VCEA0A1AW107M	J	100 10V EL.	AB
C2201	VCKYCY1HB681K	J	680p 50V Ceramic	AA
C2202	VCCCCY1HH390J	J	39p 50V Ceramic	AA
C2601	VCEA0A1HW475M	J	4.7 50V EL.	AB
C2602	VCCCCY1HH101J	J	100p 50V Ceramic	AA
C3001	VCE9GA1HW475M	J	4.7 50V EL. (N.P) (25N-S100/180, CN25S18/20)	AB
C3002	VCKYCY1HB562K	J	5600p 50V Ceramic (25N-S100/180, CN25S18/20)	AA
C3003	VCQYTA1HM123K	J	0.012 50V Mylar (25N-S100/180, CN25S18/20)	AA
C3004	VCEA0A1HW105M	J	1 50V EL. (25N-S100/180, CN25S18/20)	AB
C3005	VCEA0A1HW475M	J	4.7 50V EL. (25N-S100/180, CN25S18/20)	AB
C3006	VCEA0A1HW106M	J	10 50V EL. (25N-S100/180, CN25S18/20)	AB
C3007	VCEA0A1HW475M	J	4.7 50V EL. (25N-S100/180, CN25S18/20)	AB
C3008	VCKYCY1HF103Z	J	0.01 50V Ceramic (25N-S100/180, CN25S18/20)	AA
C3009	VCEA0A1CW227M	J	220 16V EL. (25N-S100/180, CN25S18/20)	AC
C3010	VCE9GA1HW475M	J	4.7 50V EL. (N.P) (25N-S100/180, CN25S18/20)	AB
C3011	VCEA0A1HW475M	J	4.7 50V EL. (25N-S100/180, CN25S18/20)	AB
C3012	VCE9GA1HW475M	J	4.7 50V EL. (N.P) (25N-S100/180, CN25S18/20)	AB
C3013	VCKYCY1HB272K	J	2700p 50V Ceramic (25N-S100/180, CN25S18/20)	AA
C3014	VCQYTA1HM473K	J	0.047 50V Mylar (25N-S100/180, CN25S18/20)	AB
C3015	VCSATA1CE335K	J	3.3 16V Tantalum (25N-S100/180, CN25S18/20)	AC
C3016	VCE9GA1HW475M	J	4.7 50V EL. (N.P) (25N-S100/180, CN25S18/20)	AB
C3017	VCSATA1CE106K	J	10 16V Tantalum (25N-S100/180, CN25S18/20)	AD
C3018	VCEA0A1HW105M	J	1 50V EL. (25N-S100/180, CN25S18/20)	AB
C3019	VCEA0A1HW475M	J	4.7 50V EL. (25N-S100/180, CN25S18/20)	AB
C3020	VCEA0A1HW475M	J	4.7 50V EL.	AB
C3021	VCEA0A1HW475M	J	4.7 50V EL. (25N-S100/180, CN25S18/20)	AB
C3022	VCEA0A1HW475M	J	4.7 50V EL. (25N-S100/180, CN25S18/20)	AB

RESISTORS

[M-Ox.··· Metal Oxide, M-Film··· Metal Film]

Ref. No.	Part No.	★				Code
RJ1	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ5	VRD-MN2BE000J	J	0	1/8W	Carbon (25N-M100/180, CN25M10)	AA
RJ6	VRD-MN2BE000J	J	0	1/8W	Carbon (25N-M100/180, CN25M10)	AA
RJ10	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ11	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ12	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ13	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ14	VRD-MN2BE000J	J	0	1/8W	Carbon (25N-S100/180, CN25S18/20)	AA
RJ15	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ17	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ18	VRS-CY1JF000J	J	0	1/16W	M-Ox. (25N-M100/180, CN25M10)	AA
RJ19	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ20	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ21	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ22	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ25	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ26	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ28	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ29	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ30	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ31	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ32	VRS-CY1JF000J	J	0	1/16W	M-Ox. (25N-M180, 25N-S100/180, CN25S18/20)	AA
RJ33	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ35	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ36	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ37	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ38	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ39	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ40	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ41	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ42	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ43	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ46	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ48	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ49	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ50	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ51	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ52	VRS-CY1JF000J	J	0	1/16W	M-Ox. (25N-M100/180, CN25M10, CN25S18)	AA
RJ54	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ55	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ56	VRS-CY1JF000J	J	0	1/16W	M-Ox. (25N-S100/180, CN25S18/20)	AA
RJ57	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ58	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ59	VRS-CY1JF000J	J	0	1/16W	M-Ox. (25N-S100/180, CN25S20)	AA
RJ60	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ61	VRS-CY1JF000J	J	0	1/16W	M-Ox. (25N-M100/180, 25N-S100, CN25M10/S18)	AA
RJ63	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ64	VRD-MN2BE000J	J	0	1/8W	Carbon	AA
RJ67	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
⚠ R51	VRS-RG3AB151J	M	150	1W	M-Ox.	AA
⚠ R52	VRS-RG3DB123J	J	12k	2W	M-Ox.	AA

PWB-A: DUNTKA126WEK0/K1 (25N-M100/25N-M180)
PWB-A: DUNTKA126WEK2/K3 (25N-S100/25N-S180)
PWB-A: DUNTKA126WEK6 (CN25M10)
PWB-A: DUNTKA126WEK7/L5 (CN25S18/CN25S20)
MAIN UNIT (Continued)

Ref. No.	Part No.	★	Description	Code
⚠ R53	VRS-RG3AB470J	J	47 1W M-Ox.	AA
R54	VRD-MN2BE101J	J	100 1/8W Carbon	AA
R55	VRD-MN2BE101J	J	100 1/8W Carbon	AA
R56	VRD-MN2BE823J	J	82k 1/8W Carbon	AA
R57	VRD-MN2BE392J	J	3.9k 1/8W Carbon	AA
R201	VRD-MN2BE151J	J	150 1/8W Carbon	AA
R202	VRD-MN2BE122J	J	1.2k 1/8W Carbon	AA
R203	VRD-MN2BE682J	J	6.8k 1/8W Carbon	AA
R204	VRD-MN2BE270J	J	27 1/8W Carbon	AA
R205	VRS-CY1JF331J	J	330 1/16W M-Ox.	AA
R206	VRD-MN2BE121J	J	120 1/8W Carbon	AA
R207	VRD-MN2BE4R7J	J	4.7 1/8W Carbon	AA
R208	VRD-MN2BE331J	J	330 1/8W Carbon	AA
R209	VRS-CY1JF222J	J	2.2k 1/16W M-Ox. (25N-S180, CN25S20)	AA
R251	VRS-CY1JF332J	J	3.3k 1/16W M-OX. (25N-S180, CN25S20)	AA
R252	VRD-MN2BE562J	J	5.6k 1/16W M-Ox. (25N-S180, CN25S20)	AA
R253	VRD-MN2BE332J	J	3.3k 1/8W Carbon (25N-S180, CN25S20)	AA
R254	VRD-MN2BE223J	J	22k 1/8W Carbon (25N-S180, CN25S20)	AA
R255	VRS-CY1JF563J	J	56k 1/16W M-Ox. (25N-S180, CN25S20)	AA
R256	VRS-CY1JF182J	J	1.8k 1/16W M-Ox. (25N-S180, CN25S20)	AA
R257	VRS-CY1JF470J	J	47 1/16W M-Ox. (25N-S180, CN25S20)	AA
R258	VRS-CY1JF472J	J	4.7k 1/16W M-Ox. (25N-S180, CN25S20)	AA
R259	VRS-CY1JF472J	J	4.7k 1/16W M-Ox. (25N-S180, CN25S20)	AA
R301	VRD-MN2BE222J	J	2.2k 1/8W Carbon	AA
R302	VRS-CY1JF102J	J	1k 1/16W M-Ox.	AA
R303	VRD-MN2BE103J	J	10k 1/8W Carbon (25N-S100/180, CN25S18/20)	AA
R303	VRD-MN2BE153J	J	15k 1/8W Carbon (25N-M100/180, CN25M10)	AA
R304	VRD-MN2BE333J	J	33k 1/8W Carbon (25N-S100/180, CN25S18/20)	AA
R305	VRD-MN2BE102J	J	1k 1/8W Carbon (25N-S100/180, CN25S18/20)	AA
R306	VRD-MN2BE152J	J	1.5k 1/8W Carbon (25N-S100/180, CN25S18/20)	AA
R351	VRD-MN2BE683J	J	68k 1/8W Carbon (25N-S100/180, CN25S18/20)	AA
R352	VRD-MN2BE103J	J	10k 1/8W Carbon (25N-S100/180, CN25S18/20)	AA
R353	VRD-RA2BE822J	J	8.2k 1/8W Carbon (25N-S100/180, CN25S18/20)	AA
R354	VRD-MN2BE223J	J	22k 1/8W Carbon (25N-S100/180, CN25S18/20)	AA
R355	VRD-MN2BE683J	J	68k 1/8W Carbon	AA
R356	VRD-MN2BE103J	J	10k 1/8W Carbon	AA
R357	VRD-MN2BE822J	J	8.2k 1/8W Carbon	AA
R358	VRD-MN2BE223J	J	22k 1/8W Carbon	AA
R401	VRS-CY1JF682J	J	6.8k 1/16W M-Ox.	AA
R402	VRS-CY1JF331J	J	330 1/16W M-Ox.	AA
R403	VRS-CY1JF391J	J	390 1/16W M-Ox.	AA
R404	VRD-MN2BE102J	J	1k 1/8W Carbon	AA
R405	VRS-CY1JF470J	J	47 1/16W M-Ox.	AA
R406	VRS-CY1JF680J	J	68 1/16W M-Ox.	AA
R407	VRS-CY1JF102J	J	1k 1/16W M-Ox.	AA
R408	VRS-CY1JF471J	J	470 1/16W M-Ox.	AA
R409	VRD-MN2BE562J	J	5.6k 1/8W Carbon	AA
R410	VRD-RA2BE124J	J	120k 1/8W Carbon	AA
R411	VRD-MN2BE153J	J	15k 1/8W Carbon	AA
R412	VRD-RA2BE561J	J	560 1/8W Carbon	AA
R413	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R414	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R415	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R416	VRS-CY1JF332J	J	3.3k 1/16W M-Ox. (25N-S100/180, CN25S20)	AA
R421	VRD-MN2BE152J	J	1.5k 1/8W Carbon (25N-M100/180, CN25M10, CN25S18)	AA
R422	VRS-CY1JF472J	J	4.7k 1/16W M-Ox. (25N-M100/180, CN25M10, CN25S18)	AA
R423	VRS-CY1JF152J	J	1.5k 1/16W M-Ox. (25N-M100/180, CN25M10, CN25S18)	AA
R424	VRS-CY1JF102J	J	1k 1/16W M-Ox. (25N-M100/180, CN25M10, CN25S18)	AA
⚠ R451	VRS-RG2HC103J	J	10k 1/2W M-Ox.	AA
R452	VRD-RM2HD153J	J	15k 1/2W Carbon	AA
R453	VRD-RA2EE683J	J	68k 1/4W Carbon	AA
R454	VRD-MN2BE102J	J	1k 1/8W Carbon	AA
R456	VRD-MN2BE682J	J	6.8k 1/8W Carbon	AA
R458	VRD-MN2BE152J	J	1.5k 1/8W Carbon	AA
⚠ R501	VRN-RL3ABR56J	J	0.56 1W M-Film	AA
R510	VRD-MN2BE471J	J	470 1/8W Carbon	AA
R511	VRD-RA2BE104G	J	100k 1/8W Carbon	AA
R512	VRD-RA2BE124G	J	120k 1/8W Carbon	AA
R513	VRD-RA2BE473J	J	47k 1/8W Carbon	AA
R514	VRD-MN2BE101J	J	100 1/8W Carbon	AA
R519	VRD-RA2BE123G	J	12k 1/8W Carbon	AA
R520	VRD-MN2BE184J	J	180k 1/8W Carbon	AA
R523	VRN-RL3AB1R0J	M	1 1W M-Film	AA
⚠ R524	VRS-RG3AB391J	J	390 1W M-Ox.	AA
R526	VRD-MN2BE332J	J	3.3k 1/8W Carbon	AA
R551	VRS-CY1JF472J	J	4.7k 1/16W M-Ox.	AA
R552	VRS-CY1JF102J	J	1k 1/16W M-Ox.	AA
R553	VRD-MN2BE223J	J	22k 1/8W Carbon	AA
R554	VRD-MN2BE184J	J	180k 1/8W Carbon	AA
⚠ R604	VRS-RG3LB392J	M	3.9k 3W M-Ox.	AB
R605	VRD-RA2BE331J	J	330 1/8W Carbon	AA
R606	VRD-RA2BE331J	J	330 1/8W Carbon	AA
⚠ R607	VRS-RG3LB392J	M	3.9k 3W M-Ox.	AB
⚠ R609	VRS-RG3AB562J	M	5.6k 1W M-Ox.	AA
R610	VRD-RM2HD220J	J	22 1/2W Carbon	AA
⚠ R611	VRS-KA3NG3R3K	J	3.3 7W M-Ox.	AD
⚠ R622	VRN-RL3ABR33J	M	0.33 1W M-Film	AA
⚠ R623	VRN-RL3AB2R7J	M	2.7 1W M-Film	AA
⚠ R624	VRS-RG3DB332J	M	3.3k 2W M-Ox.	AA
R625	VRD-MN2BE102J	J	1k 1/8W Carbon	AA
⚠ R626	VRN-RL3AB3R3J	M	3.3 1W M-Film	AA
R627	VRD-RM2HD224J	J	220k 1/2W Carbon	AA
R631	VRS-CY1JF391J	J	390 1/16W M-Ox.	AA
R632	VRS-CY1JF152J	J	1.5k 1/16W M-Ox.	AA
R633	VRD-MN2BE472J	J	4.7k 1/8W Carbon	AA
R634	VRD-RA2BE4R7J	J	4.7 1/8W Carbon	AA
▲⚠ R651	VRS-RG2HC270J	M	27 1/2W M-Ox.	AA
▲⚠ R652	VRN-RA2BK103F	J	10k 1/8W M-Film	AA
▲⚠ R653	VRN-RA2BK822F	J	8.2k 1/8W M-Film	AA
▲⚠ R654	VRD-MN2BE184J	J	180k 1/8W Carbon	AA
▲⚠ R655	VRS-CY1JF104J	J	100k 1/16W M-Ox.	AA
R690	VRS-RG2HC102J	J	1k 1/2W M-Ox.	AA
⚠ R701	RR-HZ0048CEZZ	J	3.9M 1/2W Solid	AB
⚠ R702	VRW-KQ3NC1R2K	J	1.2 7W Cement	AE
R704	VRD-RM2HD154J	J	150k 1/2W Carbon	AA
⚠ R705	VRN-RL3DBR22J	J	0.22 2W M-Film	AA
⚠ R706	VRN-RL3DBR27J	M	0.27 2W M-Film	AA
R707	VRS-RG2HC681J	J	680 1/2W M-Ox.	AA
⚠ R709	VRN-GA2EB1R0J	J	1 1/4W M-Film	AA
R710	VRD-RM2HD330J	J	33 1/2W Carbon	AA
R711	VRD-RA2BE242J	J	2.4k 1/8W Carbon	AA
⚠ R715	VRS-RG3DB153J	J	15k 2W M-Ox.	AA
⚠ R723	VRN-RL3DBR39J	M	0.39 2W M-Film	AA
R724	VRS-RG2HC332J	J	3.3k 1/2W M-Ox.	AA
R725	VRS-RG2HC821J	M	820 1/2W M-Ox.	AA
R727	VRD-RA2BE271J	J	270 1/8W Carbon	AA
⚠ R728	VRN-RL3LB4R7J	M	4.7 3W M-Film (25N-S100/180, CN25S18/20)	AB

PWB-A: DUNTKA126WEK0/K1 (25N-M100/25N-M180)
PWB-A: DUNTKA126WEK2/K3 (25N-S100/25N-S180)
PWB-A: DUNTKA126WEK6 (CN25M10)
PWB-A: DUNTKA126WEK7/L5 (CN25S18/CN25S20)
MAIN UNIT (Continued)

Ref. No.	Part No.	★	Description	Code
⚠ R728	VRS-RG3DB120J	M	12 2W M-Ox. (25N-M100/180, CN25M10)	AA
R734	VRD-RM2HD124J	J	120k 1/2W Carbon	AA
⚠ R737	VRN-RL3DBR56J	M	0.56 2W M-Film	AA
R751	VRD-MN2BE473J	J	47k 1/8W Carbon	AA
R801	VRD-MN2BE332J	J	3.3k 1/8W Carbon	AA
R802	VRS-CY1JF332J	J	3.3k 1/16W M-Ox.	AA
R803	VRS-CY1JF222J	J	2.2k 1/16W M-Ox.	AA
R804	VRS-CY1JF222J	J	2.2k 1/16W M-Ox.	AA
R805	VRS-CY1JF222J	J	2.2k 1/16W M-Ox.	AA
R806	VRS-CY1JF333J	J	33k 1/16W M-Ox.	AA
R807	VRS-CY1JF152J	J	1.5k 1/16W M-Ox. (25N-M100/180, CN25M10, CN25S18)	AA
R808	VRD-RA2BE102J	J	1k 1/8W Carbon (25N-M100/180, CN25M10, CN25S18)	AA
R901	VRD-RA2BE331J	J	330 1/8W Carbon (25N-S180, CN25S18/20)	AA
R903	VRD-MN2BE102J	J	1k 1/8W Carbon (25N-S180, CN25S18/20)	AA
R904	VRS-CY1JF683J	J	68k 1/16W M-Ox. (25N-S180, CN25S18/20)	AA
R905	VRS-CY1JF223J	J	22k 1/16W M-Ox. (25N-S180, CN25S18/20)	AA
R906	VRS-CY1JF392J	J	3.9k 1/16W M-Ox. (25N-S180, CN25S18/20)	AA
R907	VRS-CY1JF182J	J	1.8k 1/16W M-Ox. (25N-S180, CN25S18/20)	AA
R908	VRS-CY1JF102J	J	1k 1/16W M-Ox. (25N-S180, CN25S18/20)	AA
R910	VRS-CY1JF102J	J	1k 1/16W M-Ox. (25N-S180, CN25S18/20)	AA
R911	VRS-CY1JF683J	J	68k 1/16W M-Ox. (25N-S180, CN25S18/20)	AA
R912	VRS-CY1JF223J	J	22k 1/16W M-Ox. (25N-S180, CN25S18/20)	AA
R913	VRS-CY1JF392J	J	3.9k 1/16W M-Ox. (25N-S180, CN25S18/20)	AA
R914	VRS-CY1JF182J	J	1.8k 1/16W M-Ox. (25N-S180, CN25S18/20)	AA
R915	VRS-CY1JF102J	J	1k 1/16W M-Ox. (25N-S180, CN25S18/20)	AA
R922	VRS-CY1JF102J	J	1k 1/16W M-Ox. (25N-S180, CN25S18/20)	AA
R923	VRS-CY1JF102J	J	1k 1/16W M-Ox. (25N-S180, CN25S18/20)	AA
R924	VRS-CY1JF750J	J	75 1/16W M-Ox. (25N-S100/180, CN25S18/20)	AA
R925	VRD-MN2BE104J	J	100k 1/8W Carbon (25N-S100/180, CN25S18/20)	AA
R926	VRD-MN2BE104J	J	100k 1/8W Carbon (25N-S100/180, CN25S18/20)	AA
R931	VRS-CY1JF750J	J	75 1/16W M-Ox. (25N-S100/180, CN25S20)	AA
R932	VRS-CY1JF750J	J	75 1/16W M-Ox. (25N-S100/180, CN25S20)	AA
R951	VRD-RA2BE101J	J	100 1/8W Carbon (25N-S100/180, CN25S18/20)	AB
R952	VRD-MN2BE102J	J	1k 1/8W Carbon (25N-S100/180, CN25S18/20)	AA
R953	VRS-CY1JF101J	J	100 1/16W M-Ox. (25N-S100/180, CN25S20)	AA
R961	VRD-RA2BE101J	J	100 1/8W Carbon	AB
R962	VRD-RA2BE101J	J	100 1/8W Carbon	AB
R2001	VRD-RA2BE562J	J	5.6k 1/8W Carbon	AA
R2002	VRD-MN2BE103J	J	10k 1/8W Carbon	AA
R2004	VRD-MN2BE101J	J	100 1/8W Carbon	AA
R2006	VRS-CY1JF103J	J	10k 1/16W M-Ox.	AA
R2007	VRS-CY1JF223J	J	22k 1/16W M-Ox. (25N-M100/180, CN25M10)	AA
R2008	VRD-MN2BE333J	J	33k 1/8W Carbon	AA
R2009	VRD-RA2BE102J	J	1k 1/8W Carbon	AA
R2010	VRD-MN2BE102J	J	1k 1/8W Carbon	AA
R2011	VRD-RA2BE561J	J	560 1/8W Carbon (25N-M100, CN25M10)	AA
R2012	VRS-CY1JF471J	J	470 1/16W M-Ox. (25N-M180, 25N-S100/180, CN25S18/20)	AA
R2012	VRS-CY1JF561J	J	560 1/16W M-Ox. (25N-M100, CN25M10)	AA
R2016	VRS-CY1JF223J	J	22k 1/16W M-Ox.	AA
R2020	VRS-CY1JF223J	J	22k 1/16W M-Ox.	AA
R2023	VRS-CY1JF223J	J	22k 1/16W M-Ox.	AA
R2024	VRD-RA2BE682J	J	6.8k 1/8W Carbon	AA
R2025	VRD-RA2BE682J	J	6.8k 1/8W Carbon	AA
R2026	VRD-RA2BE682J	J	6.8k 1/8W Carbon	AA
R2027	VRD-MN2BE682J	J	6.8k 1/8W Carbon	AA
R2028	VRD-MN2BE102J	J	1k 1/8W Carbon	AA
R2029	VRS-CY1JF103J	J	10k 1/16W M-Ox. (25N-M100/180, 25N-S100, CN25M10, CN25S18)	AA
R2032	VRD-RA2BE103J	J	10k 1/8W Carbon	AA
R2034	VRD-RA2BE102J	J	1k 1/8W Carbon (25N-S180, CN25S20)	AA
R2035	VRD-MN2BE223J	J	22k 1/8W Carbon	AA
R2038	VRD-RA2BE103J	J	10k 1/8W Carbon (25N-S180, CN25S20)	AA
R2040	VRD-MN2BE102J	J	1k 1/8W Carbon	AA
R2041	VRD-MN2BE333J	J	33k 1/8W Carbon	AA
R2042	VRD-MN2BE101J	J	100 1/8W Carbon	AA
R2043	VRS-CY1JF333J	J	33k 1/16W M-Ox.	AA
R2044	VRD-MN2BE682J	J	6.8k 1/8W Carbon	AA
R2045	VRD-MN2BE101J	J	100 1/8W Carbon	AA
R2046	VRD-RA2BE101J	J	100 1/8W Carbon	AB
R2047	VRS-CY1JF221J	J	220 1/16W M-Ox.	AA
R2048	VRS-CY1JF562J	J	5.6k 1/16W M-Ox.	AA
R2060	VRD-MN2BE221J	J	220 1/8W Carbon	AA
R2061	VRD-MN2BE562J	J	5.6k 1/8W Carbon	AA
R2062	VRD-MN2BE183J	J	18k 1/8W Carbon	AA
R2063	VRD-MN2BE222J	J	2.2k 1/8W Carbon	AA
R2064	VRD-RA2BE332J	J	3.3k 1/8W Carbon	AA
R2066	VRS-CY1JF103J	J	10k 1/16W M-Ox. (25N-M100/180, CN25M10)	AA
R2067	VRS-CY1JF103J	J	10k 1/16W M-Ox. (25N-M100/180, CN25M10, CN25S18)	AA
R2068	VRS-CY1JF103J	J	10k 1/16W M-Ox.	AA
R2069	VRS-CY1JF102J	J	1k 1/16W M-Ox. (25N-S100/180, CN25S20)	AA
R2070	VRS-CY1JF103J	J	10k 1/16W M-Ox.	AA
R2071	VRD-RA2BE102J	J	1k 1/8W Carbon (25N-S100/180, CN25S18/20)	AA
R2101	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R2102	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R2201	VRD-MN2BE222J	J	2.2k 1/8W Carbon	AA
R2202	VRS-CY1JF103J	J	10k 1/16W M-Ox.	AA
R2203	VRS-CY1JF184J	J	180k 1/16W M-Ox.	AA
R2211	VRD-MN2BE222J	J	2.2k 1/8W Carbon	AA
R2212	VRS-CY1JF682J	J	6.8k 1/16W M-Ox.	AA
R2213	VRS-CY1JF333J	J	33k 1/16W M-Ox.	AA
R2401	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R2402	VRS-CY1JF101J	J	100 1/16W M-Ox.	AA
R2403	VRD-MN2BE101J	J	100 1/8W Carbon	AA
R2404	VRD-MN2BE101J	J	100 1/8W Carbon	AA
R2501	VRD-MN2BE103J	J	10k 1/8W Carbon	AA
R2503	VRD-MN2BE273J	J	27k 1/8W Carbon	AA
R2504	VRD-MN2BE123J	J	12k 1/8W Carbon	AA
R2505	VRD-MN2BE563J	J	56k 1/8W Carbon	AA
R2506	VRD-MN2BE563J	J	56k 1/8W Carbon	AA
R2507	VRD-MN2BE823J	J	82k 1/8W Carbon	AA
R2508	VRD-MN2BE153J	J	15k 1/8W Carbon	AA
R2509	VRD-MN2BE272J	J	2.7k 1/8W Carbon	AA
R2601	VRD-RA2BE331J	J	330 1/8W Carbon	AA

Ref. No.	Part No.	★	Description	Code
PWB-A: DUNTKA126WEK0/K1 (25N-M100/25N-M180) PWB-A: DUNTKA126WEK2/K3 (25N-S100/25N-S180) PWB-A: DUNTKA126WEK6 (CN25M10) PWB-A: DUNTKA126WEK7/L5 (CN25S18/CN25S20) MAIN UNIT (Continued)				
R3001	VRD-RA2BE101J	J	100 1/8W Carbon (25N-S100/180, CN25S18/20)	AB
R3002	VRD-RA2BE101J	J	100 1/8W Carbon (25N-S100/180, CN25S18/20)	AB
R3003	VRS-CY1JF105J	J	1M 1/16W M-Ox. (25N-S100/180, CN25S18/20)	AA
R3004	VRS-CY1JF104J	J	100k 1/16W M-Ox. (25N-S100/180, CN25S18/20)	AA
R3005	VRS-CY1JF623J	J	62k 1/16W M-Ox. (25N-S100/180, CN25S18/20)	AA
R3007	VRS-CY1JF332J	J	3.3k 1/16W M-Ox. (25N-S100/180, CN25S18/20)	AA
R3008	VRS-CY1JF302J	J	3k 1/16W M-Ox. (25N-S100/180, CN25S18/20)	AA
R3010	VRS-CY1JF392J	J	3.9k 1/16W M-Ox. (25N-S100/180, CN25S18/20)	AA
R3011	VRD-MN2BE102J	J	1k 1/8W Carbon (25N-S100/180, CN25S18/20)	AA
R3012	VRS-CY1JF102J	J	1k 1/16W M-Ox.	AA
R3013	VRD-MN2BE104J	J	100k 1/8W Carbon (25N-S100/180, CN25S18/20)	AA
R3014	VRD-MN2BE104J	J	100k 1/8W Carbon	AA
R3015	VRD-RA2BE101J	J	100 1/8W Carbon	AB
R3016	VRD-MN2BE750J	J	75 1/8W Carbon	AA
R3017	VRD-RA2BE102J	J	1k 1/8W Carbon (25N-S100/180, CN25S18/20)	AA
R3018	VRD-RA2BE102J	J	1k 1/8W Carbon (25N-S100/180, CN25S18/20)	AA
SWITCHES				
S2501	QSW-K0079GEZZ or QSW-K0202PEZZ	J	Power	AB
S2502	QSW-K0079GEZZ or QSW-K0202PEZZ	J	VOL-Down	AB
S2503	QSW-K0079GEZZ or QSW-K0202PEZZ	J	VOL-Up	AB
S2504	QSW-K0079GEZZ or QSW-K0202PEZZ	J	CH-Down	AB
S2505	QSW-K0079GEZZ or QSW-K0202PEZZ	J	CH-Up	AB
MISCELLANEOUS PARTS				
⚠ RY701	RRLYJ0081CEZZ or RRLYJ0088CEZZ or RRLYJ0094CEZZ	J	Relay	AL
⚠ F701	QFS-B4023CEZZ or QFS-B4021GEZZ	J	Fuse 4A 125V	AC
FB601	RBLN-0047CEZZ	J	Ferrite Bead	AB
FB702	RBLN-0036CEZZ	J	Ferrite Bead	AB
FB704	RBLN-0037CEZZ	J	Ferrite Bead	AB
FB706	RBLN-0037CEZZ	J	Ferrite Bead	AB
FH701	QFSHD1013CEZZ	J	Fuse Holder	AC
FH702	QFSHD1014CEZZ	J	Fuse Holder	AC
J931	QSOCD0430CEZZ	J	Socket, S-Video (25N-S100/180, CN25S20)	AE
P351	QPLGN0361CEZZ	J	Plug, 3-pin (S) (25N-M100/180, CN25M10)	AB
P351	QPLGN0461CEZZ	J	Plug, 4-pin (S) (25N-S100/180, CN25S18/20)	AB
P601	QPLGN0160FJZZ	J	Plug, 5-pin (K)	AD
P621	QPLGN0461CEZZ	J	Plug, 4-pin (YBN)	AB
P651	QPLGN0361CEZZ	J	Plug, 3-pin	AB
P701	QPLGN0207CEZZ	J	Plug, 2-pin (M)	AA
P703	QPLGN0269GEZZ	J	Plug, 2-pin (P)	AB
P901	QPLGN0561CEZZ	J	Plug, 5-pin (HA)	AB
P903	QPLGN0561CEZZ	J	Plug, 5-pin (GBN)	AB
P931	QPLGN0661CEZZ	J	Plug, 6-pin (KC) (25N-S100/180, CN25S20)	AD
P2401	QPLGN0561CEZZ	J	Plug, 5-pin	AB
SC401	QSOCN0585CEZZ	J	Socket, 5-pin (KA) (25N-S100/180, CN25S20)	AC
SC402	QSOCN0585CEZZ	J	Socket, 5-pin (KB) (25N-S100/180, CN25S20)	AC
RMC2601	RRMCU0235CEZZ	J	R/C Receiver	AK
RDA501	PRDAR0234PEFW	R	Heat Sink, for IC501	AH
RDA604	PRDAR0233PEFW	R	Heat Sink, for Q602	AK
RDA701	PRDAR1008MEFW	M	Heat Sink, for IC701	AH
RDA751	PRDAR5072CEFW	J	Heat Sink, for IC751	AC
TAN921	QTANJ0323CEZZ	J	AV Terminal (25N-S100)	AL
TAN921	QTANJ0523CEZZ	M	AV Terminal (25N-S180, CN25S18/20)	AG
	LX-BZ3049GEFD	J	Screw	AA
	LX-HZ3007MEFD	M	Screw	AA

PWB-B: DUNTK9510WEK1
CRT UNIT

TRANSISTORS

Ref. No.	Part No.	★	Description	Code
Q851	VS2SC3198-Y-1	J	2SC3198	AA
Q852	VS2SC3789//2E	M	2SC3789	AA
	or			
	VS2SC3619LB1E			
Q853	VS2SC3198-Y-1	J	2SC3198	AA
Q854	VS2SC3789//2E	M	2SC3789	AA
	or			
	VS2SC3619LB1E			
Q855	VS2SC3198-Y-1	J	2SC3198	AA
Q856	VS2SC3789//2E	M	2SC3789	AA
	or			
	VS2SC3619LB1E			
Q881	VS2SA1266-Y-1	J	2SA1266	AA

DIODES

You can substitute "RH-DX0475CEZZ" for "VHD1SS119//-1".

D881	VHD1SS119//-1	J	Diode	AB
D882	VHD1SS119//-1	J	Diode	AB
D884	VHD1SS119//-1	J	Diode	AB

COIL

L851	VP-MK820K0000	J	Peaking 82µH	AB

CAPACITORS

[EL.··· Electrolytic]

C851	VCCSPA1HL391J	J	390p	50V	Ceramic	AA
C852	VCCSPA1HL331J	J	330p	50V	Ceramic	AA
C853	VCCSPA1HL391J	J	390p	50V	Ceramic	AA
C854	RC-KZ0024CEZZ	J	0.001	2kV	Ceramic	AC
	or					
	VCKYPB3DE472Z		0.0047	2kV	Ceramic	
C883	VCEA0A1HW106M	J	10	50V	EL.	AB

RESISTORS

[M-Ox.··· Metal Oxide]

R851	VRD-RA2BE470J	J	47	1/8W	Carbon	AA
R852	VRD-RA2BE181J	J	180	1/8W	Carbon	AA
R853	VRD-RA2BE121J	J	120	1/8W	Carbon	AA
R855	VRD-RA2BE471J	J	470	1/8W	Carbon	AA
R856	VRD-RA2BE221J	J	220	1/8W	Carbon	AA
⚠ R857	VRS-VV3LB123J	J	12k	3W	M-Ox.	AB
R858	VRD-RM2HD222J	J	2.2k	1/2W	Carbon	AA
R859	VRD-RA2BE470J	J	47	1/8W	Carbon	AA
R860	VRD-RA2BE181J	J	180	1/8W	Carbon	AA
R861	VRD-RA2BE121J	J	120	1/8W	Carbon	AA
R863	VRD-RA2BE471J	J	470	1/8W	Carbon	AA
R864	VRD-RA2BE221J	J	220	1/8W	Carbon	AA
⚠ R865	VRS-VV3LB123J	J	12k	3W	M-Ox.	AB
R866	VRD-RM2HD222J	J	2.2k	1/2W	Carbon	AA
R867	VRD-RA2BE470J	J	47	1/8W	Carbon	AA
R868	VRD-RA2BE181J	J	180	1/8W	Carbon	AA
R869	VRD-RA2BE121J	J	120	1/8W	Carbon	AA
R871	VRD-RA2BE471J	J	470	1/8W	Carbon	AA
R872	VRD-RA2BE221J	J	220	1/8W	Carbon	AA
⚠ R873	VRS-VV3LB123J	J	12k	3W	M-Ox.	AB
R874	VRD-RM2HD222J	J	2.2k	1/2W	Carbon	AA
R881	VRD-RA2BE102J	J	1k	1/8W	Carbon	AA
R882	VRD-RA2BE331J	J	330	1/8W	Carbon	AA
R883	VRD-RA2BE561J	J	560	1/8W	Carbon	AA
R884	VRD-RA2BE152J	J	1.5k	1/8W	Carbon	AA
R895	VRD-RA2BE470J	J	47	1/8W	Carbon	AA

MISCELLANEOUS PARTS

P851	QPLGN0541CEZZ	J	Plug, 5-pin(GBN)	AB
P852	QPLGN0441CEZZ	J	Plug, 4-pin(YBN)	AB
SC851	QSOCV0937CEZZ	M	CRT Socket	AF

PWB-K: DUNTKA114WEK0 (25N-S100)
S-VIDEO UNIT

INTEGRATED CIRCUIT

IC1501	VHiM52055FP-1	J	M52055FP	AH

TRANSISTORS

You can substitute "VS2SD601AR/-1" for "VS2SC2412KQ-1".

Q1501	VS2SC2412KQ-1	J	2SC2412K	AA
Q1502	VS2SB709AR/-1	J	2SB709AR	AC
	or			
	VS2SA1037KR-1			
Q1503	VS2SC2412KQ-1	J	2SC2412K	AA
Q1504	VS2SC2412KQ-1	J	2SC2412K	AA

DIODES

You can substitute "RH-DX0475CEZZ" for "VHD1SS119//-1".

D1501	VHD1SS119//-1	J	Diode	AB
D1502	VHD1SS119//-1	J	Diode	AB
D1503	RH-EX0631GEZZ	J	Zener Diode, 9V	AA
D1504	RH-EX0631GEZZ	J	Zener Diode, 9V	AA

COILS

L1501	VP-XF6R8K0000	J	Peaking 6.8µ H	AB
L1502	VP-XF6R8K0000	J	Peaking 6.8µ H	AB
L1503	VP-XF8R2K0000	J	Peaking 8.2µ H	AB

CAPACITORS

[EL.··· Electrolytic]

C1501	VCEA0A1CW106M	J	10	16V	EL.	AB
C1502	VCCCCY1HH470J	J	47p	50V	Ceramic	AA
C1503	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C1504	VCCCCY1HH271J	J	270p	50V	Ceramic	AA
C1505	VCCCCY1HH330J	J	33p	50V	Ceramic	AA
C1506	VCCCCY1HH151J	J	150p	50V	Ceramic	AA
C1507	VCCCCY1HH330J	J	33p	50V	Ceramic	AA
C1508	VCE9GA1CW106M	J	10	16V	EL. (N.P)	AB
C1509	VCEA0A1CW106M	J	10	16V	EL.	AB
C1510	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C1511	VCEA0A1CW106M	J	10	16V	EL.	AB
C1512	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C1513	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA

RESISTORS

[M-Ox.··· Metal Oxide]

R1501	VRS-CY1JF223J	J	22k	1/16W	M-Ox.	AA
R1502	VRS-CY1JF123J	J	12k	1/16W	M-Ox.	AA
R1503	VRS-CY1JF122J	J	1.2k	1/16W	M-Ox.	AA
R1504	VRS-CY1JF102J	J	1k	1/16W	M-Ox.	AA
R1505	VRS-CY1JF152J	J	1.5k	1/16W	M-Ox.	AA
R1506	VRS-CY1JF102J	J	1k	1/16W	M-Ox.	AA
R1507	VRS-CY1JF102J	J	1k	1/16W	M-Ox.	AA
R1508	VRS-CY1JF561J	J	560	1/16W	M-Ox.	AA
R1509	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R1510	VRS-CY1JF181J	J	180	1/16W	M-Ox.	AA
R1511	VRS-CY1JF152J	J	1.5k	1/16W	M-Ox.	AA
R1512	VRS-CY1JF333J	J	33k	1/16W	M-Ox.	AA
R1513	VRS-CY1JF122J	J	1.2k	1/16W	M-Ox.	AA
R1514	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R1515	VRS-CY1JF102J	J	1k	1/16W	M-Ox.	AA
R1516	VRS-CY1JF682J	J	6.8k	1/16W	M-Ox.	AA
R1517	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
R1518	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R1519	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA

MISCELLANEOUS PARTS

P1501	QPLGN0585CEZZ	J	Plug, 5-pin (KA)	AB
P1502	QPLGN0585CEZZ	J	Plug, 5-pin (KB)	AD
P1503	QPLGN0661CEZZ	J	Plug, 6-pin (KC)	AD

Ref. No.	Part No.	★	Description	Code

PWB-K: DUNTKA115WEK0 (25N-S180, CN25S20)
DIGICOM/S-VIDEO UNIT

INTEGRATED CIRCUIT

IC1401	VHiTC90A45F-1	J	TC90A45F	AM
IC1403	VHiKA78L05B-1	J	KIA78L05BP	AE
IC1451	VHiM52055FP-1	J	M52055FP	AH

TRANSISTORS

You can substitute "VS2SD601AR/-1" for "VS2SC2412KQ-1".

Q1401	VS2SC2412KQ-1	J	2SC2412K	AA
Q1402	VS2SC2412KQ-1	J	2SC2412K	AA
Q1403	VS2SC2412KQ-1	J	2SC2412K	AA
Q1404	VS2SC2412KQ-1	J	2SC2412K	AA
Q1405	VS2SC2412KQ-1	J	2SC2412K	AA
Q1406	VS2SC2412KQ-1	J	2SC2412K	AA
Q1407	VS2SC2412KQ-1	J	2SC2412K	AA

DIODES

You can substitute "RH-DX0475CEZZ" for "VHD1SS119//-1".

D1401	VHD1SS119//-1	J	Diode	AB
D1402	VHD1SS119//-1	J	Diode	AB
D1403	VHD1SS119//-1	J	Diode	AB
D1451	VHD1SS119//-1	J	Diode	AB
D1452	VHD1SS119//-1	J	Diode	AB
D1453	RH-EX0631GEZZ	J	Zener Diode, 9V	AA
D1454	RH-EX0631GEZZ	J	Zener Diode, 9V	AA

COILS

L1401	VP-XF100K0000	J	Coil 10µ H	AB
L1402	VP-XF100K0000	J	Coil 10µ H	AB
L1403	VP-XF150K0000	J	Coil 15µ H	AB
L1405	VP-XF330K0000	J	Coil 33µ H	AB
L1406	VP-XF100K0000	J	Coil 10µ H	AB

CAPACITORS

[EL.··· Electrolytic]

C1401	VCCCCY1HH220J	J	22p	50V	Ceramic	AA
C1402	VCFYSA1HB474J	J	0.47	50V	Mylar	AC
C1403	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C1404	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C1405	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C1406	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C1407	VCKYCY1CB104K	J	0.1	16V	Ceramic	AB
C1408	VCEA0A1HW106M	J	10	50V	EL.	AB
C1409	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C1410	VCCCCY1HH181J	J	180p	50V	Ceramic	AA
C1411	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C1412	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C1413	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C1415	VCEA0A1CW476M	J	47	16V	EL.	AB
C1416	VCKYCY1CB104K	J	0.1	16V	Ceramic	AB
C1417	VCCCCY1HH390J	J	39p	50V	Ceramic	AA
C1418	VCEA0A1HW106M	J	10	50V	EL.	AB
C1419	VCEA0A1HW106M	J	10	50V	EL.	AB
C1420	VCKYCY1HB103K	J	0.01	50V	Ceramic	AA
C1421	VCCCCY1HH120J	J	12p	50V	Ceramic	AA
C1423	VCCCCY1HH120J	J	12p	50V	Ceramic	AA
C1424	VCKYCY1CB104K	J	0.1	16V	Ceramic	AB
C1425	VCKYCY1CB104K	J	0.1	16V	Ceramic	AB
C1426	VCKYCY1HB102K	J	1000p	50V	Ceramic	AA
C1427	VCE9GA1CW106M	J	10	16V	EL. (N.P)	AB
C1428	VCCCCY1HH270J	J	27p	50V	Ceramic	AA
C1451	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C1452	VCEA0A1CW106M	J	10	16V	EL.	AB
C1453	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C1454	VCKYCY1HB103K	J	0.01	50V	Ceramic	AA
C1455	VCE9GA1CW106M	J	10	16V	EL. (N.P)	AB

Ref. No.	Part No.	★	Description	Code

RESISTORS

[M-Ox.··· Metal Oxide]

R1401	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
R1402	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
R1403	VRS-CY1JF182J	J	1.8k	1/16W	M-Ox.	AA
R1404	VRS-CY1JF102J	J	1k	1/16W	M-Ox.	AA
R1405	VRS-CY1JF392J	J	3.9k	1/16W	M-Ox.	AA
R1406	VRS-CY1JF102J	J	1k	1/16W	M-Ox.	AA
R1407	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
R1408	VRS-CY1JF821J	J	820	1/16W	M-Ox.	AA
R1409	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R1410	VRS-CY1JF681J	J	680	1/16W	M-Ox.	AA
R1411	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R1412	VRS-CY1JF821J	J	820	1/16W	M-Ox.	AA
R1413	VRS-CY1JF471J	J	470	1/16W	M-Ox.	AA
R1414	VRS-CY1JF102J	J	1k	1/16W	M-Ox.	AA
R1415	VRS-CY1JF821J	J	820	1/16W	M-Ox.	AA
R1416	VRS-CY1JF122J	J	1.2k	1/16W	M-Ox.	AA
R1417	VRS-CY1JF273J	J	27k	1/16W	M-Ox.	AA
R1418	VRS-CY1JF153J	J	15k	1/16W	M-Ox.	AA
R1419	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R1420	VRS-CY1JF222J	J	2.2k	1/16W	M-Ox.	AA
R1421	VRS-CY1JF562J	J	5.6k	1/16W	M-Ox.	AA
R1422	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R1425	VRS-CY1JF471J	J	470	1/16W	M-Ox.	AA
R1451	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R1452	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R1453	VRS-CY1JF682J	J	6.8k	1/16W	M-Ox.	AA
R1454	VRS-CY1JF102J	J	1k	1/16W	M-Ox.	AA
R1455	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA

MISCELLANEOUS PARTS

P1401	QPLGN0585CEZZ	J	Plug, 5-pin (KA)	AA
P1402	QPLGN0585CEZZ	J	Plug, 5-pin (KB)	AA
P1451	QPLGN0661CEZZ	J	Plug, 6-pin (KC)	AA

PWB-H: DUNTK9310WEK0 (25N-M100/180, CN25M10)
PWB-H: DUNTK9310WEK1 (25N-S100/180, CN25S18/20)
FRONT AV UNIT

MISCELLANEOUS PARTS

J1001	QJAKE0053GEZZ	J	Jack, Video in	AD
J1002	QJAKE0055GEZZ	J	Jack, Audio in (L) (25N-S100/180, CN25S18/20)	AD
J1003	QJAKE0055GEZZ	J	Jack, Audio in (25N-M100/180, CN25M10)	AD
J1003	QJAKE0059GEZZ	J	Jack, Audio in (R) (25N-S100/180, CN25S18/20)	AC
P1001	QPLGN0541CEZZ	J	Plug, 5-pin (HA)	AB

MISCELLANEOUS PARTS

Ref. No.	Part No.	★	Description	Code
⚠ ACC701	QACCD3070CESA	M	AC Cord (25N-M100/180, CN25M10)	AH
⚠ ACC701	QACCD3065CESA	M	AC Cord (25N-S100/180, CN25S18/20)	AG
	QCNW-0133MEZZ	M	Connecting Cord (25N-M100/180, CN25M10)	AC
	QCNW-0135MEZZ	M	Connecting Cord (25N-M100/180, CN25M10)	AF
	QCNW-0130MEZZ	M	Connecting Cord (25N-S100/180, CN25S18/20)	AF
	QCNW-0134MEZZ	M	Connecting Cord (25N-S100/180, CN25S18/20)	AE
	QCNW-0166MEZZ	M	Connecting Cord	AD
	QCNW-0167MEZZ	M	Connecting Cord	AC
SP1	VSP0080PBL4YS or VSP0080PBK9YA	M	Speaker, 32 ohm	AG
SP2	VSP0080PBL4YS or VSP0080PBK9YA	M	Speaker, 32 ohm (25N-S100/180, CN25S18/20)	AG

SUPPLIED ACCESORRIES

	TiNS-6928MEN1	M	Operation Manual (25N-M100)	AD
	TiNS-6929MEZZ	M	Operation Manual (25N-M180)	AD
	TiNS-6930MEZZ	M	Operation Manual (25N-S100/180)	AD
	TiNS-6934MEZZ	M	Operation Manual (CN25M10)	AD
	TiNS-6935MEN1	M	Operation Manual (CN25S18/20)	AD
	RRMCG1324CESA	M	Infrared R/C Unit (25N-M100, CN25M10)	AQ
	RRMCG1395CESA	M	Infrared R/C Unit (25N-M180, 25N-S100/180, CN25S18/20)	AW

PACKING PARTS
(NOT REPLACEMENT ITEM)

SPAKC0654MEZZ	–	Packing Case (25N-M100/180)	—
SPAKC0656MEZZ	–	Packing Case (25N-S100/180)	—
SPAKC0660MEZZ	–	Packing Case (CN25M10)	—
SPAKC0661MEZZ	–	Packing Case (CN25S18/20)	—
SPAKX0162MEZZ	–	Buffer Material (25N-M100/180, CN25M10)	—
SPAKX0170MEZZ	–	Buffer Material (25N-S100/180, CN25S18/20)	—
SSAKA0004MEZZ	–	Polyethylene Bag	—
SPAKP0032MEZZ	–	Polyethylene Sheet	—

CABINET PARTS

25N-M100/180, CN25M10

Ref. No.	Part No.	★	Description	Code
1	CCABA1321MES0	M	Front Cabinet Ass'y (25N-M100, CN25M10)	BE
1	CCABA1322MES0	M	Front Cabinet Ass'y (25N-M180)	BE
1-1	*Not Available*	–	Front Cabinet	—
1-2	HBDGB1008MESA	M	Badge, "SHARP"	AA
1-3	JBTN-1086MEKA	M	Button, Power, Vol-up/down	AD
1-4	JBTN-1087MEKA	M	Button, CH-up/down	AD
1-5	GCOVA1028MEKA	M	Cover for R/C	AD
2	GCABB1145MEKA	M	Rear Cabinet	AZ

25N-S100/180, CN25S18/20

Ref. No.	Part No.	★	Description	Code
1	CCABA1323MES0	M	Front Cabinet Ass'y	BE
1-1	*Not Available*	–	Front Cabinet	—
1-2	HBDGB3009MESA	M	Badge, "SHARP"	AC
1-3	JBTN-1103MEKA	M	Button, Power, Vol-up/down	AE
1-4	JBTN-1104MEKA	M	Button, CH-up/down	AE
1-5	GCOVA1038MEKA	M	Cover for R/C	AC
2	GCABB1155MEKA	M	Rear Cabinet (25N-S100)	AZ
2	GCABB1156MEKA	M	Rear Cabinet (25N-S180, CN25S20)	AZ
2	GCABB1147MEKA	M	Rear Cabinet (CN25S18)	AZ

CABINET PARTS LOCATION

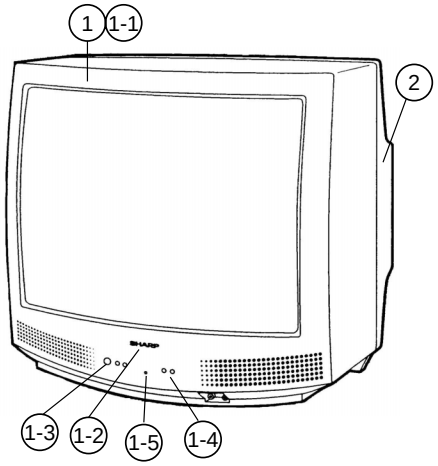

25N-M100/180
CN25M10

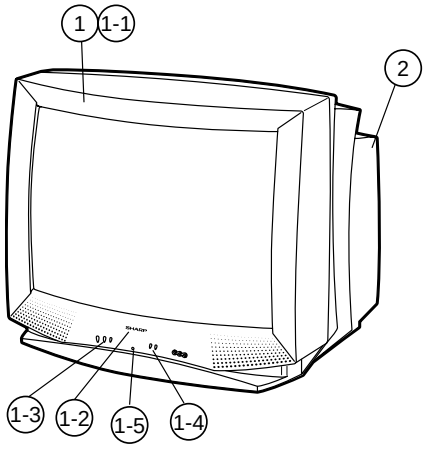

25N-S100/180
CN25S18/20

PACKING OF THE SET

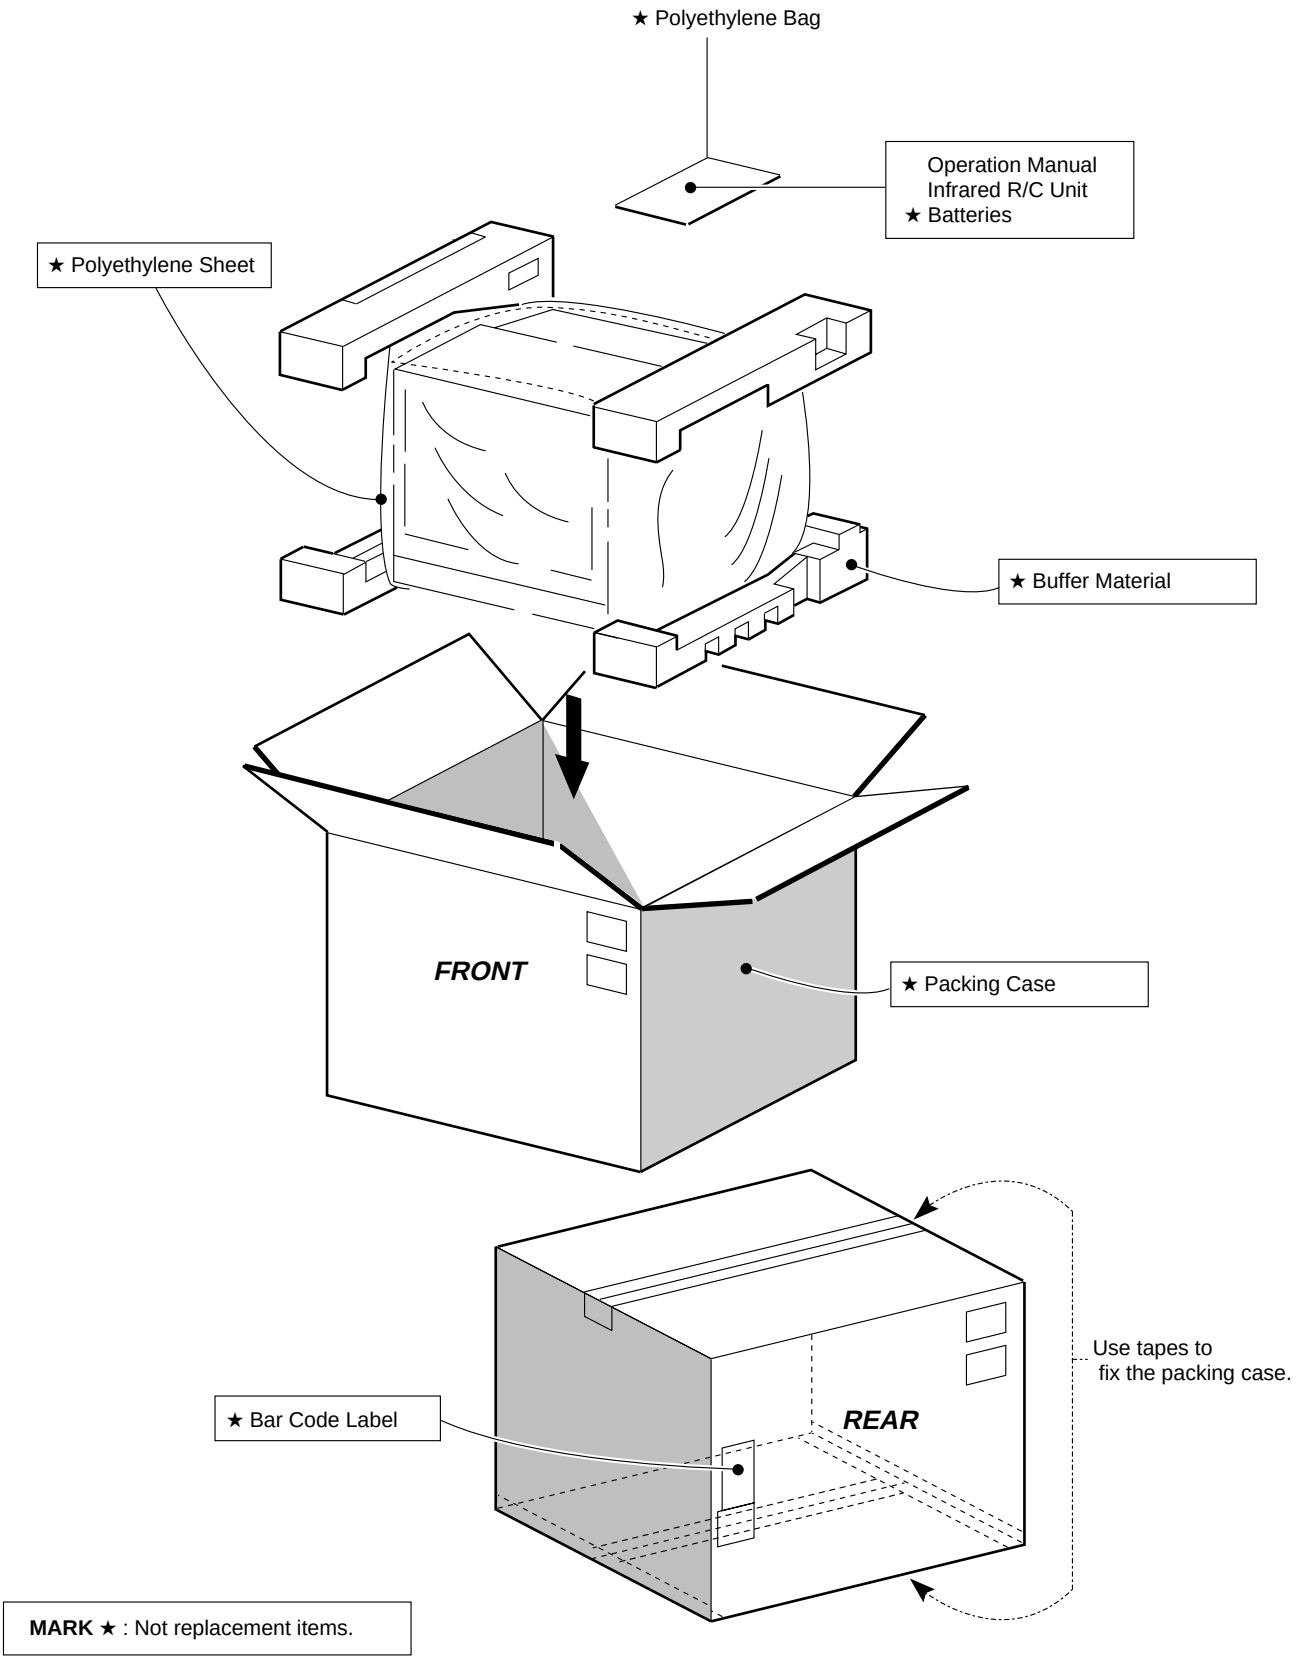

MARK ★ : Not replacement items.